

**SOUNDLOGIC<sup>XT</sup>**  
**TOUCH-SP LED**  
**Touch Controlled**  
**Bluetooth Speaker**



# SOUNDLOGIC XT TOUCH-SP LED Touch Controlled Bluetooth Speaker Instruction Manual

[Home](#) » [SOUNDLOGIC XT](#) » SOUNDLOGIC XT TOUCH-SP LED Touch Controlled Bluetooth Speaker Instruction Manual 

## Contents

- 1 SOUND LOGIC XT TOUCH-SP LED Touch-Controlled Bluetooth Speaker
- 2 Getting Started
- 3 Package Contents
- 4 Key Features
- 5 SAFETY INSTRUCTIONS
- 6 Description of Parts
- 7 INSTRUCTIONS FOR USE
- 8 Specification
- 9 Troubleshooting
- 10 Care and Maintenance
- 11 FCC STATEMENT
- 12 Documents / Resources
  - 12.1 References

**SOUNDLOGIC<sup>XT</sup>**

**SOUND LOGIC XT TOUCH-SP LED Touch-Controlled Bluetooth Speaker**



PLEASE READ ALL INSTRUCTIONS CAREFULLY AND RETAIN FOR FUTURE USE.

## Getting Started

- Remove the device from the box.
- Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.

## Package Contents

- LED Touch Bluetooth Speaker
- USB Charging Cable
- 3.5mm Auxiliary Cable
- Instruction Manual

## Key Features

- LED Touch-Controlled Bluetooth Speaker
- Wireless connection through Bluetooth devices and LED lights make it easy to spot at night.
- Multi-colored LED lights
- Built-in 5W speaker output

- Long-lasting rechargeable battery
- Built-in Mic for hands-free calls
- Multi-function: Bluetooth, USB slot, Micro SD (TF) card slot, Aux jack
- White USB charging cable, white Aux cable included

## SAFETY INSTRUCTIONS

- Read all instructions before using this product
- Do not leave this product unattended while connected to the power supply.
- Do not immerse in water or any other liquids.
- Do not use the unit if it has been dropped or damaged in any way.
- Repairs to electrical equipment should only be performed by qualified personnel.
- Improper repairs may place the user at serious risk.
- Place the unit on a sound, even surface, free of vibrations and away from sources of heat.
- Do not sit with wet hands.
- Do not put objects into openings.
- Keep the unit free from dust, lint, hair, etc.
- Do not use this unit for anything other than its intended use.
- Keep the unit out of reach of children.
- This product is not a toy.
- Do not play music at excessive levels, especially near children, as hearing damage may occur.

## Description of Parts



Item	Function	Operation
1	LED indicator	Blue light blinks on Bluetooth pairing mode, and stays on when Bluetooth is paired successfully.
2	Power / LED light button	To turn ON/OFF the speaker/To adjust the warm white LED light brightness, or change different color light mode .
3	PREV / Volume decrease (–)	A short press will skip backward to the previous track and a long press will decrease the volume.
4	▶  / Phone button	Play/pause button – A short press will pause or restart the music. Phone button – Answer / reject / end call / redial last number. For Hands-Free Conversation
5	NEXT / Volume increase (+)	A short press will skip forward to the next track, and a long press will increase the volume level.
6	Mode button	Switching mode of operation
7	Built-in Mic	For Hands-Free Conversation
8	LED charge indicator	The red light stays on during charging and turns off when the speaker is fully charged.
9	DC charging port	DC Charging Port – To charge the speaker
10	USB slot	USB input (Flash Drive)
11	Aux-in jack	To play music through auxiliary cable.
12	Micro SD (TF) slot	Micro SD (TF) card input

## INSTRUCTIONS FOR USE

### Charging the speaker

For best results, fully charge the speaker before its first use.

1. Connect the USB charging cord (included) to the DC 5V charging port of the speaker and insert the other end into a port on your computer or similar power source.
2. Red LED glows indicating that the battery is being charged. Once it is fully charged, the Red LED will turn off. It will take around 2-3 hours to fully charge the battery.

### Turn On/Off the Speaker with an LED Lantern

Press and hold the “Power” button for 1-2 seconds until you hear the indication tone. Blue LED indicator light will blink, your speaker is now ON and is entering “pairing” mode. Press and hold the “Power” button for 1-2 seconds to turn off the speaker.

## Turn the speaker to Bluetooth pairing mode –

1. Press and hold the “Power” button for 1-2 seconds until you hear the indication tone.
2. The blue LED indicator light will blink, your speaker is now ON and is entering “pairing” mode.

(**Note:** Speaker automatically pairs with the previously paired devices)

## Pairing your device with Bluetooth Speaker –

Your Bluetooth Speaker can wirelessly stream audio from any Bluetooth-enabled device within a distance of 27-33 Feet. Simply follow the below steps.

1. Press and hold the “Power” button for 1-2 seconds until you hear the indication tone.
2. The blue LED indicator light will blink, your speaker is now ON and is entering “pairing” mode.
3. Turn on the Bluetooth on your Mobile Phone Tablet or Computer.
4. It will search for various devices.
5. The pairing name of our Bluetooth Speaker is “Sound Touch”, pair it with this device.
6. You might be prompted with a “Pair with Sound Touch?” message on your source device, with “Cancel” and “OK” options. Please click “OK”.
7. If required, enter the password ‘0000’ to confirm the finalized pairing.
8. Once paired successfully, you will hear an indication tone and the blue LED indicator light will stay on.
9. If you fail to pair it within the time frame or you want to pair it with a new device please the steps outlined above.
10. Select your favorite song on your Bluetooth device and the music should then stream through the Bluetooth speaker.



## Talking using the Bluetooth Speaker

Please ensure that your mobile phone is paired with the Bluetooth Speaker to use the below functions.

Function	Operation	Button
Answer Incoming Call	Incoming Call	Short press the Phone button to answer an incoming call.
End Call	Incoming Call	After your phone conversation, short-press the Phone button
Volume Increase	During a call	A long press on the + button will increase the volume
Volume Decrease	During a call	A long press on the – button will decrease the volume
Redial last number	Standby mode and connected to a device	Short press the Phone button twice



### Listening to Music Wirelessly

Please ensure that your device (iPhone, Tablet o, or Other Smart Phone) is paired with the Bluetooth Speaker to stream music wirelessly. Once it is paired, play music from your device.

Function	Operation	Button
Increase / Decrease Volume	Playing music	Long press + to increase the volume or long press – to decrease the volume
Pause	Playing music	Press  once to pause the music
Play	Pause	Press  once to resume the music
Skip Forward / Skip Backward	Playing music	Short press + to skip forward the track. Short press – to skip backward the track.

**(Note:** An indication tone will alert you when the volume is adjusted to the maximum level.)

Listening to Music using Ua SB / Micro SD (TF) Card Slot –

- Turn ON the device.
- Insert the USB flash drive into the USB slot or a Micro SD (TF) card into the Micro SD.
- (TF) card slot accordingly, music would play automatically.
- To Skip Track Forward – Short press the + button.
- To Skip Track Backwards – Short press the – button.
- To Pause the Track – Short press the  button.
- To Play the Track – Short press the  button.
- Long press + to increase the volume or – to decrease the volume.

**(Note:** When you insert a USB flash drive into the USB slot or a Micro SD (TF) card into the

- Micro SD (TF) card slot of the speaker accordingly, the Bluetooth of the speaker will turn off, automatically.)

### Play music using “Aux-In” Jack

1. Turn ON the device.
2. Insert the 3.5 mm Aux-in cable (included) in the Aux-in jack of the speaker. And, the other end of the cable, to the audio device (such as a computer/tablet, etc.).
3. The Blue LED indicator light will flash.
4. Select your favorite song at the source device.

**(Note:** When you insert a 3.5 mm Aux-in cable into the Aux-in jack of the speaker, the Bluetooth or stream music from the USB / Micro SD (TF) card of the speaker will turn off, automatically. Functions except for Volume Increase or Volume Decrease can be only controlled through source devices while playing music in Auxiliary mode. An indication tone will alert you when the volume is adjusted to the maximum level.)

### Tips!!

1. Short press the Mode button each time to switch different functions of the speaker. The modes appear in the

following sequence Bluetooth / USB-Micro SD (TF) / AUX-In.

2. When the unit is not in use, turn Off the device to save the battery power.

### **Warm White LED light Mode (LEDs are not replaceable)**

1. Turn ON the device, the Warm White LED light is in low light mode.
2. Short press the LED light button each time or tap the top of the speaker once to change the brightness. The light level of brightness includes low -> medium -> high -> Off.

### **Color Changing LED light Mode (LEDs are not replaceable)**

1. Turn ON the device.
2. Tap and hold the top of the speaker for about 2 seconds to switch the LED light from Warm White LED light mode to Color Changing LED light mode.
3. When in Color Changing LED Light mode, short press the LED light button each time or tap the top of the speaker once to change the LED Light color. The light modes include: Blue -> Green -> Red -> Cyan -> Purple -> Turquoise -> Color Changing -> Dynamic -> Off. Dynamic mode moves through the LED light colors while playing music beats.
4. While it is on any color light mode, tap and hold the top of the speaker for about 2 seconds to change back to Warm White LED light mode.

### **Do's and Don'ts**

- Do not play music at excessive levels. Damage to hearing and/or equipment may result.
- Do not use outdoors in excessive rain or extreme weather conditions.

### **Specification**

- Bluetooth version: 5.0
- Speaker power 5 Watts
- Unit Size: 3.73"x3.73"x7.26"
- Unit Weight 17.5 oz
- Run time (Music with LED light): Up to 1.5 hours
- Run time (LED light only): 7 to 8 hours
- Charge Voltage DC5 (USB)
- Bluetooth Range : 33 feet
- In Rechargeable Battery : 3.7V 1200mAh
- (Note: Battery life & charging time may vary based on individual handling & other environmental conditions)

### **Troubleshooting**

Problem	Possible Cause	Solution
<b>Low sound level</b>	Source (Tablet, Mobile Phone, Laptop, etc.) volume is too low. Battery dead	Adjust source volume.  Charge Battery.
<b>Sound distorted</b>	Battery nearly dead	Charge Battery.
<b>No sound at all.</b>	Source (Tablet, Mobile Phone, Laptop.) turned off.  The speaker turned off.  Volume turned down the source. The media paused on the source.	Turn the source on.  Turn the speaker on.  Adjust volume source. Play media from source.

## Care and Maintenance

Clean the unit with a soft, damp cloth. Never use chemicals or hard abrasives. Store in cool dry conditions away from wet or damp areas.

## FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, under part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used by the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Imported by Osiris Inc. L6T 4M6

Osiris America Inc. 14020

## Documents / Resources



	<p><a href="#">SOUNDLOGIC XT TOUCH-SP LED Touch Controlled Bluetooth Speaker</a> [pdf] Instruction Manual</p> <p>TOUCH-SP, TOUCH-SP LED Touch Controlled Bluetooth Speaker, LED Touch Controlled Bluetooth Speaker, Touch Controlled Bluetooth Speaker, Controlled Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.