



How to reset SoundPEATS H2? User Manual

[Home](#) » [SoundPEATS](#) » How to reset SoundPEATS H2? User Manual 

Contents

- [1 How to reset SoundPEATS H2](#)
- [2 BLUETOOTH](#)
- [3 SOUND](#)
- [4 CHARGING](#)
- [5 TOUCH CONTROL](#)
- [6 CUSTOMER SERVICE TEAM](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)



How to reset SoundPEATS H2



BLUETOOTH

• How to reset SoundPEATS H2?

- Put both earbuds into the charging case. Make sure they are in charging status.
- Then long press the MFB of both earbuds for 10 seconds at the same time until the LED indicator in both earbuds flash white and red twice.
- If the resetting completed successfully, when you take the earbuds out of the charging case, one earbud will flash red and white lights, and the other has solid white light.

• Why is the Bluetooth connection unstable sometimes?

- Though Bluetooth is also a kind of wireless signal transmission, it's not as strong as WiFi. It compromises by a lot of interference around, such as the compatibility between the connected devices, some other wireless signal around, WiFi frequency, and the barriers between (walls, doors, etc.). Bluetooth range is normally around 30 feet in open space. The actual performance replies on the environment.
- Please charge the earbuds. Low battery may cause the disconnection.
- Please clear the pairing record and restart your device.

• What can I do if the earbuds stopped connecting to my device?

- Clear the pairing record between the earbuds and all of the previous devices.
- Try to clear some Bluetooth listings on your device and restart the device.
- Put the earbuds into the charging case to reset.
- Take the earbuds out of the charging case and leave some time for them to pair with each other. Then please open the Bluetooth of your device to connect.

• What can I do if the left earbud and the right earbud won't work together?

- Please use a bit of light sandpaper or microfiber cloth with a bit of rubbing alcohol to clean the charging connectors to ensure the earbuds charge well.
- Put them into the charging case to reset.

- **What can I do if the earbuds connect to my phone, but not my computer?**

- UNPAIR the earbud from the phone, then the earbuds will lose Bluetooth connection to the phone and enter into pairing mode.
- Put the earbuds into the charging case to reset.
- Take them out of the case, then open the Bluetooth of your computer to connect.
- If those do not help, you may need to update your computer's Bluetooth driver, which does not require a special driver itself and there is no driver for it. Bluetooth drivers must come from the specific manufacturer for your exact computer model. Download and install the appropriate Bluetooth driver from the computer vendor's website, then restart your system before attempting to pair and connect to your SoundPEATS earbuds.

- **How to operate when first use?**

Open the charging case lid and take out both earbuds, then remove the insulating film and put them back.

- When the charging case has power, open the lid of the charging case, the earbuds will turn on and enter the pairing mode. For the main earbud, the red and white lights will flash alternately; for the secondary earbud, the white light will keep on.
- Activate the Bluetooth on your device and choose "SOUNDPEATS H2" to connect.

SOUND

- **Why does the volume of the earbuds reduce after using a period of time?**

It may be caused by the sound hole being blocked by foreign objects. Please try to remove the silicone ear piece and gently clean off the screen with a little alcohol to avoid dust or secretions blocking.

- **What can I do if one earbud is quieter than the other?**

- Please try to remove the silicone ear piece and gently clean off the screen with a little alcohol to avoid dust or secretions blocking.
- Please change other songs or videos. For some songs and videos, the sound effect is unstable.
- Please change other devices. You can try this way:
 - UNPAIR and delete from your original device
 - Pair to a new device and play music
 - UNPAIR and delete from this new device
 - Pair back with original device
- Try to reset the earbuds.

- **Why the other side could not hear me when calling?**

- Please choose to pick up phone calls via the earbuds.
- Please do not mute the phone calls.
- Please clean the Mic holes to avoid dust or secretions blocking.
- Please kindly adjust the volume through the earbuds and devices.
- If you are using the earbuds with an Android phone, please check the settings to see if you have allowed both phone audio and media audio to be transmitted through the earbuds.
- Please change to some other devices to see if the condition is the same.

CHARGING

- **What should I do if the charging case won't charge?**

Please try to use another known working cable to charge the case for more than 10 hours via a laptop or computer. Compared to other electronics, the Bluetooth earbuds are low power products. Hence, for charging safety, please do not use fast charger.

- **What can I do if any earbud stopped charging?**

Please use a bit of light sandpaper or microfiber cloth with a bit of rubbing alcohol to clean the charging connectors and try to adjust the earbuds in the charging case to ensure they charge well.

- **What can I do if any earbud stopped turning on?**

- Please check if it charges well first.
- Please press and hold the MFB for 1.5s to turn on manually.
- Please try to reset the earbuds.

- **Why are the earbuds still connected to my phone after placing them back and closing the case lid?**

- The charging case has no remaining power. Placing the earbuds back into the charging case can't make themselves turn off if the case battery is dead.
- Please make sure the earbuds are correctly placed in the charging case, and make sure the charging metal sheet and the PIN are clean. Please try to clean the connectors between the charging case and the earbud with something like microfiber cloth.

TOUCH CONTROL

- **What can I do if the touch controls do not work always?**

Please touch the middle of the control area, and keep your hands dry, the earbuds may not respond on wet fingers. Please try to skip songs for more times to find your ideal frequency to control the earbuds. Another way for you to have a try: discharge the earbuds, then charge and reset.

CUSTOMER SERVICE TEAM

- **What should I do if the problem about the earbuds is not mentioned in this FAQ?**

If there is no solution for your problem in this FAQ, please feel free to contact our support team through your order or our contact in the manual, we will surely help you out soon. SoundPEATS provides 12-month warranty for every product. Your satisfaction is always greatly important to us.

Documents / Resources

<div><div>FAQ</div><div><div>Bluetooth</div><div>Reset</div><div>Connect</div><div>Touch Control</div><div>Customer Service Team</div></div></div>	<p>SOUNDPEATS How to reset SoundPEATS H2? [pdf] User Manual</p> <p>How to reset SoundPEATS H2, Why is the Bluetooth connection unstable sometimes, What can I do if the earbuds stopped connecting to my device, What can I do if the left earbud and the right earbud won't work together, What can I do if the earbuds connect to my phone, but not my computer</p>
--	---