

# SOUNDSTREAM SR1-3500D/5000D/7500D 1 Channel Amplifier **Owner's Manual**

Home » SoundStream » SOUNDSTREAM SR1-3500D/5000D/7500D 1 Channel Amplifier Owner's Manual



#### **Contents**

- 1 SOUNDSTREAM SR1-3500D/5000D/7500D 1 Channel
- **Amplifier**
- 2 Features & Functions:
- 3 Power Connection:
- **4 Input Connection:**
- 5 Connect two Subwoofer Systems:
- 6 Connect one Subwoofer System:
- **7 TROUBLE SHOOTING**
- 8 Documents / Resources
- 9 Related Posts

# **SOUND**STREAM


SOUNDSTREAM SR1-3500D/5000D/7500D 1 Channel Amplifier



# **Features & Functions:**

## **Bass Boost Frequency**


Adjustment of the crossover frequency, by rotating the knob to switch frequency 30Hz or 80Hz.

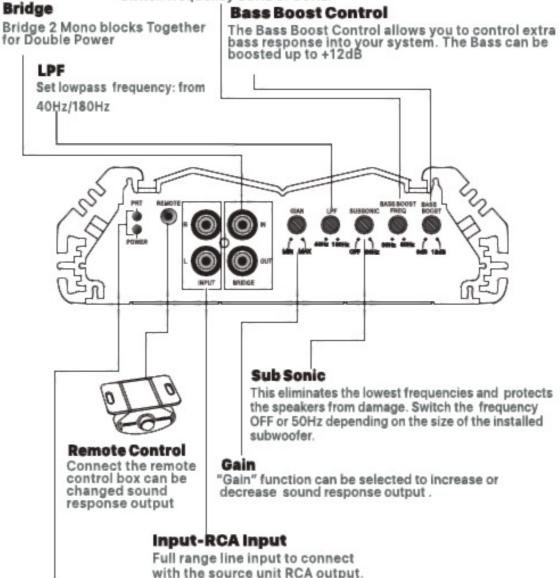

#### LED - Protection / Power

When the unit is protection, the protection LED will light up.

If remote power signal, the Power LED will light up indicating power condition are correct.

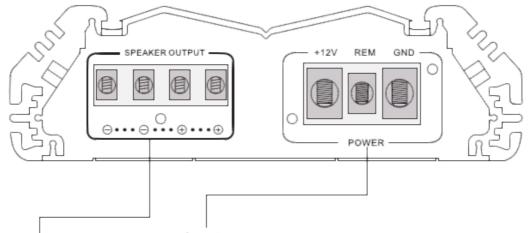

## **Power Terminals:**

**B+/+12V**. Connect the +12V pole of power supply directly to the battery(+) position.

**GND**. Connect the GND pole of power supply directly to the (-) negative ground battery terminal of car chassis.

**REM**. Connect the "Remote" pole to external switch for positive 12V ON/OFF. This may e connected to the power antenna of turn on lead of the headunit.

# **Speaker Terminals:**

The speaker terminals are Gold Plated for high conductivity and minimum impedance loss. Be sure to strip just enough insulation off your speaker wires that will fit under the screw plate to help ensure against speaker wire short circuits. The unit can support an impedance load as low as 1-80 hm load.

If you connect two loads, the unit can only support 2-8 ohm load, but do not connect 1 ohms load.

#### **Power Connection:**

For your convenience1 high current barrier strip terminals are provided which allow the use or heavy gauge terminals and wire without splicing.

B+/+12V. Connect the +12V pole of battery.

GND. Connect the chassis ground of auto.


REM. Connect to the remote turn-on lead of your headunit.

#### Note:

Improper wiring connections can seriously damage amplifiers, accessories, or speakers, please follow instructions carefully. Disconnect the battery positive (+) before making any power connections to the amplifier.

Make sure all connections are clean and secure, and use gromments when going through the firewall and other metal bodywork.


Always use the proper size fusing, with a fuse at the battery and the amplifier.(not supplied)

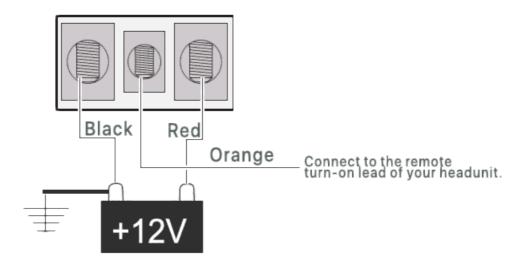

## **Input Connection:**


Connect the pre-amp( low-level) outputs from your source unit or crossover to the RCA jacks labeled "input" on the amplifier. Be sure to route all signal cable away from power lines and use high quality RCA cables to insure good signal transfer and to avoid noise from entering the system.

In the Mono mode, connect the left and right RCA plugs from the source unit to their appropriate input jacks. In the Bridged mode, Mono blocks together for Double Power

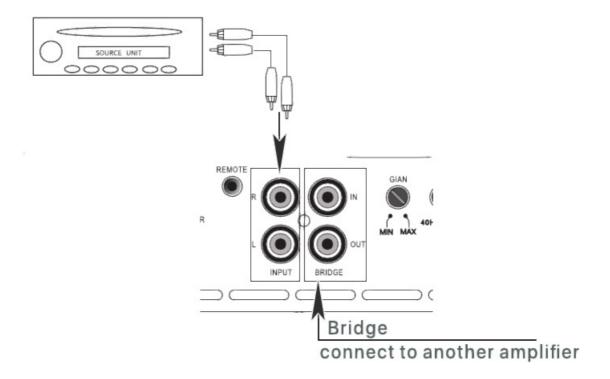


## **Connect two Subwoofer Systems:**

Connect the two pairs of output terminals to corresponding subwoofer speakers:

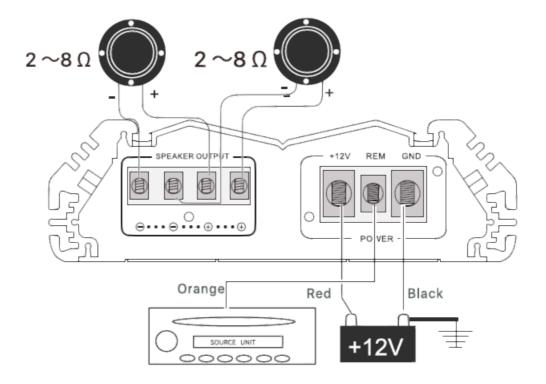


# **Connect one Subwoofer System:**

# Connect one subwoofer speaker:

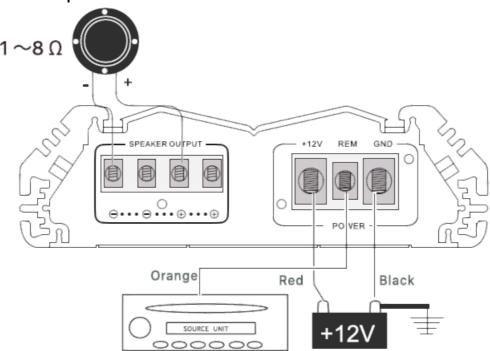

2nd speaker connection:

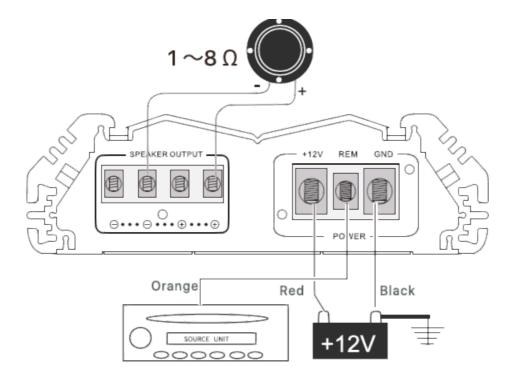

## **TROUBLE SHOOTING**

#### No Audio

- Low or no remote turn-on voltage: check remote connections at the amplifier and source unit.
- Blown amplifier fuse: replace with a new fast-blow fuse (same rating).
- Power wires not connected: check battery and ground wiring at the amplifier and check the battery connections.
- Speaker leads shorted: check speaker continuity to ground; it should not show a common ground.
- Speakers not connected or are blown: check speaker connections at the amplifier; measure coil impedance.

#### **Distorted audio**

- Gain is not properly set or the speaker cones are damaged.
- Review the instructions for setting the gain. Inspect each speaker cone for signs of damage, such as a frozen cone, burning smell, etc.



#### **Documents / Resources**



SOUNDSTREAM SR1-3500D/5000D/7500D 1 Channel Amplifier [pdf] Owner's Manual SR1-3500D, SR1-5000D, SR1-7500D, 1 Channel Amplifier

