




SOYAL AR-837-EL QR Code and RFID LCD Access Controller Instructions

[Home](#) » [SOYAL](#) » SOYAL AR-837-EL QR Code and RFID LCD Access Controller Instructions 

SOYAL[®] AR-837-EL QR Code and RFID LCD Access Controller Instruction Manual

Contents

- [1 Lightning Support:](#)
- [2 Scanner Sensor](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Lightning Support:

For low light installation, support lighting on dark surrounding

 <p>Step 1</p>	 <p>Step 1</p>
<p>R030200</p>	<p>R030200</p>
 <p>Step 2</p>	 <p>Step 2</p>
<p>R000C04</p>	<p>R000C00</p>
 <p>Step 3</p>	 <p>Step 3</p>
<p>R030202</p>	<p>R030202</p>

Scanner Sensor

Scanner light for enhancing sensor and for QRCode's access indicator



Step 1

R030200



Step 1

R030200



Step 2

R003010



Step 2

R003010



Step 3

R030202



Step 3

R030202



[SOYAL AR-837-EL QR Code and RFID LCD Access Controller](#) [pdf] Instructions
AR-837-EL, AR-888-UL, AR-837-EL QR Code and RFID LCD Access Controller, AR-837-EL, Q
R Code and RFID LCD Access Controller, RFID LCD Access Controller, LCD Access Controller,
Access Controller, Controller

[Manuals+](#)