

SPACE SAVER
**SSETU-18K Point
Of Use Electric
Tankless**



SPACE SAVER SSETU-18K Point Of Use Electric Tankless Owner's Manual

[Home](#) » [SPACE SAVER](#) » SPACE SAVER SSETU-18K Point Of Use Electric Tankless Owner's Manual 

Contents

- 1 SPACE SAVER SSETU-18K Point Of Use Electric Tankless
- 2 Product Specifications
- 3 Product Usage Instructions
- 4 EASY INSTALLATION
- 5 WIDE ARRAY OF MODELS AND MODES OF OPERATION
- 6 ONBOARD SELF-DIAGNOSTICS & TROUBLESHOOTING
- 7 HIGHLY EFFICIENT & RELIABLE THERMOSTATIC DESIGN
- 8 CONSTRUCTION
- 9 WARRANTY
- 10 PRODUCT SPECIFICATIONS
- 11 DIMENSIONS
- 12 INSTALLATION
- 13 ORIENTATION & CLEARANCE
- 14 FAQ
- 15 Documents / Resources
 - 15.1 References





Product Specifications

Model Number	Voltage (V)	Number of Elements	Total Input Wattage (kW)	Wattage per Element	Total Current Draw (Amps)	Recommended Canada Circuit Breaker Size (Amps)	Conductor Size (AWG)	Activation GPM
SSET U-18 K	120	2	1.75	0.88	14.58	20	14	0.17

Product Usage Instructions

Installation

Ensure the minimum clearances are maintained during installation:

- **Front Clearance:** 15+ inches (38.1+ cm)
- **Side View:** 12 inches (30.5 cm)

Orientation & Clearance

Properly orient the unit with hot and cold water connections as indicated:

EASY INSTALLATION

- Compact size perfect for point-of-use applications close to fixtures
- Mounts easily to the wall
- No venting required

- ½" NPT water connection
- No T&P valve required (check local codes)

WIDE ARRAY OF MODELS AND MODES OF OPERATION

- 1.75kW – 3.5kW, 120V 3.5kW – 11kW, 240V (208V)
- Single Phase, 50/60 Hz
- Two mode options, easy switching
- Lavatory mode, default 105°F; temp range 80°F – 149°F
- Emergency eye wash mode, 85°F

ONBOARD SELF-DIAGNOSTICS & TROUBLESHOOTING

- Onboard self-diagnostics to monitor performance and protect the unit
- Bright LED display for status updates and making system selections and adjustments
- Error codes for troubleshooting and faster resolution

HIGHLY EFFICIENT & RELIABLE THERMOSTATIC DESIGN

- On-demand water heater capable of supplying endless hot water when appropriately sized
- Ultra-low activation of 0.17 GPM min.
- Energy efficiency 0.91 UEF or higher
- Dry-fire protection to prevent premature element failures
- Secondary temperature regulation to limit hot water output appropriate for use with hand or eye washing applications
- Scale detection (Patent Pending) and easy maintenance for extended service life of the heater

CONSTRUCTION

- Housing – Bayblend® FR3010 plastic, dark gray
- Chamber Material – Entec Nylon, glass-filled
- Sheathed copper elements for longer life

WARRANTY

- 6-Year limited warranty on chambers
- 1-Year limited warranty on all parts
- For complete information, consult the written warranty

PRODUCT SPECIFICATIONS

PRODUCT SPECIFICATIONS								
Model Number	Voltage (V)	Number of Elements	Total Input Wattage (kW)	Wattage per Element	Total Current Draw (Amps)	Recommended Canada Circuit Breaker Size (Amps)	Conductor Size (AWG)	Activation GPM
SSETU-18K	120	2	1.75	0.88	14.58	20	14	0.17
SSETU-24K	120	2	2.40	1.20	20.00	25	12	0.17
SSETU-30K	120	2	3.00	1.50	25.00	35	10	0.17
SSETU-35K	120	2	3.50	1.75	29.17	40	10	0.17
SSETU-35E	240+	2	3.50	1.75	14.58	20	14	0.17
SSETU-45E	240+	2	4.50	2.25	18.75	25	12	0.17
SSETU-55E	240+	2	5.50	2.75	22.92	30	10	0.17
SSETU-70E	240+	4	7.00	1.75	29.17	40	10	0.17
SSETU-90E	240+	4	9.00	2.25	37.50	50	8	0.17
SSETU-110E	240+	4	11.00	2.75	45.83	60	8	0.17


Copper conductors only. All wiring/conductors must be rated for 90°C or greater. This model may be connected to a 208 VAC supply with reduced power output. Connection to 208 VAC may require different breaker and/or wire size than shown in the table.

NOTICE: Incoming line voltage variations may result in nuisance breaker trips. Contact Technical Support if there are multiple breaker trips when the recommended breaker size is in use. Cold water inlet temperatures raised to 105°F setpoint.


Volts	kW	GPM AT TEMPERATURE RISE												
		25°F	30°F	35°F	40°F	45°F	50°F 60°F	55°F		65°F	70°F	75°F	80°F	85°F
120V	1.75kW	0.47	0.39	0.33	0.29	0.26	0.23	0.21	0.20	0.18	0.17	—	—	—
	2.4kW	0.64	0.54	0.46	0.40	0.36	0.32	0.29	0.27	0.25	0.23	0.21	0.20	0.19
	3kW	0.80	0.67	0.57	0.50	0.45	0.40	0.36	0.33	0.31	0.29	0.27	0.25	0.24
	3.5kW	0.94	0.78	0.67	0.59	0.52	0.47	0.43	0.39	0.36	0.33	0.31	0.29	0.28
	3.5kW	0.94	0.78	0.67	0.59	0.52	0.47	0.43	0.39	0.36	0.33	0.31	0.29	0.28
	4.5kW	1.20	1.00	0.86	0.75	0.67	0.60	0.55	0.50	0.46	0.43	0.40	0.38	0.35
240V (208V)	5.5kW	1.47	1.23	1.05	0.92	0.82	0.74	0.67	0.61	0.57	0.53	0.49	0.46	0.43
	7kW	1.87	1.56	1.34	1.17	1.04	0.94	0.85	0.78	0.72	0.67	0.62	0.59	0.55
	9kW	2.41	2.01	1.72	1.50	1.34	1.20	1.09	1.00	0.93	0.86	0.80	0.75	0.71
	11kW	2.94	2.45	2.10	1.84	1.63	1.47	1.34	1.23	1.13	1.05	0.98	0.92	0.87

DIMENSIONS


Front View

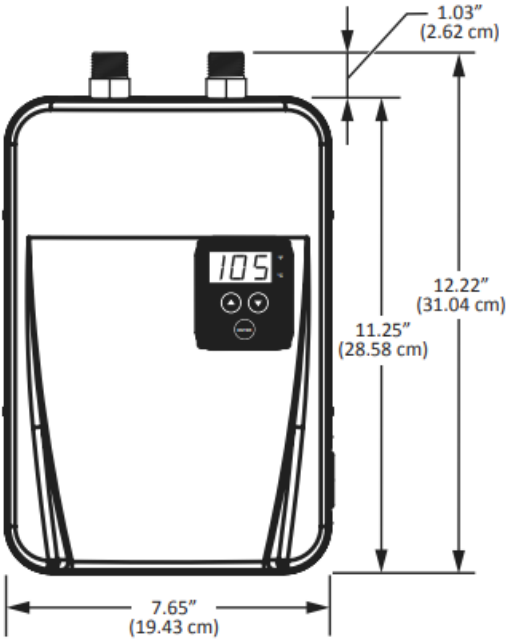

Side View

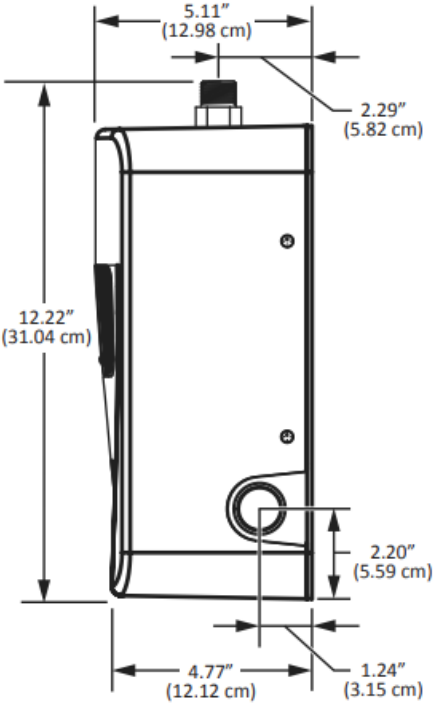


Top View

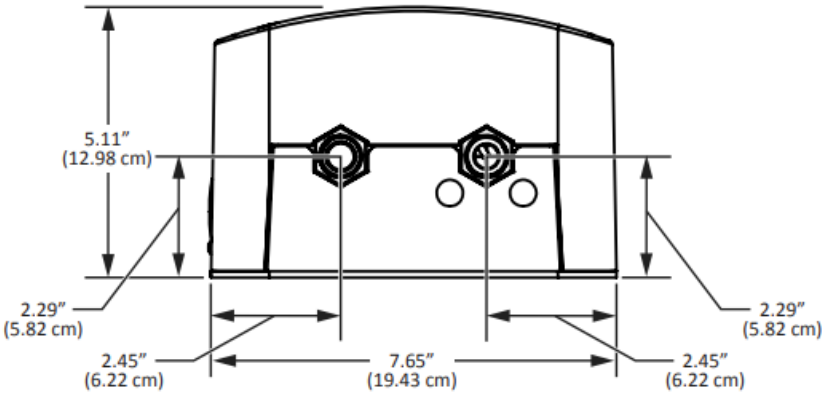


Volts	kW	GPM AT TEMPERA TURE RISE													
		25°F	30°F	35°F	40°F	45°F	50°F			55°F	65°F	70°F	75°F	80°F	85°F
							60°F								
120V	1.75k W	0.47	0.39	0.33	0.29	0.26	0.23	0.21	0.20	0.18	0.17	—	—	—	
	2.4kW	0.64	0.54	0.46	0.40	0.36	0.32	0.29	0.27	0.25	0.23	0.21	0.20	0.19	
	3kW	0.80	0.67	0.57	0.50	0.45	0.40	0.36	0.33	0.31	0.29	0.27	0.25	0.24	
	3.5kW	0.94	0.78	0.67	0.59	0.52	0.47	0.43	0.39	0.36	0.33	0.31	0.29	0.28	
	3.5kW	0.94	0.78	0.67	0.59	0.52	0.47	0.43	0.39	0.36	0.33	0.31	0.29	0.28	
	4.5kW	1.20	1.00	0.86	0.75	0.67	0.60	0.55	0.50	0.46	0.43	0.40	0.38	0.35	
240V (208V)	5.5kW	1.47	1.23	1.05	0.92	0.82	0.74	0.67	0.61	0.57	0.53	0.49	0.46	0.43	
	7kW	1.87	1.56	1.34	1.17	1.04	0.94	0.85	0.78	0.72	0.67	0.62	0.59	0.55	
	9kW	2.41	2.01	1.72	1.50	1.34	1.20	1.09	1.00	0.93	0.86	0.80	0.75	0.71	
	11kW	2.94	2.45	2.10	1.84	1.63	1.47	1.34	1.23	1.13	1.05	0.98	0.92	0.87	

INSTALLATION

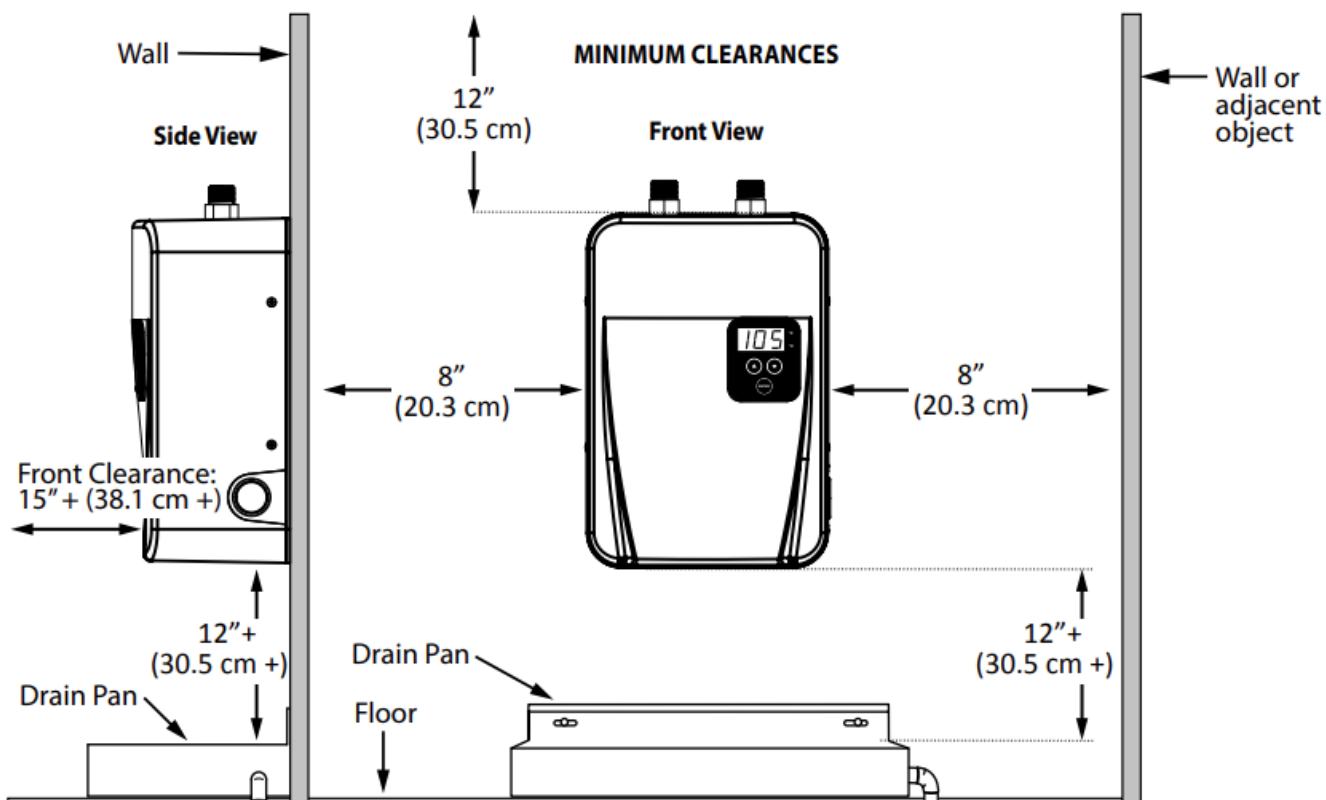

ORIENTATION & CLEARANCE

- All models must be oriented with the inlet and outlet facing upward.
- Top clearance – a minimum of 12 inches (30.5 cm) to provide access for plumbing connections.
- Side clearance – a minimum of 8 inches (20.3 cm) to remove the screws and protective cover and to provide access for electrical wires to enter through the side of the unit.
- Bottom clearance – a minimum of 12 inches (30.5 cm) for access to and maintenance of heating elements. Do not store any items beneath the water heater.
- Front clearance – a minimum of 8 inches (20.3 cm). In the absence of a door or removable access panel in front of the heater, allow a minimum of 15 inches (38.1 cm) for cover removal and ease of service.

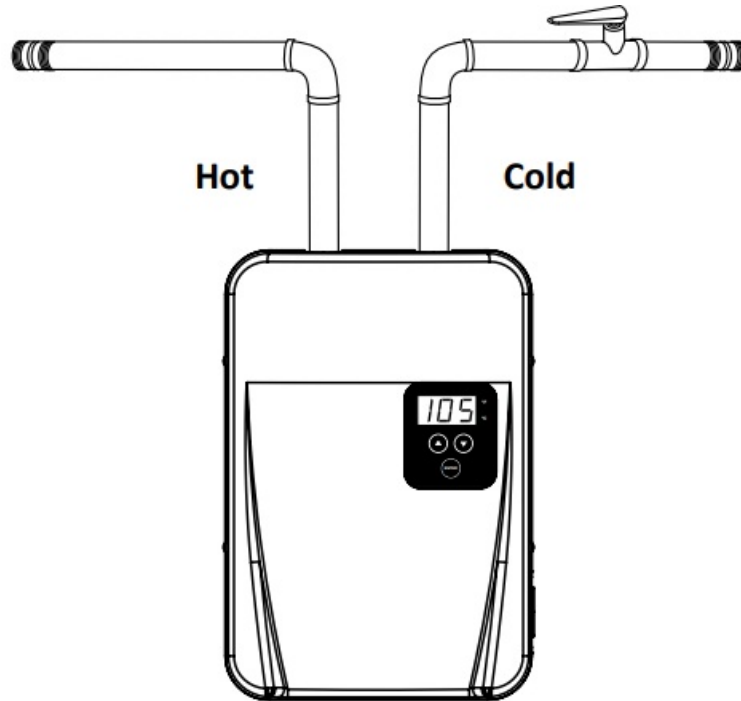

For Technical Information call 1-[888-599-2837](tel:888-599-2837). A. O. Smith Enterprises Ltd. reserves the right to make product changes or improvements without prior notice.

- 1-[888-599-2837](tel:888-599-2837) Toll-free Canada
- | A. O. Smith Enterprises Ltd. | 599 Hill Street West
- Fergus, ON N1M 2X1

©2024 A. O. Smith Enterprises Ltd.

FAQ

Q: What is the warranty on the product?

A: The product comes with a standard warranty. For detailed warranty information, please refer to the warranty documentation provided.

Documents / Resources



SPACESAVER SSETU-18K Point Of Use Electric Tankless [pdf] Owner's Manual

SSETU-18K, SSETU-24K, SSETU-30K, SSETU-35K, SSETU-35E, SSETU-45E, SSETU-55E, SSETU-70E, SSETU-90E, SSETU-110E, SSETU-18K Point Of Use Electric Tankless, SSETU-18K, Point Of Use Electric Tankless, Electric Tankless, Tankless

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.