



## SPARK FABRICA SF-05 Spark Jet Pro Machine User Manual

[Home](#) » [Spark Fabrica](#) » SPARK FABRICA SF-05 Spark Jet Pro Machine User Manual 

### SPARK FABRICA SF-05 Spark Jet Pro Machine User Manual



#### Contents

- [1 DISCLAIMER](#)
- [2 PREFACE](#)
- [3 PRODUCT INTRODUCTION](#)
- [4 SCREEN OPERATION GUIDE](#)
- [5 OPERATION NOTES](#)
- [6 MACHINE OPERATION](#)
- [7 MACHINE MAINTENANCE](#)
- [8 FAILURE HANDLING](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

#### DISCLAIMER

Please read the manual carefully before installing and using this product. Failure to read or comply with this manual may result in injury to products and personnel, and Spark Fabrica shall not be responsible for this.

This product is a professional machine, we do not assume any responsibility for accidents or losses caused by the use or maintenance of this product by personnel without professional training and permission.

If the information contained in the manual or the product specifications are changed, Spark Fabrica will not inform you further and responsible for any errors or omissions.

Our company reserves the right to modify the user manual at any time.

## PREFACE

\*This manual includes warning, caution and notice concerning the safe operation of equipment. These warning-caution and notice come with the following icons. Please read them carefully!



**WARNING** This warning indicates a dangerous situation that may result in death or serious injury if not avoided.



**CAUTION** This alert indicates a dangerous situation that may result in mild or moderate injury if not avoided.



**NOTICE** This means that you need to be careful.


## PRODUCT INTRODUCTION

This product belongs to special effects equipment, only for professional use.

This product belongs to the cold fireworks simulation special effects equipment, using CST technology, heating special metal powder, and sparking silver spark fountain which is safer than the traditional cold fireworks. It has three controllable variables: height, density and duration.

This product is widely used in weddings, concerts, sports events, event meetings and so on. Stimulate your interest and light up your activity.

## PRODUCT OVERVIEW

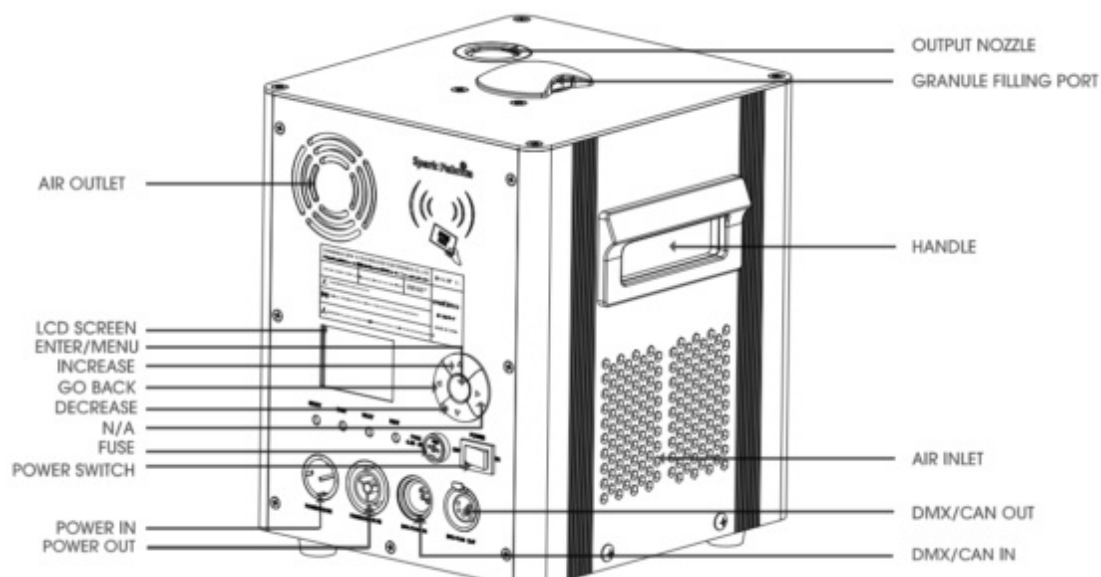

## PRODUCT ACCESSORIES

1.6 Meter Power Plug
3 Meters Power Pair Cable
3 Meters DMX Pair Cable
Upload Box (Optional)
User Manual
Mounting Screw (Two pieces of each set)

## NOTICE

Open the package carefully and check to make sure the goods are in good condition.

## SPARK FABRICA GRANULE

A special metal powder has the characteristics of high content, little residue, belonging to a special consumables with no smoke, odor and other harmful gas when sparking.



**WARNING** Only the consumables provided by Spark Fabrica shall not be liable for any damage to machines, personnel and property caused by the COs are allowed to be used. Spark Fabrica use of consumables not provided by the company.

## TECHNICAL PARAMETER


	Manufacturer	SPARK FABRICA

Identification	Nome	SPARK JET PRO
	Model	SF-05
AC Power	Input Voltage & Frequency	100-120V, 50 / 60HZ
		200-240V. 50 / 60HZ
	Current Limiter Specifications	6.3A100-120V / 6.3A.200-240V /
	Constant Current	5.5A.100-120V / 2.7A,200-240V
	Nominal Total Power Consumption	600W
	Power Input Connector	SEETRONIC
	Power Output Connector	SEETRONIC
	DMX Signal Interface	SPIN
Heating	Heat Up Time	<5 Minutes
Hopper	Powder Tank Capacity	150g
	Removable Hoppe	N/A


Technical Parameters	Lineary Adjustable Density	30-100%
	Adjustable Height	1.5-5m
	Height Level	1-10 Level
	Powder Consumption (100% Output)	20-25g/Minute
	Maximum Single Continuous Duration	30s
Control	Control Protocol	DMX-512
	RFID Proximity Card	√
	RDM	√
	CAN	√
	SMPTE	Touch Screen Console Support
	Power Plug	SEETRONIC (1.6Meter)
	Remote Controller	Optional
	DMX Cable	√ 3Meter

Accessory	Power Cable	√ 3Meter
	Safety Ring	×
	Safety Rope	×
	Bottom Mounting Screw	√
	Software Upgrade Box	Optional
	120ohms Terminal Resistance	Optional
Certification	CE	√
	ROHS	√
Weight	Net Weight	8kg
	Gross Weight	10kg
Dimensions	Machine Dimensions – L*W*H	215mm*213mm*257mm
	Pocking Dimensions – L*W*H	270mmt250mm*330mm
Granule	Granule	Spark Fabrica Granule

## BACK PANEL INTRODUCTION

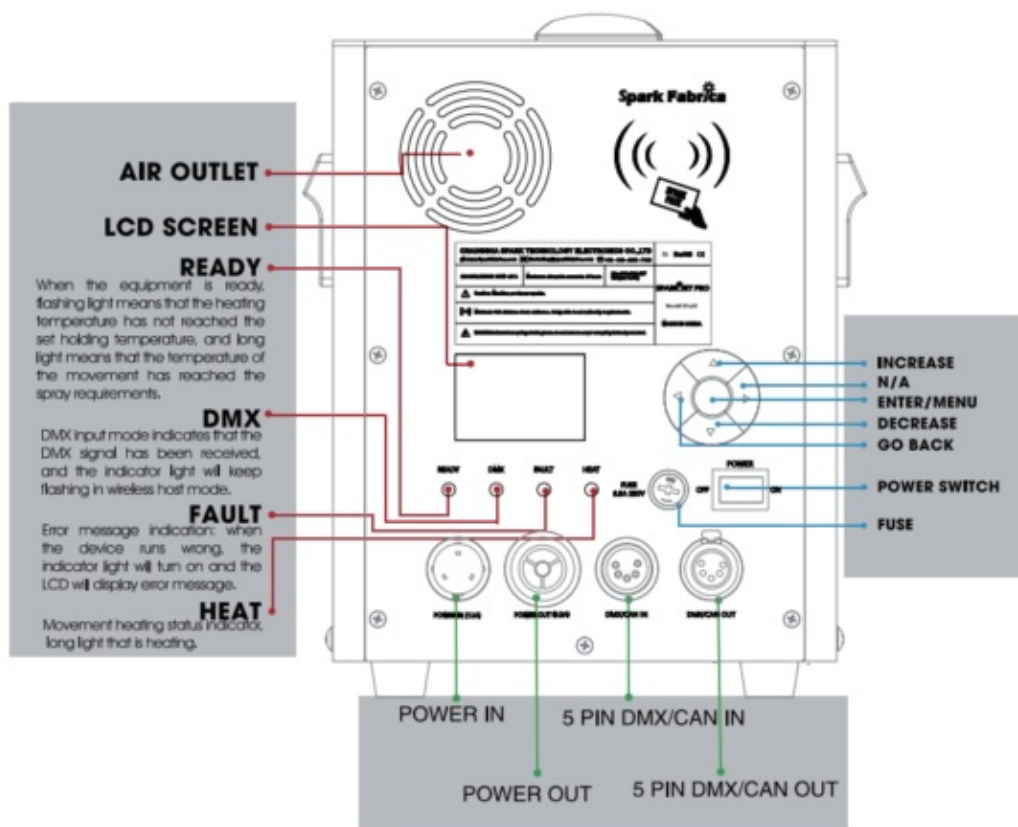

## MENU SETTING

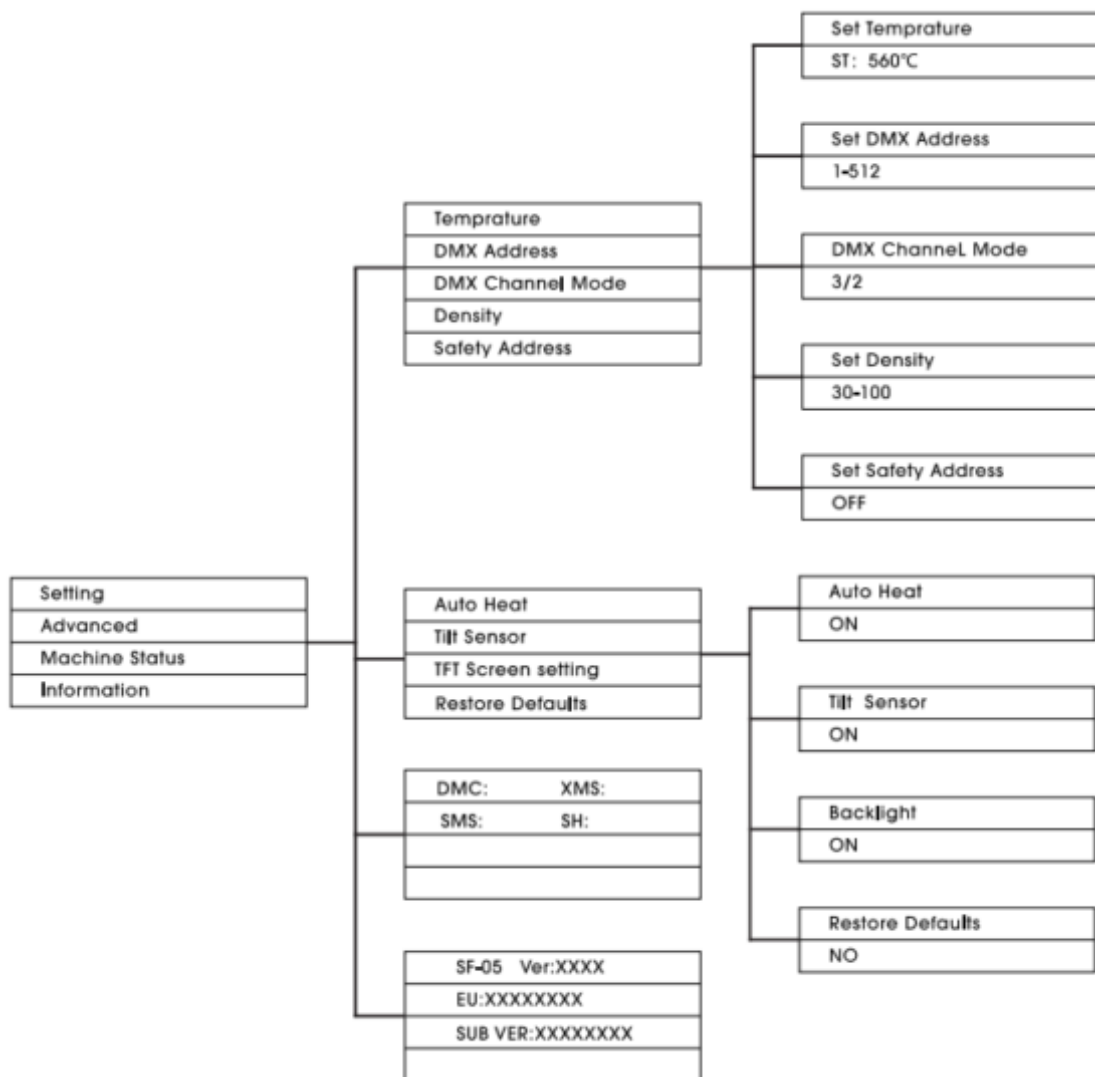


**NOTICE** Press <OK> to enter the menu setting. The screen will automatically return to the main state interface with no modification.

 **NOTICE** Press ▲ key or ▼ key to modify parameters. The parameters will be flash after the modification, and please press < OK > key to save the change.











**NOTICE** Press ◀ key will return to previous page.

## STATUS ICONS

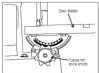

**NOTICE** When the icons are green means the machine is working normally, and yellow means abnormal.



 Blower Motor	 Temp Sensor Unconnected
 Shaft Motor	 Temp Over Heat
 Hopper Motor	 Tip Over
 Lack Of Time	 Sub PCB Connected
 PCB Too Hot	 2/3 Channel Mode Optional

### RDM

RDM allows the console with RDM function to set the DMX address and starting temperature of Spark Jet Pro.

### DMX PARAMETER LIST

First Channel	Function
0-10	Stop
11-255	Fountain Height 1-25
Second Channel	Function
0-200	Pre-heat Off
11-39	Emergency Stop
56-200	Clear Material
240-255	Pre-heat On
Third Channel	Function
0-255	Density Adjustment (0 is Maximum Density)
Softy Channel	Function
0-200	Control Off
201-255	Control On

## OPERATION NOTES

PLEASE READ THE FOLLOWING OPERATION NOTES CAREFULLY WORKING WOTH THE MACHUINE

### WORKING CONDITION REQUIRED



#### WARNING

Do not mount the product on a flammable surface (linoleum, carpet, wood, paper, carton, plastic, etc). Make sure

there are no inflammable or combustible materials in the using environment.



#### **WARNING**

Ground wafer entering or covering the bottom of the machine will cause machine failure or electrical leakage risk. Make sure the bottom of the machine is at a safe distance from the surface water in rainy weather to avoid surface the machine from the bottom.



#### **WARNING**

Do not use in a confined space. Always install the product in a location with adequate ventilation, at least 20 in (50 cm) from adjacent surfaces.



#### **WARNING**

This product has no lightning arrester, please do not use this product in thunderstorm weather.



#### **WARNING**

Keep people or flammable materials at least 10 feet (3 meters) away from the machine, and make sure that debris does not fall on flammable objects.



#### **WARNING**

Do not use the machine at temperature above 122 °F (50 °C).

### **SAFETY TIPS**



#### **WARNING**

Always connect the ground wire to avoid electric shock. The machine cannot be submerged in water while operating it.



#### **WARNING**

Do Not touch the sparks. During heating up and operation, do not touch the housing.



#### **WARNING**

Ensure nothing drop(s) into the nozzle of Spark Jet Pro unit. Do Not cover output nozzle port.



#### **WARNING**

The product is very hot during operation and it remains hot for a long time after operation has stopped. Do not touch or put finger in the output nozzle.



#### **WARNING**

Make sure that children, unauthorized people and animals do not obtain access to the machine.



#### **WARNING**

The noise level generated from the spark machine unit is estimated at 80dB depending on the point nearest to the machine(s) during operational discharge mode.



#### **WARNING**

Wear eye protection to avoid eye injury while filling granules and testing spark machine(s).




### WARNING

The proper firefighting extinguishers are recommended as follows: Any type of sand or substance that can suffocate the active metals. Class "D" Fire Extinguishers for Metal Substance Fires.

## MACHINE OPERATION


### PERPARATION

Install the machine on a firm and level ground, and the maximum tilt angle shall not exceed 15 degrees.

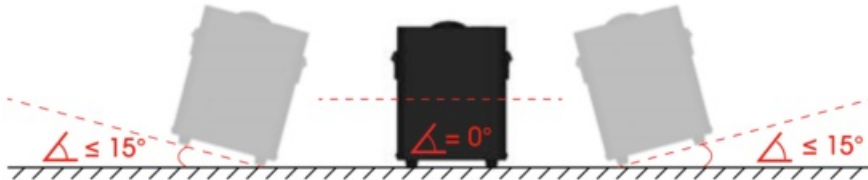

### INSTALL MACHINE

Install the product on truss by using the attached accessories.

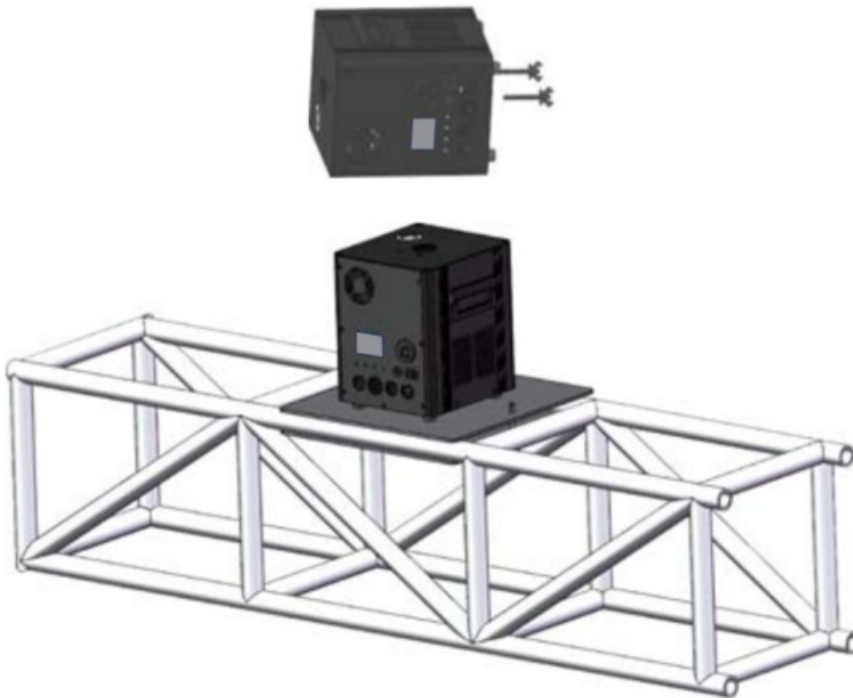

### WARNING

Keep people or flammable materials at least 10 feet (3 meters) away from the machine, and make sure that debris does not fall on flammable objects.

\*Specific installation notes please refer to "4 OPERATION NOTES".

### FILL IN SPARK FABRICA GRANULE

Spark Fabrica Granule is the consumable specially designed for spark machine, to simulate cold fountain fire-works effect for stage.

- Tear the vacuum package of granule, and fill in the Spark Fabrica Granule through the granule filling port on the top of the machine.
- Fill the consumable into the feed port, NOT into the output nozzle.
- Close the lid securely after filling.
- The capacity of storage bin is 150g.



#### **WARNING**

Make sure to fill the Spark Fabrica Granule through the feed port on the top of the fixture when power supply is off.




#### **WARNING**

Wear eye protection to avoid eye injury while filling granules and testing spark machine(s).

### **CONNECT THE MACHINE**

- Connect power and DMX signal line.
- Connect the first machine's power plug.
- Connect the other machines in series with the power cable.
- Connect the other machines in series with DMX connection line.
- Connect PYRO SIM CONTROLLER or DMX512 controller.

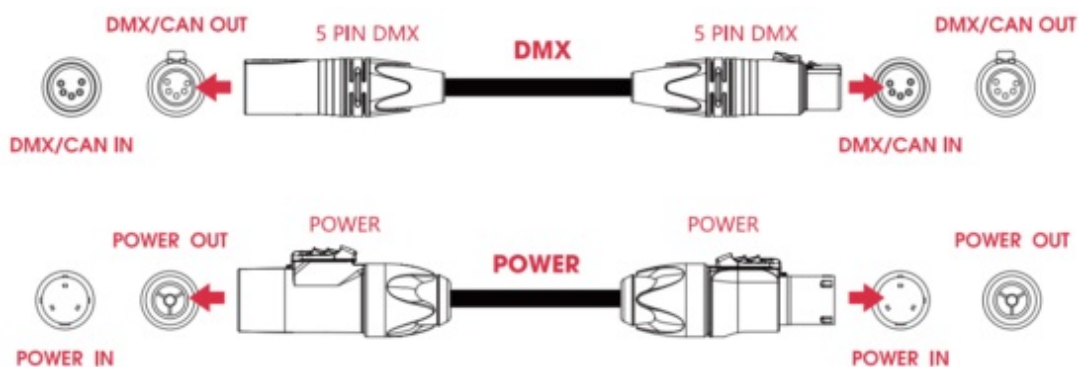

**WARNING** Do not use damaged power plug and power cable. One power plug is recommended to connect 4 units in series at most for this product.



**CAUTION** Please attach the configured 120 ohm terminal resistor to the outlet of the last machine to enhance the anti-interference of the machine.



**CAUTION** Please calculate all products' total current required according to the power supply and fuse parameters of the products.

**NOTICE** The standard length of the power connection line and the signal connection line is 3 meters, and a longer length can be reached by connecting in series.

## INITIAL SETTING

Setting	Range	Default
Set Temperature	400-620	560
DMX Address	1-512	1
DMX Channel Mode	3/2	3
Density	30-100	100
Safety Addresss	0-512	OFF(0)
Tilt Sensor	ON/OFF	ON
Restore Defaults	YES/NO	NO
TFT BackLight	ON/OFF	ON
Auto Heating	ON/OFF	ON

- **Turn on power**
- **Check the machine status icon(refer to icon introductions of 3.3)**



#### **CAUTION**

When the icon shows yellow, it indicates that the machine is abnormal. Please use it after asking the professional to check and repair the machine.

The sparking temperature of the machine is the factory default temperature. The product will heat up automatically when disconnected with DMX signal. Automatic heating function can be set to on or off, and the concrete operation please refer to “3.2 MENU SETTING”.

When spark machines connect DMX signal, the heating function can be started only on the Sim Pyro Console.

#### **SET CHANNEL MODE**

This machine has 2 channel mode and 3 channel mode, the specific setting please refer to “3.2 MENU

SETTING”.

## **SET DMX ADDRESS**

Please set DMX address according to channel mode:

- In the 2 channel mode, please set spark machines' DMX address to 1.3.5.7
- In the 3 channel mode, please set spark machines' DMX address to 1.4.7.10

**NOTICE** Please do not set address code repeatedly.

## **START TO SPARK**

The machine can be controlled by Pyro Sim Controller console or DMX512 console.

## **TURN ON THE CONSOLE' POWER**

## **TURN ON HEATING FUNCTION**

### **NOTICE**

The heating function of the second channel DMX value is 240-255, and it takes about 5 minutes to preheat after turning on.

### **NOTICE**

When heating is turned on, the <HEAT> indicator light on the machine will turn to red, and the <READY> indicator light flashes green to indicate that the machine is heating.

### **NOTICE**

Heating will complete after the <READY> indicator light turns green for a long time, and the spark machine will enter sparking status.

### **NOTICE**

When using the Pyro Sim Controller controller, the screen will display the real-time temperature of each machine. When the temperature value of the control board turns green, it means that the heating is completed and the machine enters the status of sparking.

## **ADJUST SPARKING HEIGHT**

**Adjust sparking height through the first channel, and the height adjustment values is DMX parameter values 11-255.**



### **WARNING**

Do Not touch the sparks or put finger in the output nozzle.



### **WARNING**

During heating up and operation, do not touch the housing.



### **WARNING**

Keep a minimum distance of 10 ff (3 m) from the machine to the nearest human or flammable material. And make



sure no falling residue fly to flammable material.



### **WARNING**

The maximum height of indoor and outdoor granule is different. The maximum height of indoor granule is 3.5 meters, while outdoor granule is 5 meters.

### **NOTICE**

If spark machines are affected by wind, sparking height will be reduced, sparking direction will also be affected by the wind and inclined.

### **NOTICE**

The proper firefighting extinguishers are recommended as follows: Any type of sand or substance that can suffocate the active metals. Class "D" Fire Extinguishers for Metal Substance Fires,

## **ADJUST SPARKING DENSITY**


This product has independent sparking density adjustment function. Machine's sparking density can be controlled during sparking, which can offer you more special effects choices for show.

### **NOTICE**

The third channel is density adjustment channel, and the density is 30-100%. The default sparking density is 100%, and the density adjustment parameter values are 0-255. 0 means 100% density, and bigger DMX number means lower density.

## **SPARK THROUGH REMOTE CONTROLLER**

- Turn on the power, and leave DMX signal disconnected,
- Hold "A" for 2 seconds in the first interface until the screen shows "Control Pair Remoter 315M".
- Press ▲ on remote controller until the screen shows "Code Success", it means the coding is successful.
- One remote controller is recommended to control 4 units at most.

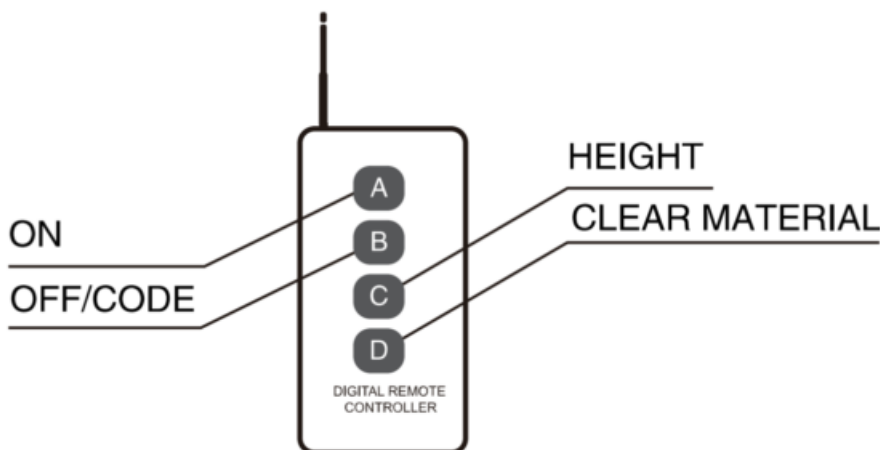

### **CAUTION**

The remote controller can be used after coding when DMX signal is disconnected, or the function will be broken.



### **CAUTION**

Sparking stops automatically after 30 seconds, and clearing material stops after 5 seconds.



### CAUTION

The remote controller has 4 height levels.

## CLEAR MATERIAL

This product has the function of cleaning material, which can clean up the heated but not sparked consumables, so as to avoid nodulation in the heating chamber and causing stuck machine.

### NOTICE

Use the cleaning function of the second channel for cleaning, DMX value is 56-200.

### NOTICE

This function must be performed at the end of each show.

## CLEAN MACHINE

After clearing material, please clean the machine to extend the service life of the machine.

- Turn off the machine's power.
- Remove power connection and DMX signal cable.
- Use a damp cloth to remove dust and debris from the surface of the machine.
- Unused Spark Fabrica Granule should be stored in a cool, dry place, vacuum packed in sealed foil bags, and protected from moisture, heat, hot surface, open fire and other ignition sources.



### WARNING

The product is very hot during operation and it remains hot for a long time after operation has stopped.



### CAUTION

To eliminate unnecessary machine wear and improve its lifespan, unplug the power of the machine during the period of not-in-use. Never power off the product by pulling or tugging on the power cord.

## MACHINE MAINTENANCE

Some steps are needed in order to clean and maintain the product for maximum usage. The recommended procedure is as follows:



### CAUTION

After a period of using, check if there is any consumable accretion inside the nozzle. Do necessary cleaning up if there has some, or it may affect spark performance, even damage the machine.

## FAILURE HANDLING

Error Code	Description	Solution

System Error EC Storage Fail	System Error: Storage Foil	Replace moan board
Motor Protect EI M1	Blower motor protection/ disconnected	<ol style="list-style-type: none"> <li>1. Restart machine to clear alerts.stop operating for 15 minutes until temperature return to normal.</li> <li>2. Check wire connection of motor</li> <li>3. Replace motor</li> <li>4. Replace main board</li> </ol>
Motor Protect EI M2	Shaft motor protection/ disconnected	<ol style="list-style-type: none"> <li>1. Shaff motor dog (perform dean material function manually)</li> <li>2. Check wire connection of motor</li> <li>3. Replace motor</li> <li>4. Reploce main board</li> </ol>
Motor Protect EI M3	Hopper motor protection/ disconnected	<ol style="list-style-type: none"> <li>1. Hopper motor dog ( perform dean material function monuol ll:</li> <li>2. Check wire connection of motor</li> <li>3. Replace motor</li> <li>4. Replace main board</li> </ol>
Temp Sensor E2 Unc onected	Temperature sensor di sconnected	<ol style="list-style-type: none"> <li>1. Check wire connection of temperature sensor</li> <li>2. Replace Temperatlon sensor</li> <li>3. Repalce Main board</li> </ol>
PCB Too Hot E3	Main board too hot	Stop operating machine until main board temperature return to normal

Time Remained	Insufficient time	Please scan new RFID card
Temp Over Heat E5	Heating protection due to over temperature.	Stop operating machine until temperature return to normal. Need will clear off automatically.
Heat Fail E6	Heating process fail	<ol style="list-style-type: none"> <li>1. Inspect Wire connection of heating board.</li> <li>2. Replace heating coil</li> <li>3. Replace heating board</li> </ol>
Tip Over E7	Tip over alert	Machine will activate tip over protection if the angle is more than 45 degrees. The alert will clear off automatically after put the machine back to normal position.
Sub PCB Unconnected E8	Sub-PCB disconnected	<ol style="list-style-type: none"> <li>1. Check wire connection of Sub-PCB</li> <li>2. Replace Sub-PCB</li> <li>3. Replace Main Board</li> </ol>
Mega) Cord Machine Locked	Machine locked because of using Regal or copy RFID card.	Use Regal or copy RRD cord will lock the machine. If so, we will stop providing warranty and after service. To unlock the machine, please contact seller.

[www.sparkfabrica.com](http://www.sparkfabrica.com)



[marketing@sparkfabrica.com](mailto:marketing@sparkfabrica.com) | +86 138 7585 1139



**Documents / Resources**



[SPARK FABRICA SF-05 Spark Jet Pro Machine](#) [pdf] User Manual  
SF-05, Spark Jet Pro, Machine, Spark Jet Pro Machine, SF-05 Spark Jet Pro Machine