



## Sparkle A580 Orc OC Edition Installation Guide

[Home](#) » [Sparkle](#) » Sparkle A580 Orc OC Edition Installation Guide 



### Sparkle Intel® Arc™ Graphics Card Quick Installation Guide

#### Contents

- [1 System Requirements](#)
- [2 Install Your Graphics Card](#)
- [3 How to Install Driver](#)
- [4 Documents / Resources](#)
  - [4.1 References](#)

## System Requirements

1. To install the Sparkle Intel® Arc™ Graphics Card, you'll need a motherboard with one or more PCI Express x16 slots for expansion.
2. 10th Gen Intel® Core™ Processors and higher with compatible motherboard supporting Resizable Bar. AMD Ryzen™ 3000 Series Processors with AMD 500 Series motherboard supporting Smart Access Memory. See

[Intel's website](#) for more details

3. Make sure your monitor or display device is compatible with the output interface of your graphics card.
4. Power consumption varies by model, so please refer to [Sparkle's website](#) to calculate your system's minimum power requirement.
5. Your operating system must be Linux®/Windows® 10/ Windows® 11. For additional support details, please refer to [Intel's website](#).

## Install Your Graphics Card

1. Turn off your computer and disconnect the power cord before opening up the case.
2. Remove any existing graphics card (if applicable) or PCIE slot cover.
3. Insert the Sparkle Intel® Arc™ Graphics Card into the PCIE slot and make sure it's securely in place with the locking mechanism.
4. Secure the graphics card to the PCIE bracket using a thumbscrew.
5. Plug in any required external PCIE power connectors from your appropriate PC Power Supply Unit.
6. Close up the case and connect your display cable to the corresponding GPU display output port.
7. Power on your system and boot up to OS! We recommend removing all drivers for your previous card and performing a clean install of new drivers for optimal performance.

## How to Install Driver


1. Visit [Intel website](#) to download the newest driver.
2. Choose the product model you want to install and download the driver.
3. After the download is complete, run and launch the installation program.
4. Please follow these instructions carefully to ensure smooth installation of your graphics card driver.

Follow these instructions carefully to ensure proper installation of your graphics card. If you run into any issues during installation, feel free to visit Sparkle or Intel's websites for additional support resources.



---

## Documents / Resources

	<p><a href="#">Sparkle A580 Orc OC Edition</a> [pdf] Installation Guide A580 Orc OC Edition, A580, Orc OC Edition, OC Edition, Edition</p>
---	--

## References

- [!\[\]\(7e19807c61da14f515588e95cd49886c\_img.jpg\) SPARKLE](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.