



speco technologies IOMOD External Alarm Box Module User Guide

[Home](#) » [speco technologies](#) » speco technologies IOMOD External Alarm Box Module User Guide 



Contents

- [1 IOMOD](#)
- [2 HW Connection](#)
- [3 SW Setting](#)
- [4 Specifications](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

IOMOD

IOMOD is an external device that connects to the DVR or NVR via RS-485 to extend the number of alarm inputs up to 16.




HW Connection

- Connect the RS-485 terminal of IOMOD and DVR/NVR.
- Connect the DC 12V Adapter supplied with the IOMOD.

SW Setting

Go to Setup → Device → Controller & PTZ and activate 'Alarm Box' ON.

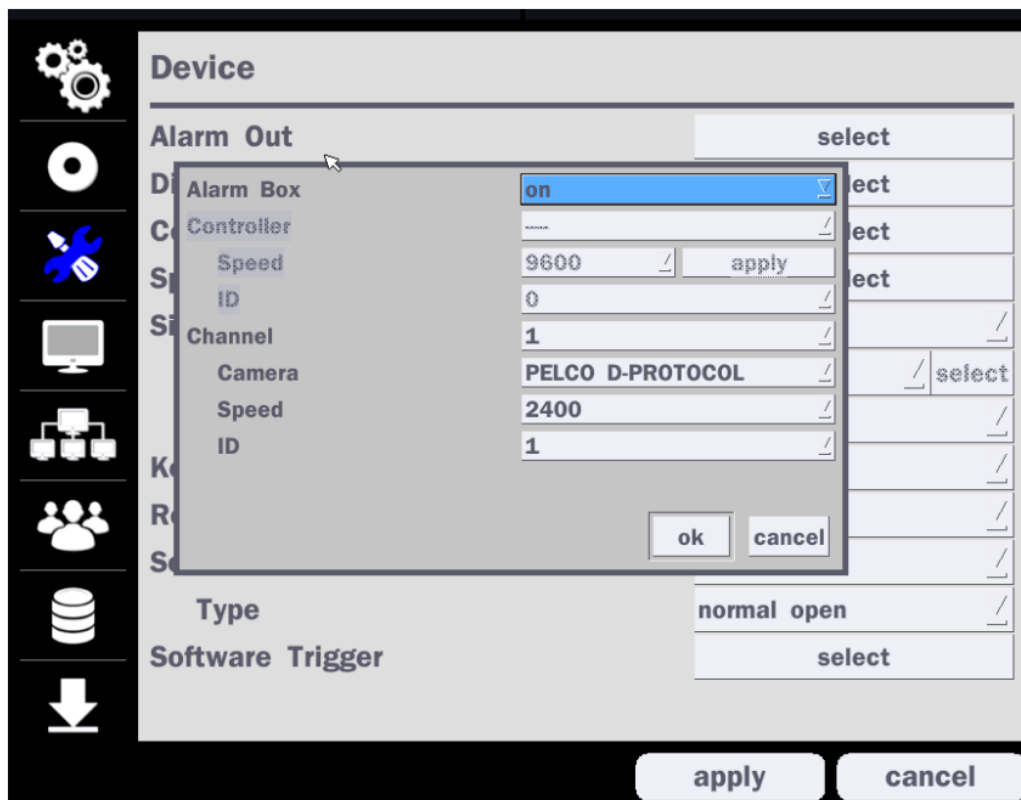

[Note]


If the alarm box is turned "on", the sensor input of the DVR/NVR itself does not work.
When the Alarm Box is turned "on", the Keyboard Controller can not be used.

Specifications

Items	Specifications
Model	IOMOD
Alarm Inputs	16 (Terminal Blocks)
Interface with DVR/NVR	RS-485 (Terminal Block)
Front LEDs	Power (RED)
	Alarm (Yellow)
	RS485 (Green)
Power	DC 12V 3A Adaptor
Dimension (W x H x D)	6.7" x 1.0" x 1.9" (170mm x 25mm x 48mm)

DWG
• 516-933-4900
• dwgdistribution.com

Documents / Resources

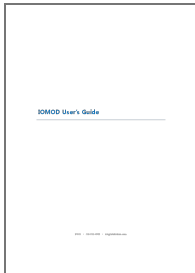	speco technologies IOMOD External Alarm Box Module [pdf] User Guide IOMOD External Alarm Box Module, IOMOD, External Alarm Box Module, Alarm Box Module, Box Module
---	--

References

-  [Video Surveillance and Security distributor in United States | DWG](#)
- [User Manual](#)