



Speco Technologies O4VB2M IP Bullet Camera User Guide

[Home](#) » [speco technologies](#) » Speco Technologies O4VB2M IP Bullet Camera User Guide 

Speco Technologies O4VB2M IP Bullet Camera User Guide



Contents

- [1 Welcome](#)
- [2 Important Safeguards and Warning](#)
- [3 Package](#)
- [4 Web Operation and Login](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)

Welcome

Thank you for purchasing this network camera! This owner's manual is designed to be a reference tool for your system. Please read this manual carefully before operating the unit and retain it for future reference. Should you require any technical assistance, contact Speco Technologies Tech Support at 1-800-645-5516

Important Safeguards and Warning

1. Electrical safety

All installation and operation here should conform to local electrical safety codes.

Use a certified/listed 12VDC Class 2 power supply only.

Please note: Do not connect two power supplying sources to the device at the same time; it may result in device damage! The product must be grounded to reduce the risk of electric shock.

Improper handling and/or installation could run the risk of fire or electrical shock. Electrical safety All installation and operation here should conform to local electrical safety codes. Use a certified/listed 12VDC Class 2 power supply only. Please note: Do not connect two power supplying sources to the device at the same time; it may result in device damage! The product must be grounded to reduce the risk of electric shock.

Improper handling and/or installation could run the risk of fire or electrical shock.

2. Environment

Heavy stress, violent vibration or exposure to water is not allowed during transportation, storage and installation.

This product should be installed in a cool, dry place away from direct sunlight and heat sources.

Do not install the product in extreme temperature conditions.

Do not expose the camera to electromagnetic radiation. Otherwise it may result in CMOS sensor failure.

Do not block any ventilation openings.

Do not allow water and liquid intrusion into the camera.

3. Operation and Daily Maintenance

Please shut down the device and then unplug the power cable before you begin any maintenance work.

Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.

Always use the dry soft cloth to clean the device. If there is too much dust, use a cloth Environment

Heavy stress, violent vibration or exposure to water is not allowed during transportation, storage and installation.

This product should be installed in a cool, dry place away from direct sunlight and heat sources.

Do not install the product in extreme temperature conditions.

Do not expose the camera to electromagnetic radiation. Otherwise it may result in CMOS sensor failure. Do not block any ventilation openings. Do not allow water and liquid intrusion into the camera.

4. Operation and Daily Maintenance

Please shut down the device and then unplug the power cable before you begin any maintenance work. Do not touch the CMOS sensor optic component. You can use a blower to clean the dust on the lens surface.

Always use the dry soft cloth to clean the device. If there is too much dust, use a cloth dampened with a small quantity of neutral detergent. Finally use the dry cloth to clean the device. Please use a professional optical cleaning method to clean the enclosure. Improper enclosure cleaning (such as using cloth) may result in poor IR functionality and/or IR reflection. The grounding holes of the product are recommended to be grounded to further enhance the reliability of the camera. Dome cover is an optical device, please don't touch or wipe cover surface directly during installation and use, please refer to the following methods if dirt is found: Stained with dirt: Use oil-free soft brush or hair dryer to remove it gently. Stained with grease or fingerprint: Use oil-free cotton cloth or paper soaked with alcohol or detergent to wipe from the lens center outward. Change the cloth and wipe several times if it is not clean enough.

Warning

This camera should be installed by qualified personnel only.
All the examination and repair work should be done by qualified personnel.
Any unauthorized changes or modifications could void the warranty.

.Statement

This guide is for reference only.

 



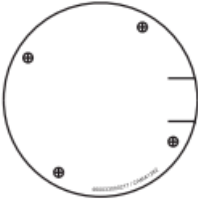 

Product, manuals and specifications may be modified without prior notice. Speco Technologies reserves the right to modify these without notice and without incurring any obligation.





Speco Technologies is not liable for any loss caused by improper operation.

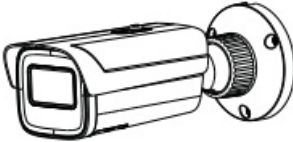Note:


Before installation, check the package and make sure that all components are included. Contact your rep or Speco customer service department immediately if something is broken or missing in the package

Package


Camer	
Quick start guide	
CD	
7 Plastic screw anchors	
Drill Template	
7 Screws (PA 4×25mm) 1Screw (PWM3×5mm)	

Junction box	
3 Screws (PM 4 ×10mm)	
4 Rubber o-rings for screws	
Rubber plug	

 OVERVIEW

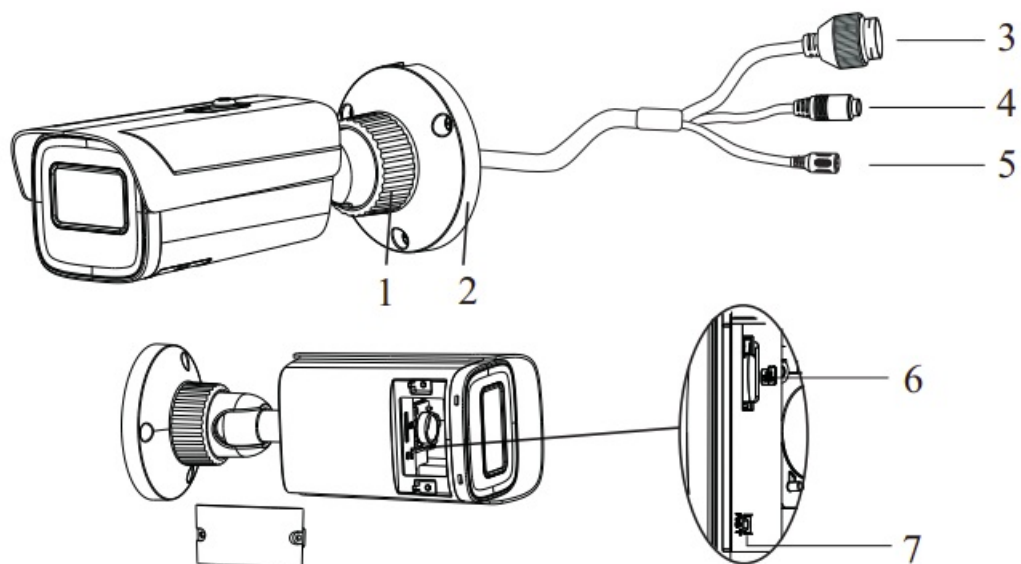


1	Fixed ring
2	Mounting base
3	Ethernet connector
4	Audio input
5	DC power connector
6	Micro SD card slot
7	Reset

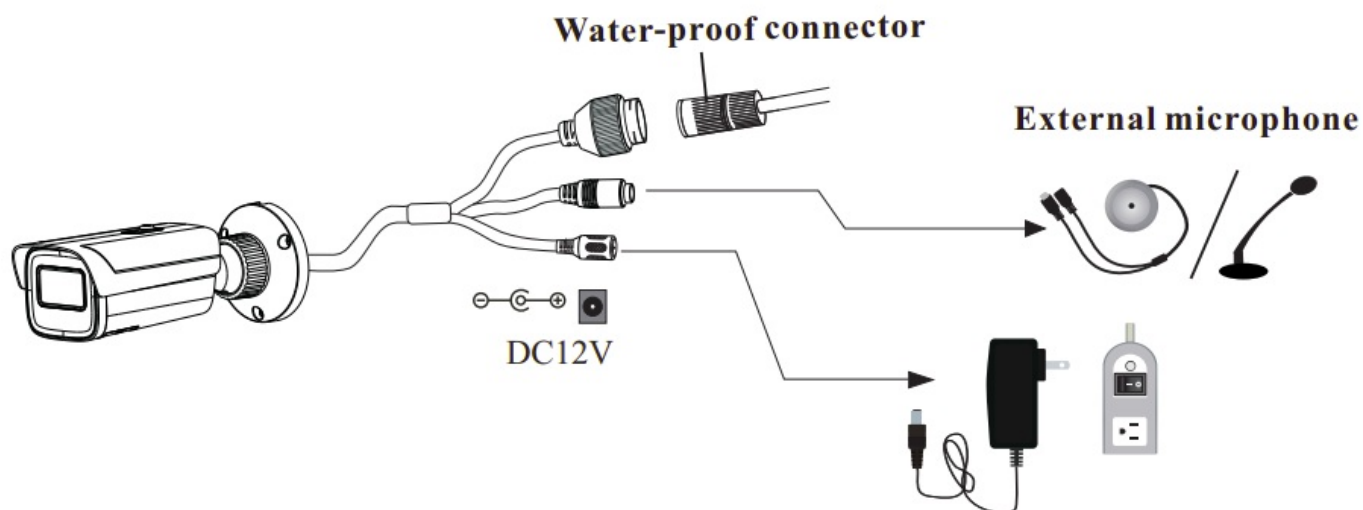 

- 1 It is recommended to install the water-proof connector for outdoor installations.
2 DC 12V power supply is not required if a PoE switch or injector is used to power the camera

 1. Connecting Network Cable

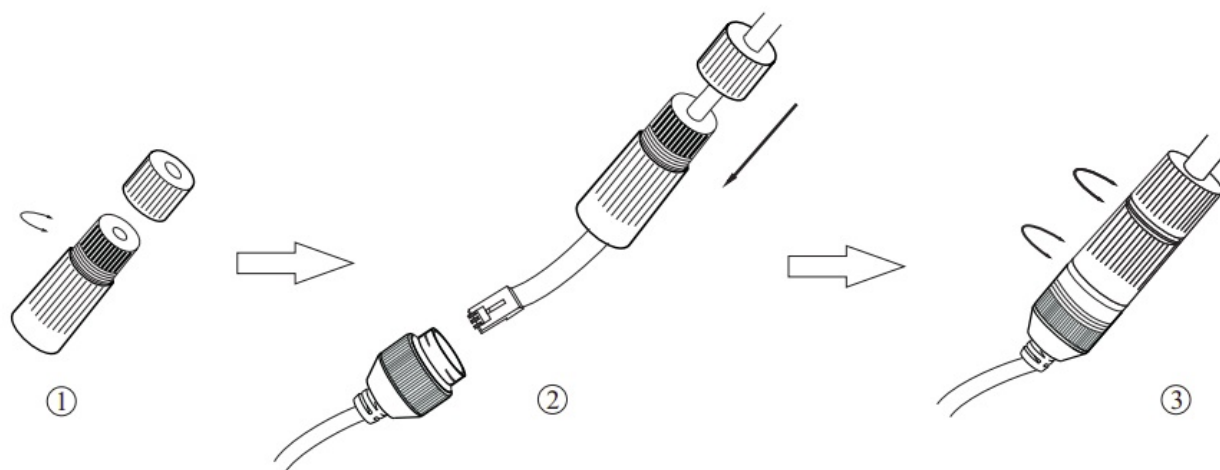


- Loosen the nut from the main element.
- Run the network cable (without RJ 45 connector) through both elements. Then crimp the cable with RJ 45 connector.
- Connect the cable to the water-proof connector. Then tighten the nut and the main cover.


Installation

Before you start, please make sure that the wall or ceiling is strong enough to withstand three times the weight of the camera.

 
1. Open the mounting base and the upper cover of the junction box.

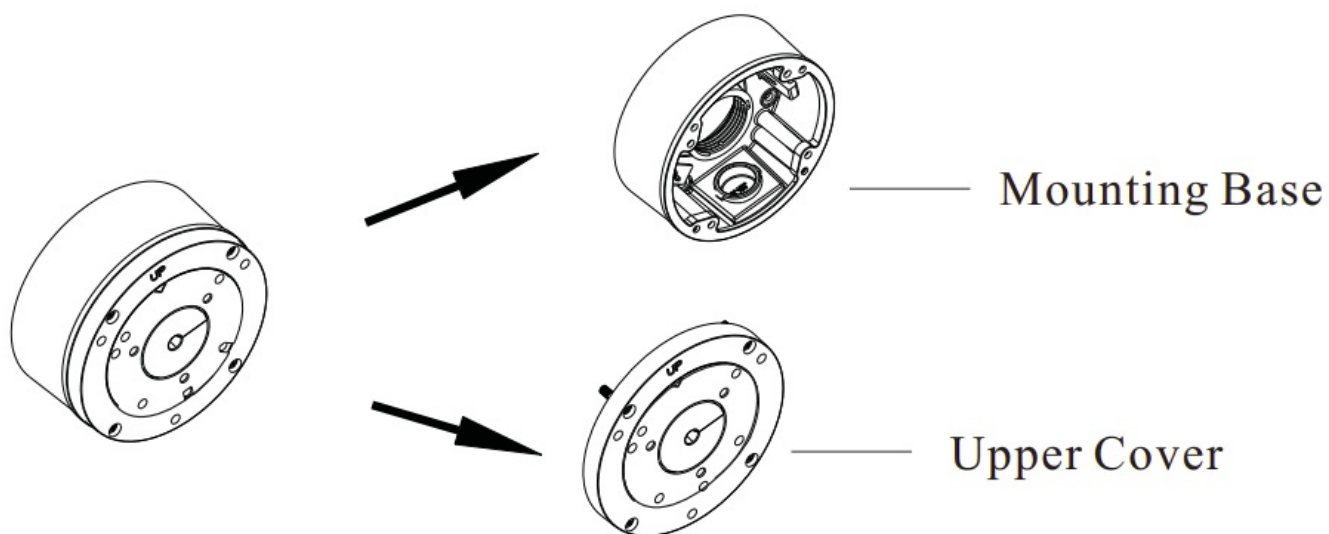


2. Attach the drill template of the junction box to the place where you want to install the junction box and then drill the screw hole and cable hole on the wall according to the drill template.

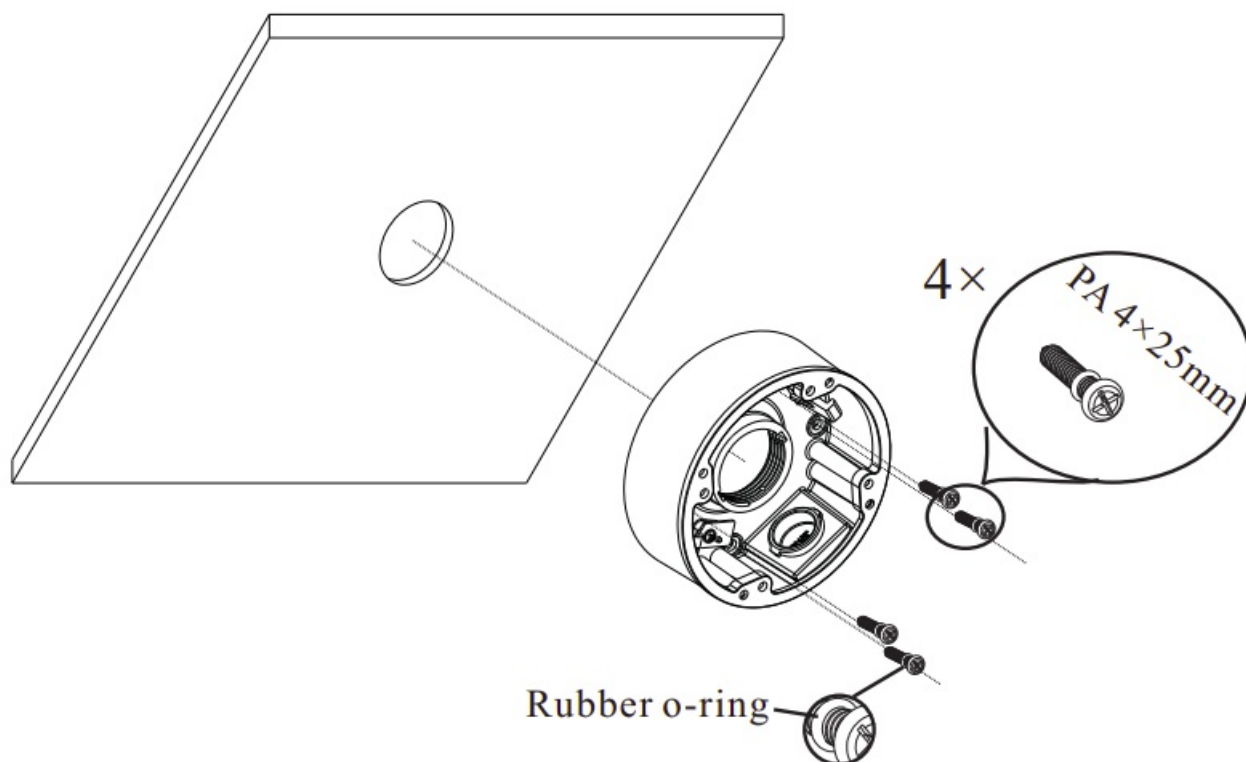 

 
3. Install junction box onto the wall by using the screws provided.
4. Mount the rubber plug to the gap of the mounting base and fasten the camera onto the mounting base. box as shown below.

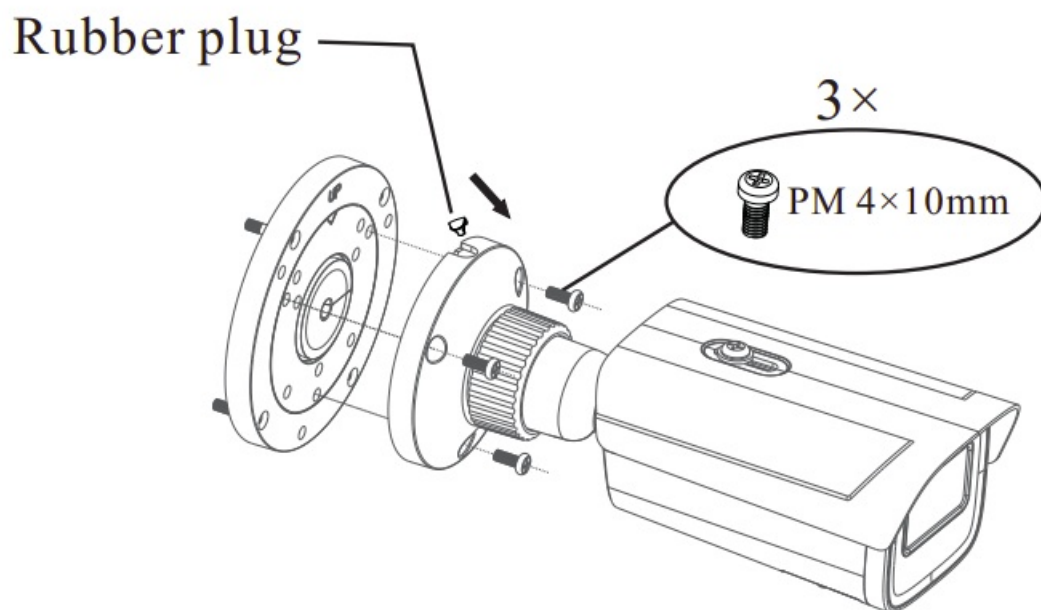

 5. Connect the cables and then install the camera onto the junction

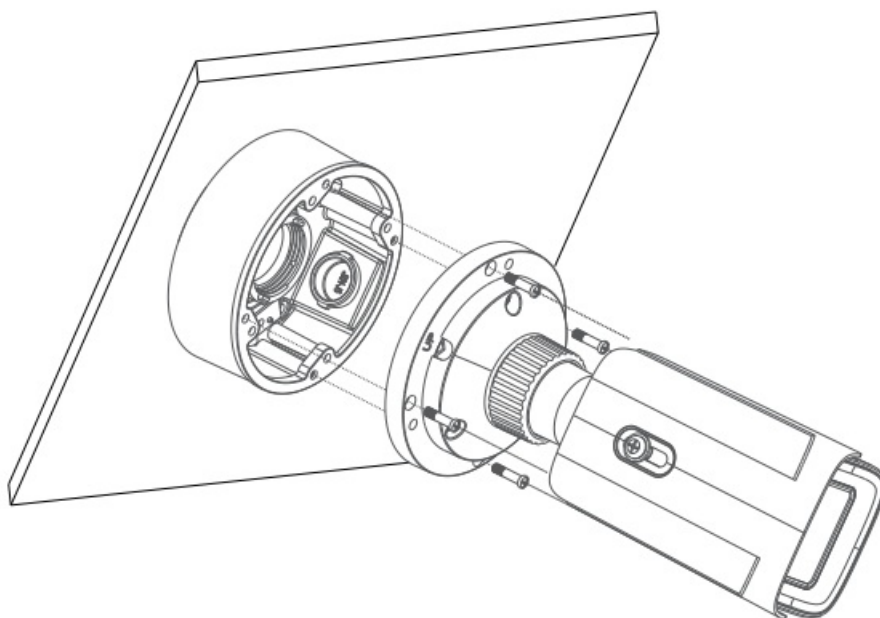

 6. Bracket Adjustment-Loosen the fixed ring to adjust the view angle of the camera. After you get the optimum angle of view, tighten the fixed ring to complete the installation.

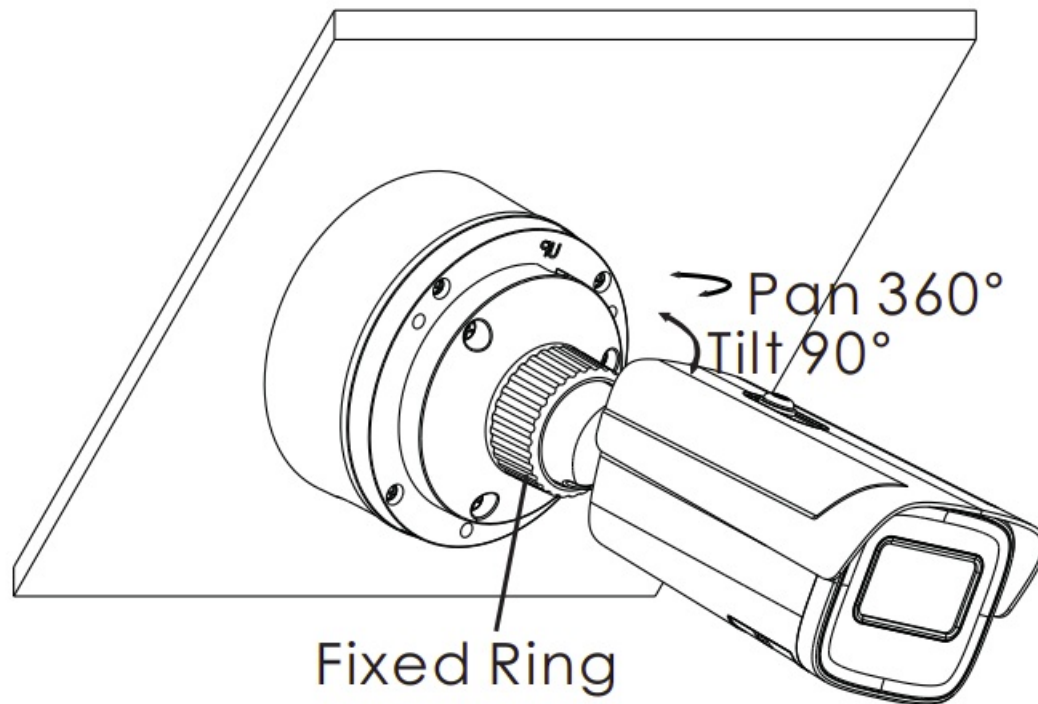

Web Operation and Login


IP Scanner can search for the device on the local network.

Operation

1. Make sure that the camera and the PC are connected to the same local network. The camera is set-to DHCP by default.
2. Install IP Scanner from the CD and run it after installation. Or download from [https:// www.specotech.com/ip-scanner/](https://www.specotech.com/ip-scanner/)

SecureGuard IP Scanner						
Refresh	Open Web Page	Login...	IP	Restart	Factory Default	Information
About						
Status	Model Name	Name	IP Address	MAC Address	Wireless IP Address	Zero Config IP
Online		O4VB2M	192.168.17.251	5C:F2:07:24:28:6A	n/a	n/a

 
3. In the device list, you can view the IP address, model number, and MAC address of each device. Select the applicable device and double click to open up the web viewer. You can also manually enter the IP address in the address bar of the web browser.

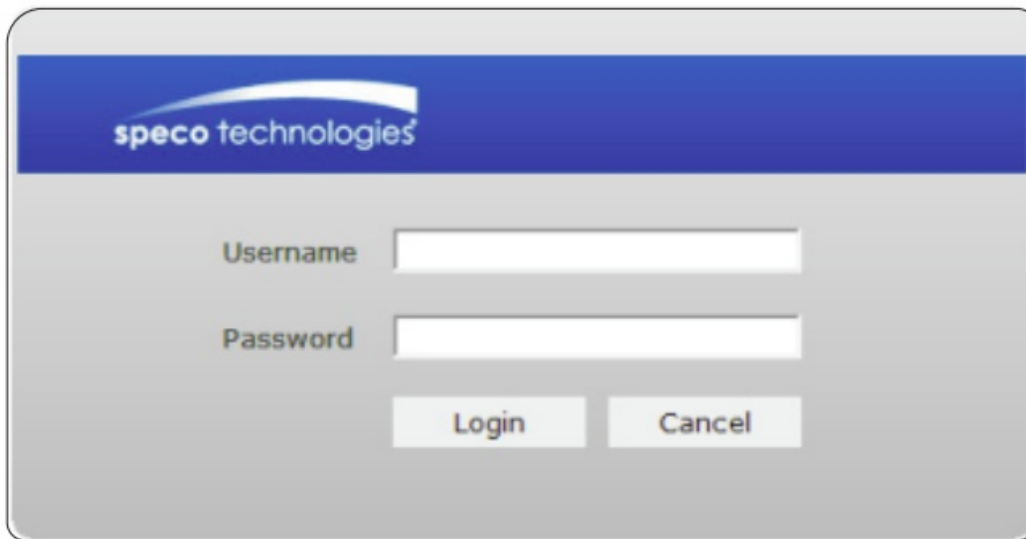The image shows a login window for Speco Technologies. It has a blue header bar with the company logo. Below the header, there are two input fields: 'Username' and 'Password'. At the bottom, there are two buttons: 'Login' and 'Cancel'.

The login interface is shown above. Default user name is admin and password is 1234. After logging in, follow directions to install applicable plugins if prompted



Documents / Resources

 The image shows the cover of a 'Quick Start Guide' for the 'O4VB2M' camera. It features the Speco Technologies logo and a small image of the camera itself.	<p>Speco Technologies O4VB2M IP Bullet Camera [pdf] User Guide O4VB2M IP Bullet Camera, O4VB2M, IP Bullet Camera, Bullet Camera, Camera</p>
---	---

References

- [User Manual](#)