



SPECTRA Vantage 90 UST ALR CLR Projector Screen Instruction Manual

[Home](#) » [Spectra](#) » SPECTRA Vantage 90 UST ALR CLR Projector Screen Instruction Manual 

Contents

- [1 SPECTRA Vantage 90 UST ALR CLR Projector Screen](#)
- [2 Installing Instructions for Tension Clips](#)
- [3 ONLINE INSTRUCTIONS](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

The SPECTRA logo, featuring the word "SPECTRA" in a bold, italicized, sans-serif font. The letters are black with a white outline, giving it a three-dimensional effect. The logo is set against a light gray rectangular background.

SPECTRA Vantage 90 UST ALR CLR Projector Screen



Installing Instructions for Tension Clips

Finish the installation of the fixed frame before completing this step. When ready, attach the tension clips to the back of your screen as shown in the picture below:



FIGURE 2-1



FIGURE 2-2

1. Fasten one end of the tension clip on the internal frame with one hand and hold it steady. With the second hand, pull the other end of the tension clip while using the first hand to help push and clip to the outer frame.

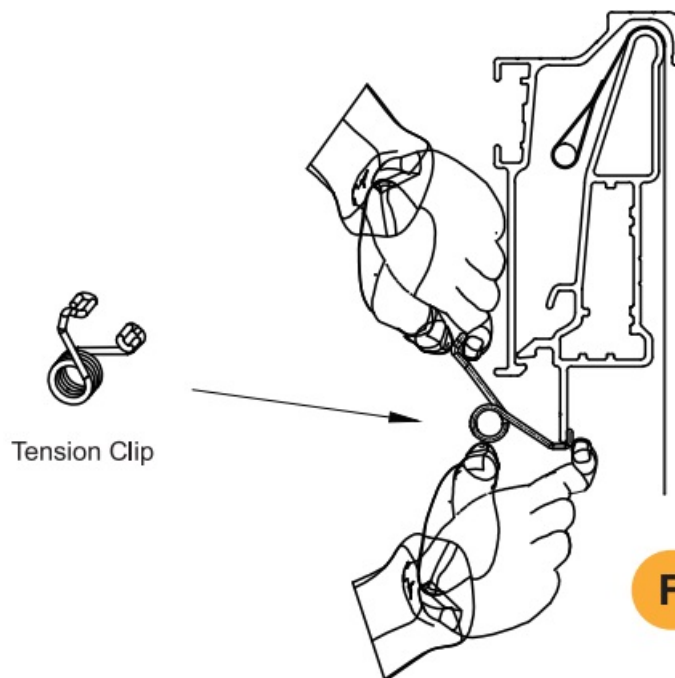


FIGURE 2-3

2. Fasten one end of the tension clip on the internal frame with one hand and hold it steady. Using your second hand, pull the other end of the tension clip with the hook and fasten it to the outer frame. Remove the hook when complete.

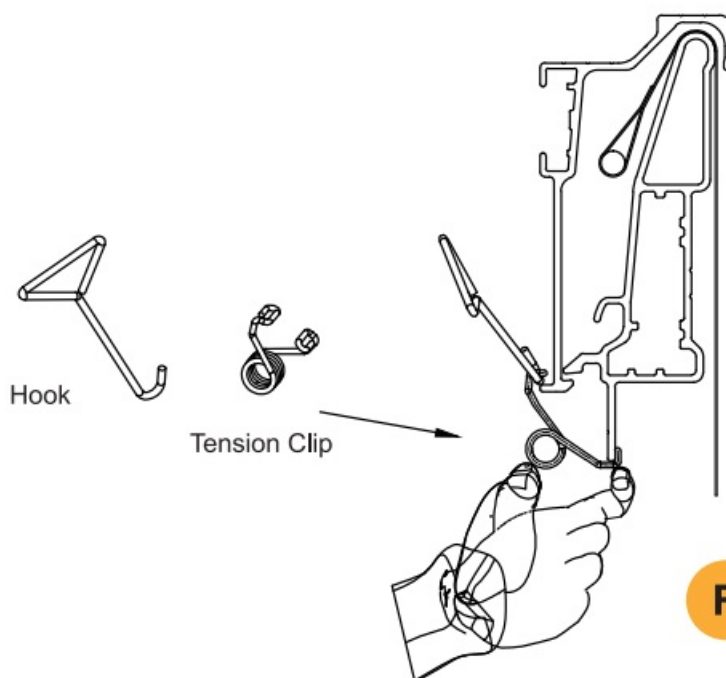



FIGURE 2-4

ONLINE INSTRUCTIONS

[SpectraProjection.com](https://www.spectraprojection.com)



<div><p>▲ Installing Instructions for Tension Clips</p><p>Begin the installation of the Tense Frame before completing this step. When ready, place the tension clips to the back of your screen as shown in the picture below.</p></div> <div></div>	<p>SPECTRA Vantage 90 UST ALR CLR Projector Screen [pdf] Instruction Manual</p> <p>SP-V-UST5-90, Vantage 90 UST ALR CLR Projector Screen, Vantage 90 UST ALR CLR, UST ALR CLR Projector Screen, Projector Screen, Vantage 90, Projector, Screen</p>
--	---