

spectralink
**Spectralink S33
Dect Handset**



Spectralink S33 Dect Handset User Guide

[Home](#) » [spectralink](#) » Spectralink S33 Dect Handset User Guide 

Contents

- [1 Spectralink S33 Dect Handset](#)
- [2 Technical Specifications](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)



Spectralink S33 Dect Handset



Specifications

- Display
- Volume Control
- LED
- Headset Connector
- Left Softkey
- Middle Softkey
- Right Softkey
- Loudspeaker Key
- Mute/Menu Key
- Off Hook Key
- Four Way Navigation Key
- On Hook Key
- Microphone


Spectralink S33 Handset

Quick Start Guide



Note: If a menu, submenu, setting or a function is not visible, it is controlled by a local administrator. Contact them if a change is needed.

Remove the tape protecting the battery contacts before charging. Charge your handset for 4 hours prior to first use for best performance.

Turning Handset On

Press  to turn the handset on.




Turning Handset Off

1. Hold  until the question "Turn off?" appears in the display.
2. Press  to confirm.



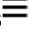

Adjusting Speaker/Headset Volume

While on call, press the Volume Control keys on the upper left side of the handset to adjust the volume.



Adjusting Ring Volume

1. Press  to enter the main menu.
2. Scroll to Audio and press .
3. Scroll to Ring Volume and press .
4. Press the left or right side of the navigation key to adjust the volume of the ring tone.
5. Press to save your changes.



Changing Ring Tone

1. Press  to enter the main menu.
2. Scroll to Audio and press .
3. Scroll to Ring Tone and press .
4. Scroll to the desired ring tone and press the right side of the navigation key to listen to the ring tone.
5. Press the left side of the navigation key to listen to the internal calls ring tone.
6. Scroll to the desired ring tone, and press to  select the new ring tone.

Off Hook Dialing (Dial Directly)

1. Press .
2. Dial number.
3. Press  to end the call.



On Hook Dialing (Pre-Dial)

1. Dial number.
2. Press  to initiate the call.
3. Press  to end the call.


Speed Dial Calls

- Press and hold a key (0-9) for three seconds, until the call is initiated.


Answering and Ending Calls

- To answer a call, press .
- To end a call, press .

Call List Calls

1. Press the left side of the navigation key to enter the Call List.
2. Scroll to the desired name or number, and press .

Call Missed Calls

1. Press the right side of the navigation key to enter the Missed Call List.
2. Scroll to the desired name or number, and press .



Phone Book Calls (Local)

1. Press the bottom of the navigation key to enter the local phonebook.
2. Scroll to the desired name, and press to make a call.







1. Display
2. Volume Control
3. LED
4. Headset Connector
5. Left Softkey
6. Middle Softkey
7. Right Softkey
8. Loudspeaker Key
9. Mute/Menu Key
10. Off Hook Key
11. Four Way Navigation Key
12. On Hook Key
13. Microphone






Company Phone Book Calls

1. While on hook, press the top of the navigation key to enter the company phonebook.
2. Search for a name, press , then scroll to the desired number and press Dial or .


Adding a New Contact to Contacts

1. Press  to enter the main menu.
2. Scroll to Contacts and press .
3. Scroll to Local Contacts and press.
4. Scroll to Add name/number and press .
5. Type the name of the contact using the keys 0-9.
6. Scroll to number and enter the directory number/SIP extension of the contact (max. 24 digits/64 characters).
Before entering a SIP URI, press and hold # until SIP: is shown.
7. Press  to store the name and directory number/SIP extension.


Assigning Speed Dials

1. Press  to enter the main menu.
2. Scroll to Contacts and press .
3. Scroll to Speed Dial and press .
4. Scroll to Add to Speed Dial and press .
5. Scroll to the desired speed dial position and press .
If the position is occupied, press  to replace the existing speed dial.
6. Scroll to the desired contact and press .


Locking/Unlocking Keypad

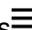While on the home screen, press  (Left Softkey) followed by the * button to lock or unlock the keypad.

• Silent Mode On/Off

While on the home screen, press  (Left Softkey) followed by the # button to turn the handset silent mode on/off. In silent mode there is no sound for incoming calls and notifications.

• Exit Menus


To exit menus and return to the home screen, press .

• Loudspeaker On/Off











While in a call, press  to enable or disable the loudspeaker.

• Microphone Mute On/Off

While in a call, press  to mute the microphone. To unmute the call, press .

Alternatively, while in a call, press  to mute/unmute the call.

Handset Icons

	Missed calls
	Incoming calls
	Battery charging (in charger)
	Battery charging (handset turned on in charger)
	Battery capacity decreasing (handset out of charger)
	Battery capacity low
	Message received
	Keypad or screen locked
	Silent mode
	Appears when loudspeaker is turned on
	Microphone muted

Technical Specifications

Battery and Handset Capacity

- Removable and replaceable 1200mAh battery
- Active talking time up to 16 hours.
- Standby time up to 120 hours.
- Charge time under 4 hours

Durability / Ruggedness

- IP54 water and dust resistance.
- Exceeds MIL-STD-810H drop tests.
- Atmospheric resistance tested – salt and fog.
- Health-grade plastic material withstands daily disinfectant cleaning and UV-C lamps.
- Resistant to abrasion (RCA Abrasion tested).

Environmental

- Operating temperature range: -10° to 55°C / 14° to 131°F.
- Charging temperature range: 0° to 43°C / 32° to 109°F.
- Storage temperature range: -40° to 70°C / -40° to 158°F.

For more information about the handset, refer to the Spectralink S33 Handset User Guide, Safety and Handling Information and Regulatory Information available online at <http://support.spectralink.com/products>

Frequently Asked Questions (FAQ)

- **Q: How do I access missed calls?**

A: Press the right side of the navigation key to enter the Missed Call List. Scroll to the desired name or number and press to view details.

- **Q: Where can I find more information about the handset?**

A: For additional information, refer to the Spectralink S33

Handset User Guide, Safety and Handling Information, and Regulatory Information available online at

<http://support.spectralink.com/products>

Documents / Resources



[Spectralink S33 Dect Handset](#) [pdf] User Guide
S33, S33 Dect Handset, S33, Dect Handset, Handset

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.