

speechi SPE-VA460 Video Conferencing Systems User Manual

Home » Speechi » speechi SPE-VA460 Video Conferencing Systems User Manual



Contents

- 1 speechi SPE-VA460 Video Conferencing
- **Systems**
- **2 Product Information**
- **3 Product Usage Instructions**
- 4 Graphic Symbols
- **5 Attention**
- **6 Quick Start**
- 7 Product Overview
- **8 Technical Specification**
- 9 How to Use
- 10 Menu Setting
- 11 Maintenance and Troubleshooting
- 12 Documents / Resources
- 13 Related Posts



speechi SPE-VA460 Video Conferencing Systems



Product Information

This product is a camera that comes with various functions and features. It is important to read the user manual carefully to ensure proper usage and to avoid any potential danger. The manual provides detailed instructions on installation, maintenance, and troubleshooting. The product is designed to be used under specified conditions to

avoid any damage to the camera. It is important to follow the precautions mentioned in the manual, such as not exposing the product to rain or moisture, not opening the case to prevent electric shock, and not using the product beyond specified temperature, humidity, or power supply specifications. The manual also provides information on electrical safety, transportation, magnetic interference, and cleaning instructions.

Product Usage Instructions

- Device Startup: To power on the device, connect it to a power socket using the provided DC12V power adapter.
- 2. **Statue Indicator Light**: The manual does not provide specific instructions for the statue indicator light. Please refer to the user manual for more information on the meaning of different indicator lights and their functions.
- 3. Interfaces: The product has various interfaces for different purposes. Here are the interfaces mentioned in the manual:
 - 1. **USB:** For audio and video input/output.
 - 2. HDMI: For video output.
 - 3. **LINE IN:** For audio linear input.
 - 4. LINE OUT: For audio linear output.
 - 5. Extension Mic: For connecting an external microphone.
 - 6. Power Jacket: HEC3800 power socket for DC12V input and AC110V AC220V output.
- 4. Quick Start: The manual provides a quick start guide with various sections. These sections include:
 - 1. Interfaces: Describes the different interfaces available on the product.
 - 2. **Device Startup:** Provides instructions on how to power on the device using the DC12V power adapter.
 - 3. **Statue Indicator Light**: Does not provide specific instructions. Refer to the user manual for more information.
 - 4. **Video Output:** Does not provide specific instructions. Refer to the user manual for more information.
 - 5. Audio Input: Does not provide specific instructions. Refer to the user manual for more information.
 - 6. Audio Output: Does not provide specific instructions. Refer to the user manual for more information.
- 5. **Product Overview:** The manual provides an overview of the product, including its dimensions and supplied accessories.
- 6. **Product Features:** The manual highlights the features of the product.
- 7. **Technical Specification:** The manual provides technical specifications of the product.
- 8. **How to Use**: The manual provides instructions on how to use the product, including remote control usage and menu settings.
- 9. **Maintenance and Troubleshooting:** The manual provides information on maintenance and troubleshooting, including tips on how to maintain the product and troubleshoot common issues. Please refer to the complete user manual for detailed instructions on each section and topic mentioned above.

Preface

- This manual introduces functions, installations and operations for this product in details. It is to ensure that the user can use the product properly and avoid danger while
- operating. Before using this product, please read the user manual carefully and keep it properly for future reference.

Graphic Symbols

Description of graphic symbols used in this manual.

SYMBOLS DESCRIPTION	
[]i	This symbol indicates that the words are clarification or supplement to this article.
<u>^</u>	This symbol indicates that negligence of the instructions may lead to mishandling that may cause injury or property damage.
<u> </u>	This symbol indicates a risk that may result in damage to this machine or documents. Follo w the instructions to avoid property damage.

Attention

Precautions

This product can only be used in the specified conditions in order to avoid any damage to the camera:

- 1. Do not expose the product to rain or moisture.
- 2. To prevent the risk of electric shock, do not open the case. Installation and maintenance should only be carried out by qualified technicians.
- 3. Do not use the product beyond the specified temperature, humidity or power supply specifications.
- 4. Please use a soft dry cloth to clean the camera. If the camera is very dirty, clean it with diluted neutral detergent; do not use any type of solvents, which may damage the surface.

Electrical Safety

- Installation and use of this product must strictly comply with local electrical safety standards. Transportation
- Avoid any stress, vibration, or moisture during transportation, storage, installation and operation.

Installation

- 1. Do not rotate the camera head violently, otherwise it may cause mechanical failure;
- 2. This product should be placed on a stable desktop or other horizontal surface. Do not install the product obliquely, otherwise it may display inclined image;
- 3. Ensure there are no obstacles within rotation range of the holder.
- 4. Do not power on before completely installation.

Do not dismantle camera:

We are not responsible for any unauthorized modification or dismantling.

Magnetic Interference

Electromagnetic fields at specific frequencies may affect the video image. This product is Class A. It may cause radio interference in household application. Appropriate measure is required.

Quick Start

Interfaces

INTERFACES		
USB	USB audio video in out, type C	
HDMI	HDMI video output	
LINE IN	Audio linear input	
LINE OUT	3.5mm linear output	
Extension Mic	RJ45 extension mic	
Power Jacket	HEC3800 power socket(DC12V), input AC110V-AC220V, output DC12V/2A	

Device Startup

Power On

Connect device to power socket with DC12V power adapter.

Statue Indicator Light

INDICATOR LIGHTS	
Green lights	Boot initialization in progress
continuously run left to right	In Bluetooth pairing mode
Blinking Blue Lights	Bluetooth pairing finished
Lights Turn Blue and Stay 3S	 Working statue When turn off Auto-framing & Voice tracking, all light turn green When turn on Auto-framing & Voice tracking, partial light turn green
Solid Green Light	Standby statue(Device on without video)
Blinking Green	Microphone Muted
Light	Volume up/down
Solid Red Light	Partial light turns green according to the voice source

Video Output

- USB: Connect device to Pcs through USB cable, and open the video software to select device to output.
- **HDMI:** Connect device to monitor through HDMI cable, and then select the correct input source on the monitor to output.

Audio Input

- Built-in audio: It is default that the device pick up voice through built-in mics
- Audio input through 3.5mm linear audio cable: Connect to external pickup through 3.5mm audio cable


(When connecting to external pickup, audio in automatically switch into external pickup.)

Audio Output

- Built-in speaker: It is default that device output voice through built-in speaker.
- Audio output through 3.5mm linear audio cable: Connect to external speaker through 3.5mm audio cable (When connecting to external speaker, audio out automatically switch into external speaker.)

Product Overview

Product Introduction

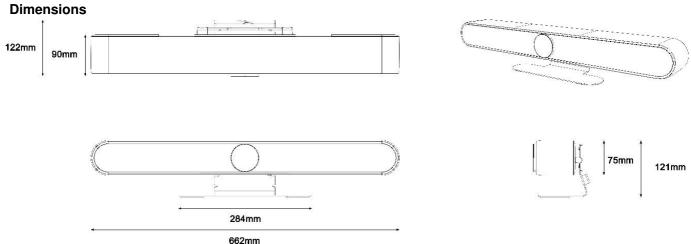

Supplied Accessory

When you unpack your box, please check that all the supplied accessories are included.

ITEMS	QUANTITY	SUPPLIED / O OPTIONAL
All-in-one video bar	1	•
USB cable	1	•
Remote control (no battery included)	1	•
Quick start guide	1	•
Power adapter	1	•

Product Features

• With all-in-one design, this device has 4K UHD camera, microphone array, high fidelity speaker and electric privacy cover. Boasting powerful functions like face recognition, voice localization, voice tracking, and intelligent noise reduction, this product could automatically adjust the image size according to the number of participants to present the optimal frame. It can also detect the speaker position in real time and lock the target while having a close-up, which allows users to have hands-free operation.

This device has 6 array microphone composed of MEMS microphones, and it can also be matched with external cascading microphone and advanced 3A audio algorithm, you will have an exceptional full-duplex communication experience.

- Integrated Design: Built in 4K UHD camera, microphone array, high fidelity speaker and electric privacy cover
 Ultra HD: This device adopts 8 M high quality CMOS image sensor, able to capture 4K ultra HD image to
 present true-to-life image, bringing excellent image resolution and clarity.
- **Distortion-less Wide Angle Lens:** 120° wide angle with no distortion lens allows every participant is on the frame with no need to adjust the camera.
- Automatic Privacy Cover: Privacy cover will automatically close to ensure the privacy security.
- **Microphone Array:** Built in 6 array microphone enable speaker can be tracked in real time. THIS DEVICE break the distance limitation to provide virtual meeting as if you are there.
- Built in Speaker: Built in dual 10W high quality studio speaker, ensuring every participant can hear and be heard
- · clearly.
- Audio Processing: The audio processing algorithm adopts high-fidelity 48K audio sampling rate, lossless
 audio transmission technology, supports AEC, AGC, ANS processing, bringing high-quality calls of 6 meters full
 duplex;
- Auto Framing: Built in face detection algorithm, automatically detect participant and provide optimal framing.
- **Bluetooth 5.0:** Connect mobile phone and other devices through Bluetooth to be used as Bluetooth speaker and microphone.
- Low Noise and High SNR: Low noise CMOS ensure the ultra SNR of image. The advanced 2D, 3D noise reduction technology further reduce the noise while ensuring the image clarity.
- **Powerful Compatibility:** Compatible with Windows7, windows10, Mac OS 10.10 or higher system, applicable to major cloud-based video conference platforms.

Technical Specification


		FOV	120° D / 106° H / 72° (V
	Lens	Iris	F2.0
		Focal Length	1.89mm
		Digital Zoom	10X
	Sensor	High quality CMO	S sensor, effective pixel 8 million, 16:9
		Minimum Illumin ation	0.5Lux
		DNR	2D & 3D
		Focus	Auto/Manual
		BLC	On/Off
CAMERA	Image	Exposure	Parameter can be adjusted, and AE(Auto Exposure) is available
		Video Adjustment	Brightness, sharpness, saturation, contrast, w hite balance, gain, anti-flicker, low brightness compensation and other parameters can be a djusted.
		SNR	≥50dB
			:

Video Format		HDMI: 4KP30,1080P60 compatible downward USB: 4KP30,1080 P60 compatible downward		
	Video Compressi on Format	•		
	Privacy Cover	Automatic privacy cover will close when no image output and ope n when there are image output.		
		Microphone	6x MEMS microphones	
	Microphone	Pickup Distance	6 meters	
		Frequency Response	120Hz-16kHz	
		Speaker	Built-in dual speaker	
AUDIO		Voltage	2x10W	
	Speaker	Output Voice Pr essure	80±3 dB 1.0M/1.0W	
		Frequency Response	100Hz-20kHz	
	Audio Processing	AEC, AGC, ANS		
AI FUNCTION	Group Framing	Automatically adjust the screen size according to the number of p articipants to present the best framing		
	Speaker Tracking	Track each speaker in real time, and ensure that the speaker is in the center of the screen.		
REMOTE CONTROL	Remote Control	Infrared remote control (No battery included)		
PHYSICAL INTERFA CES	USB	USB3.0 audio video output interface, Type C Support UVC1.1, U AC1.0 and higher		
	НОМІ	HDMI video output interface HDMI also compatible with HDMI2.0 standard		
	LINE IN	3.5mm audio line input interface (when an external pickup is connected, the audio input is automatically switched to the extern al pickup)		

	LINE OUT	3.5mm line output, can be connected to external speakers (when connecting to external speakers, the audio output will automatical ly switch to external speakers)	
	Expansion Mic In terface	RJ45 interface, able to connect to expansion microphone.	
	Power Interface	HEC3800 power socket (DC12V), input AC110V-AC220V output DC12V/2.5A	
INDICATOR	Bar-shaped Indic ator	While displaying the working status, it can also be lit where the sp eaker's voice comes from.	
BLUETOOTH Bluetooth 5.0		Can be connected to a mobile phone or other device via Bluetoot h as a Bluetooth microphone and speaker.	
COMPATIBILITY	Available System	Windows 7, Windows 8, Windows 10, Mac OS X, Linux, Android	
POWER SUPPLY	Method	Supply power through power adapter	
	Storage Tempera ture	-10°C ~ +70°C	
	Storage Humidity	20%~95%	
WORKING CONDITI ONS	Working Tempera ture	-10°C ~ +50°C	
	Working Humidit y	20%~80%	
	Environment	Indoor	
	Walling Mount	Comes with walling mount bracket. While mounting, the camera need to be as close to the wall as possible.	
HOD	Desktop	Comes with desktop mounting bracket	
	Installed on Moni tor	Bracket for monitor installation (optional)	

How to Use

Remote Control

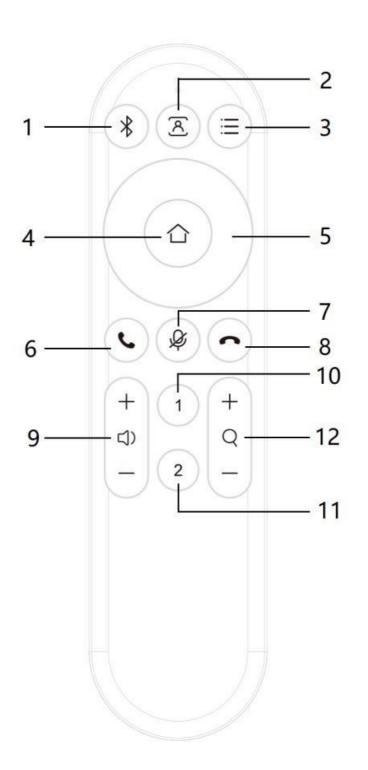

NB	FUNCTION	DETAILED DESCRIPTION
1	Bluetooth	 Pairing mode: Hold the Bluetooth button for 3S, then the blue light is flashing. Pairing is successful: If the connection with the mobile e phone/laptop is successful, the light shift from flashing blue into solid green. Disconnect: In the Bluetooth connection state, hold the Bluetooth button for 5S to disconnect from the paired device. Note: Bluetooth will be automatically turned off if no device is connected after 30s
2	Auto-framing & Voice Tracking	Click the button, the upper left corner of the image will prompt "Auto Frame: ON" or "Auto Frame: OFF".
3	Menu	Click the menu button to enter the submenu for function s etting and modification.
4	Home	 The "HOME button" in the menu is used for function confirmation, setting and modification. Sleep state: "HOME button" to wake up the device.

		3. After manual zooming, pressing the "HOME button" will re store the image to its original position.
5	Up, down, left, right	Click the directional buttons to adjust the position.
6	Answer Call	If the device is in Bluetooth mode, click the button to answer the incoming call.
7	Microphone muted	When the device is connected to Bluetooth and an incoming call is on the way, click the button to mute the microphone, t hen the device indicator light turns red. Click the button again to unmute.
8	Rejected the incoming call	When the device is connected to Bluetooth, click the button t o reject the incoming call.
9	Volume up/down	Click the button to adjust the speaker volume.
10	Set/call out preset #1	Press and hold 3 seconds to set preset and short press it to call out the preset.
11	Set/call out preset #2	Press and hold 3 seconds to set preset and short press it to call out the preset.
12	Zoom in/out	Click the button to zoom in/out the image.

Menu Setting

Main Menu

Press menu key on remote control, and use arrow to point item to be selected.

1. **Language:** move arrow to (Language), and press $\leftarrow \rightarrow$ to change the option.



2. **Setup:** move arrow to (Setup), and press HOME to enter the setup interface.

1. Image Style: Default / Standard / Clear /Bright / Soft

2. Auto Framing: On / Off

3. Auto Framing Sen: High / Medium / Low

4. Max Framing: 3X / 5X / 10X


5. Voice Tracking: On / Off

6. Voice Tracking Sen: High / Medium / Low


7. Locate Mode: Smart mode / Pan mode / Movie mode / Discussion mode

8. Prompt Info: On / Off9. Menu Mirror: On / Off

10. Transfers Mode: Bulk / Synchronization

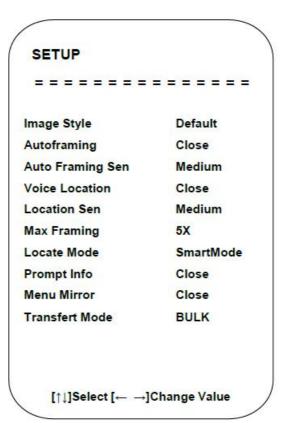

- 3. **Exposure:** move arrow to (Exposure), and press HOME to enter exposure interface.
 - 1. Exposure mode: Auto / Manual / Shutter priority / Bright priority
 - 2. Exposure Compensation (EV): On / Off
 - 3. **Compensation Level: –**7 7(only available in EV mode on)
 - 4. **BLC:** On / Off (only available in auto mode)
 - 5. Anti-Flicker: 50Hz, 60Hz, off (only available in auto, iris priority, bright priority mode)
 - 6. **Gain Limit**: 0 15 (only available in auto, iris priority, bright priority mode)
 - 7. **Dynamic Range**: 1 8, off
 - 8. **Shutter Priority:** 1/30, 1/50, 1/60, 1/90, 1/100, 1/120, 1/180, 1/250, 1/350, 1/500, 1/1000, 1/2000, 1/3000, 1/4000, 1/6000, 1/10000(only available in manual, and shutter priority mode)
 - 9. **Bright:** 0 23 (only available in bright priority)

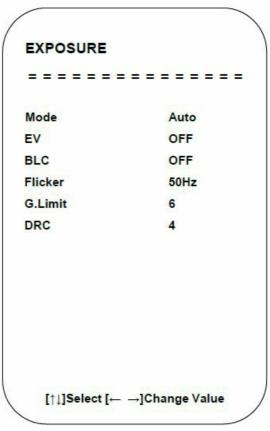

4. Color: move arrow to (Color), and press HOME to enter color page.

1. WB Mode: Auto / Manual / One-push /Sspecified temperature


2. **AWB Sensitivity**: High / Medium / Low (only available in auto mode)

3. **RG tuning:** -10~10

4. Blue Tuning: -10 à 10

5. Saturation: 0~127

6. **Hue:** 0~8

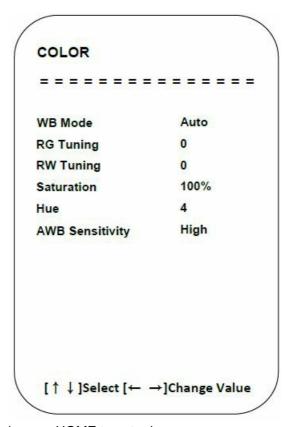

5. Image: move arrow to (Image), and press HOME to enter image page.


1. Luminosity: 0~14

Contrast: 0~ 14
 Sharpness: 0~ 15
 Flip-H: On / Off
 Flip-V: On / Off

6. B&W-Mode: Color / B&W

7. **Gamma:** Default, 0.34, 0.39, 0.47, 0.50


8. Low-Light Mode: On / Off

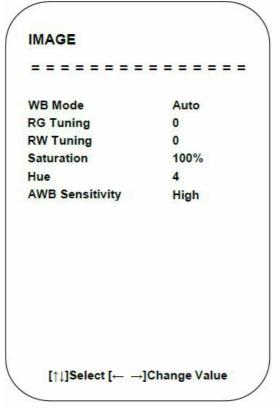

6. Noise Reduction: move arrow to (Noise Reduction), and press HOME to enter Noise Reduction page.

1. 2D NR: Auto, manual 1~7


2. 3D NR: Off, 1~8

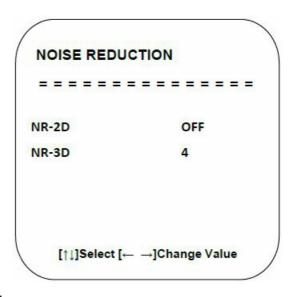

7. **Version:** move arrow to (Version).



- 8. Restore Default: move arrow to (Restore Default), and press HOME to enter Restore Default page.
 - 1. **Restore Default**: Yes / No (color style and video format cannot be restored)

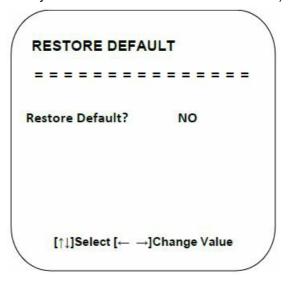

Maintenance and Troubleshooting

Maintenance

- 1. If the camera will not be used for a long time, please turn off the power switch.
- 2. Use a soft cloth or lotion-free tissue to clean the camera body.
- 3. Use a soft dry lint-free cloth to clean the lens. If the camera is very dirty, clean it with a diluted neutral detergent. Do not use any type of solvent or harsh detergent, which may damage the surface.

Troubleshooting

1. No image

- 1. Check whether the power cord is connected, voltage is OK, POWER lamp is lit
- 2. Check whether the camera can "self-test" after startup
- 3. Check that the rotary dial on rear work normally
- 4. Check that the HDMI cable is connected correctly

2. Image is shaky or vibrating

Check that the video output, video monitor cable work normally. 3) Remote controller does not control the camera

- 1. Check that the batter of remote control is placed properly and full of power
- 2. Check that the working statue of the device is normal
- 3. Check whether the menu has been exited. Only after exiting the menu, the remote control can work normally; if the webpage outputs an image, the menu will not be displayed, then the menu will automatically exit and remote control can work on camera after 30 seconds without any operation.

COPYRIGHT NOTICE

The entire contents of this manual, whose copyright belongs to our company may not be cloned, copied or translated in any way without the explicit permission of the company. Product specifications and information referred to in this document are for reference only and as such are subject to updating at any time without prior notice.

info@speechi.net - Tél : +33 (0)3 20 34 74 25 - 12 rue de Weppes 59800 Lille - France SAS au capital de $8000 \in$ - SIRET : 44974266700024 - TVA : FR14449742667 - NAF : 5829C

Documents / Resources



speechi SPE-VA460 Video Conferencing Systems [pdf] User Manual SPE-VA460 Video Conferencing Systems, SPE-VA460, Video Conferencing Systems, Conferencing Systems

Manuals+,