



speedlink RAIT Bluetooth Gamepad User Guide

[Home](#) » [speedlink](#) » speedlink RAIT Bluetooth Gamepad User Guide 




USER GUIDE
RAIT
BLUETOOTH GAMEPAD

Contents

- [1 GET STARTED](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 WARNING SYMBOLS AND MARKINGS](#)
- [4 CONFORMITY NOTICE](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

GET STARTED

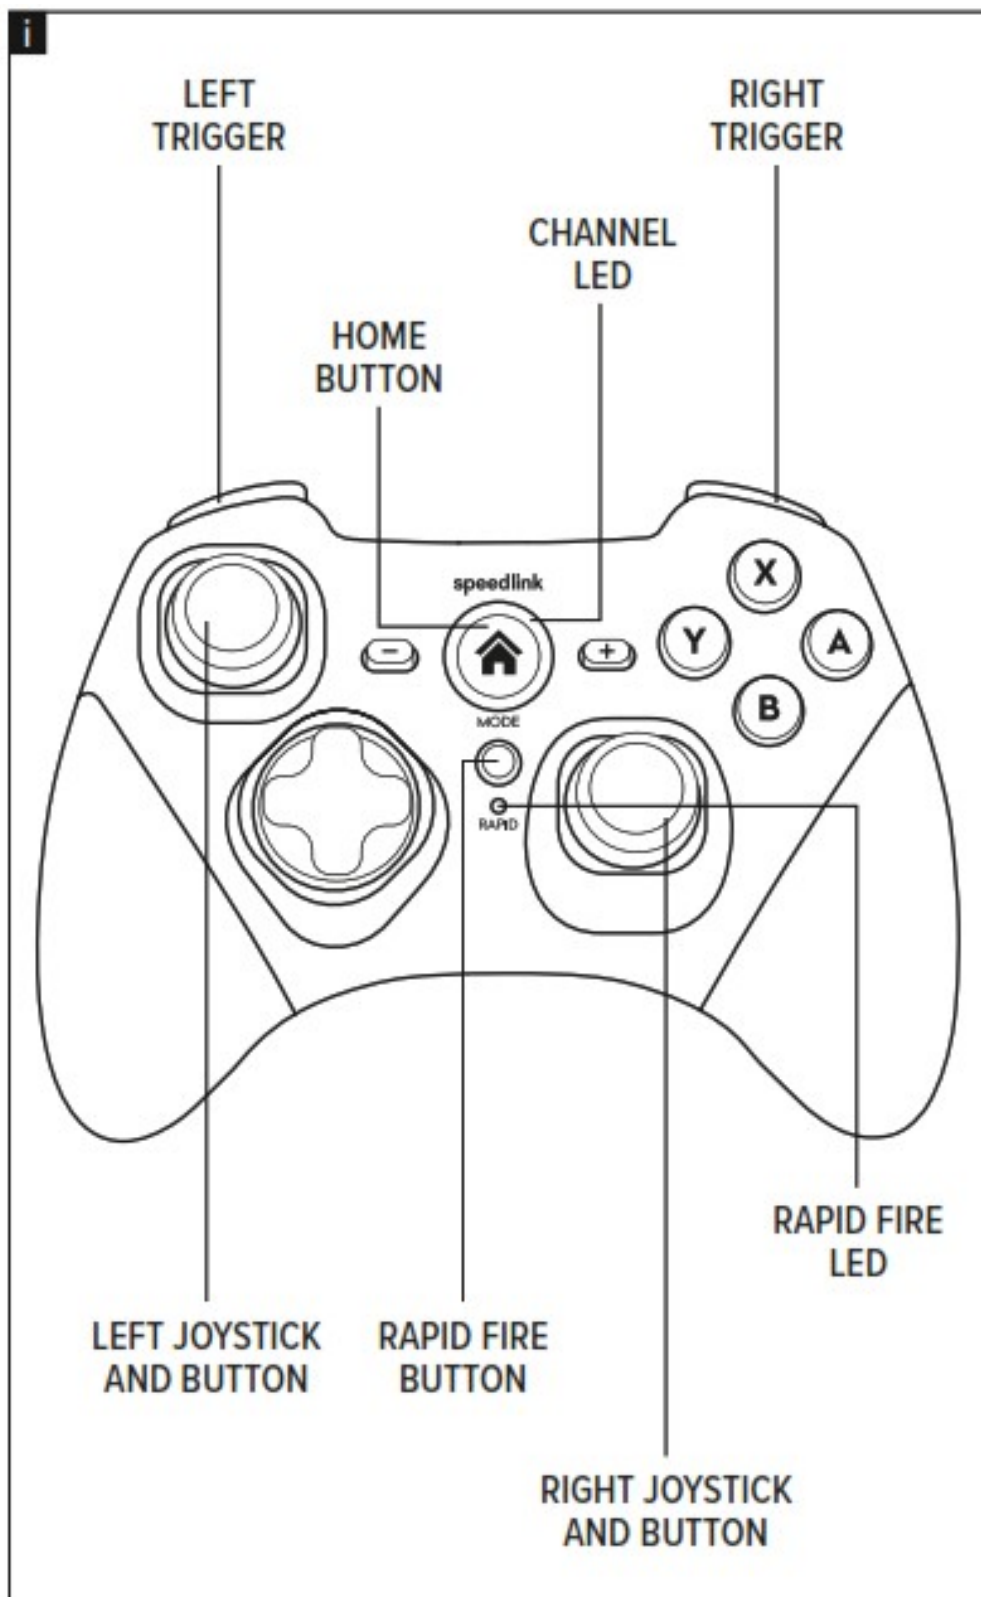


1. FIRST TIME USAGE:

To pair the controller with a Nintendo Switch* console for the first time, press and hold the Y button and home button simultaneously. All four channel LEDs will flash and the controller will pair with the console. Press and hold the home button for any future pairing.

2. CHANNEL LEDs:

The channel LEDs indicate whether the controller is paired with the console. Depending on the channel of each player, different LEDs will light up after pairing.

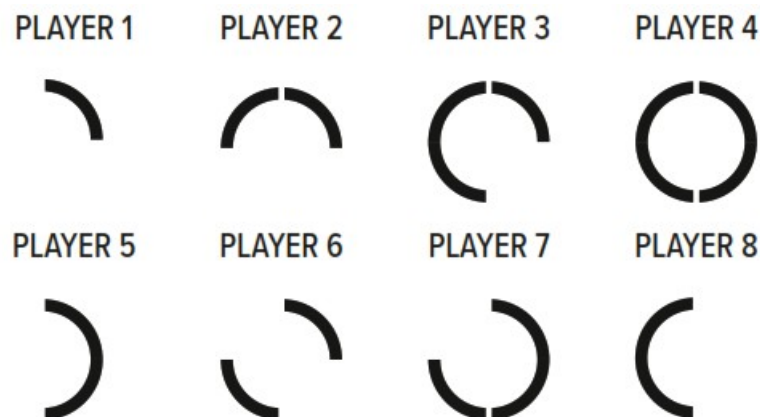

3. **RAPID FIRE MODE:** Press and hold the button you want to set into rapid fire mode, then press the rapid fire button. The rapid fire LED will light up when rapid fire mode is turned on. To turn off rapid fire mode, repeat the procedure.

4. CHANGE MODES:

Controller wirelessly connects to Android phone (tablet) mode:

- (1) When the controller is off.
- (2) Hold B + HOME button to start up, and the LED1 flashes quickly to enter the pairing.
- (3) Turn on the Bluetooth* of the mobile phone, find the Gamepad device, click pair, LED1 is on, the connection is successful.

Controller wirelessly connects to PC mode:

- (1) When the controller is off.
- (2) hold X + HOME button to start up, and LED3 + LED4 flashes quickly to enter the pairing.
- (3) Open the Bluetooth* function of the PC, start searching for new devices, find the Gamepad device, click connect, LED3 + LED4 are on, then the connection is successful.

5. CHARGING:

Connect the controller to a Nintendo Switch* console using the charging cable provided. All four LEDs will flash while the controller is charging. Once the controller is fully charged the LEDs will turn off (if controller is not paired) / the LEDs will stay lit (if the controller is paired). When the battery is running low the channel LEDs will start flashing.

6. TURN OFF CONSOLE:

To turn off the console, press and hold the home button and select the power off option on screen.

Technical support: www.speedlink.com
Safety instructions: www.speedlink.com



WEEE: Do not dispose of the product with household waste. Check your local waste disposal options and

take to a recycling point.

Improper storage/disposal may harm the environment and/or human health. Zeitfracht Median declares that the product conforms to the requirements listed under the 'conformity notice'.



This product contains a lithium-ion battery. Before disposal, make sure that the batteries have no remaining charge. Do not dispose of with household waste and check your local waste disposal options. Carefully remove the batteries and take them to a collection point or shop.

INTENDED USE

This product is intended to be used as an input device for connecting to a video game console and is for indoor home/office use only. It contains no user-serviceable parts. Do not disassemble it and stop using it immediately if damaged. Zeitfracht Median GmbH accepts no liability whatsoever for any damage to this product or injuries caused due to careless or improper use or for purposes for which it is not intended.

Please keep this information for later reference.

SAFETY INSTRUCTIONS

IMPORTANT SAFETY INSTRUCTIONS



Please note that the failure to observe these instructions can cause product damage, explosion, fire and/or electric shocks!

- Only use this device as indicated in the user guide. Do not open or repair them.
- Do not expose the devices to liquids, heat or cold.
- Do not use the devices in a damp environment. Clean the devices with a dry cloth.
- Keep the devices and all loose parts away from children, pets and unauthorized persons.
- Only use the devices with the appropriate provided accessories/cables.
- Disconnect cables from the devices if they will not be used for a long time. When disconnecting the cables, don't pull on the cord but on the plug.
- Don't use the cables in any way other than mentioned in the user guide; don't bend, cut, extend, knot or step on them.
- Do not insert any foreign objects into the openings of the devices.
- If the devices are damaged in any way or gets too hot, stop using them immediately.
- Take caution when using devices that emit radio signals if you have a pacemaker or are dependent on other sensitive electronic life aids.

Safety instructions in further languages: www.speedlink.com.

WARNING SYMBOLS AND MARKINGS

Extended use of input devices may cause health problems such as discomfort or pain; as such, take regular breaks and consult a doctor if problems persist.

CONFORMITY NOTICE

Operation of the device (the devices) may be affected by strong static, electrical or high-frequency fields (radio installations, mobile telephones, microwaves, electrostatic discharges). If this occurs, try increasing the distance from the devices causing the interference.

Conformity notice in further languages: www.speedlink.com.

CONFORMITY NOTICE

IMPORTER/MANUFACTURER:

Zeitfracht Median GmbH I'm Dorf 5 27404 Esslingen Deutschland

Phone: (+49) 4287 9244-0

PRODUCT DETAILS:

Product no.: SL-330402-RRBK

Type description: RAIT Bluetooth* Gamepad – for Nintendo Switch*, rubber-black

THE PRODUCT COMPLIES WITH THE FOLLOWING DIRECTIVES:

RED 2014/53/EU

RoHS 2011/65/EU.

For a full declaration of conformity, the latest user guide, FAQ or further information, please visit

www.speedlink.com.

RF frequency range: 2402MHz – 2480MHz

RF power transmission: < 8dBm

All rights reserved. Speedline, the Speedline word mark and the Speedline swoosh are registered trademarks of Zeitfracht GmbH & Co. Ka.

*Windows and the Windows logo are registered trademarks of Microsoft Corporation.

Android is a registered trademark of Google Inc.

*Nintendo and Nintendo Switch are registered trademarks of Nintendo Co., Ltd. Bluetooth is a registered trademark owned by Bluetooth SIG, Inc.

The Instagram logo is a registered trademark/service mark of Instagram LLC. The

Facebook logo is a registered trademark of Facebook Inc. The Tikor logo is a registered trademark of Byte Dance.

All trademarks are the property of their respective owner.

Technical specifications are subject to change. Information contained herein is subject to change without prior notice. Zeitfracht Median GmbH shall not be made liable for any

errors that may appear. Please keep this information for later reference. This product is neither licensed nor endorsed by Nintendo Co., Ltd.


Zeitfracht Median GmbH, I'm Dorf 5, 27404 Esslingen, GERMANY





www.speedlink.com   



Documents / Resources

	speedlink RAIT Bluetooth Gamepad [pdf] User Guide RAIT Bluetooth Gamepad, RAIT, Gamepad, RAIT Gamepad, Bluetooth Gamepad
---	---

References

-  [speedlink](#)
-  [speedlink](#)

Manuals+.