



**Speedy Bee Stack
F405V3
BLS 50 A 30 x 30
F405 V3 BLS 50A 30×30 Stack
User Manual V1.0**

Contents


- [1 Part 1 – OverView](#)
- [2 Option 2 – SpeedyBee F405 V3 Flight Controller](#)
- [3 Part 3 – SpeedyBee BLS 50A 4-in-1 ESC](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)

Part 1 – OverView

Specs Overview


Product Name	SpeedyBee F405 V3 BLS 50A 30×30 Stack
Flight Controller	SpeedyBee F405 V3
ESC	SpeedyBee BLS 50A 4-in-1 ESC
Bluetooth	Supported. For FC & ESC parameter settings
Wireless FC Firmware Flashing	NOT Supported
Wireless Blackbox Dwonload & Analysis	NOT Supported
Power Input	3-6S LiPo
Mounting	30.5 x 30.5mm 4mm hole size
Dimension	45.6mm(L) x 44mm(W) x 18.3mm(H)
Weight	23.4g

Dimensions

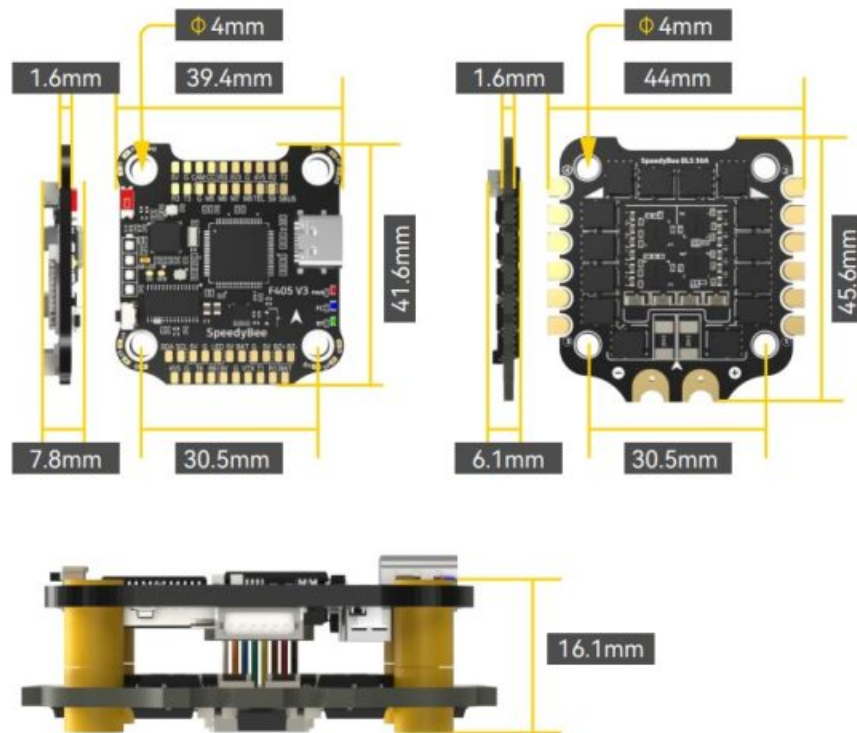


Package

Option 1 – SpeedyBee F405 V3 50A 30×30 Stack

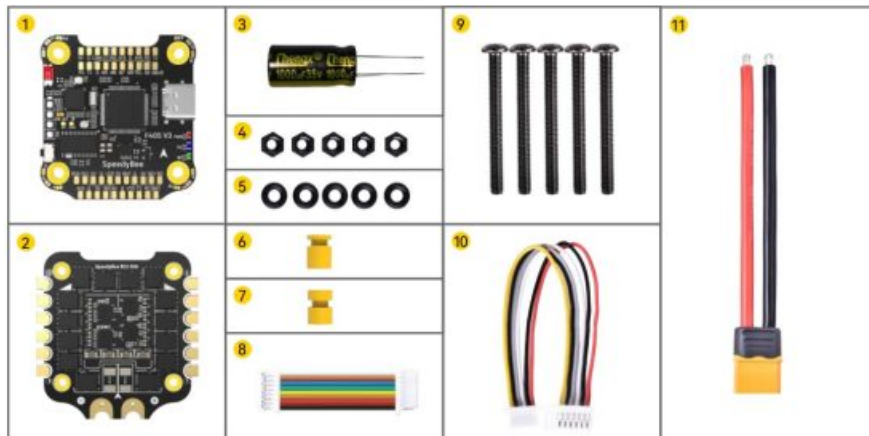


1. SpeedyBee F405 V3 Flight Controller x 1
2. SpeedyBee BLS 50A 4-in-1 ESC x 1
3. 35V 1000uF Low ESR Capacitor x 1
4. M3 Nylon Nut x 5
5. M3 silicone O Ring x 5
6. M3*8mm Silicone Grommets(for FC) x 1
7. M3*8.1mm Silicone Grommets (for ESC) x 1
8. SH 1.0mm 25mm-length 8pin Cable(for FC-ESC connection) x 1
9. M3*30mm Iner-hexagon Screws x 5
10. DJI 6pin Cable(80mm) x 1
11. XT60 Power Cable (100mm) x 1

Option 2 – SpeedyBee F405 V3 Flight Controller

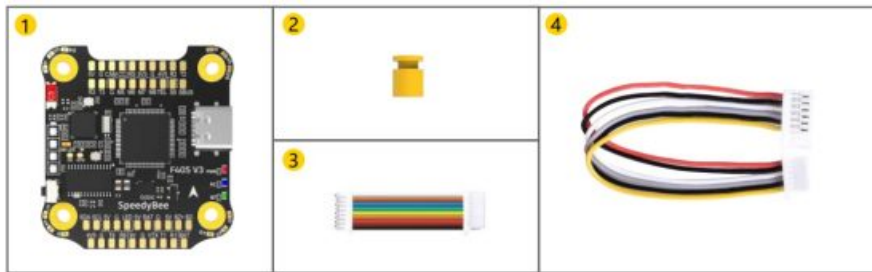

1. SpeedyBee F405 V3 Flight Controller x 1
2. M3*8mm Silicone Grommets (for FC) x 1
3. SH 1.0mm 25mm-length 8pin Cable(for FC-ESC connection) x 1
4. DJI 6pin Cable(80mm) x 1

Option 3 – SpeedyBee BLS 50A 4-in-1 ESC

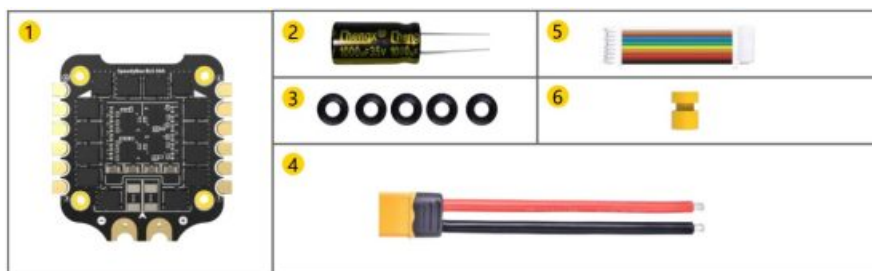


1. SpeedyBee BLS 50A 4-in-1 ESC x 1
2. 35V 1000uF Low ESR Capacitor x 1
3. M3 silicone O Ring x 5
4. XT60 Power Cable (100mm) x 1
5. SH 1.0mm 25mm-length 8pin Cable(for FC-ESC connection) x 1
6. M3*8.1mm Silicone Grommets (for ESC) x 1

FC & ESC Connection

Use the 8-pin cable in the package to connect the FC and the ESC.
Or solder 8 wires directly to the 8 pads on each end.

Method 1 – Using 8-pin cable

Use any end of the 8-pin JST cable to connect the FC to the ESC.

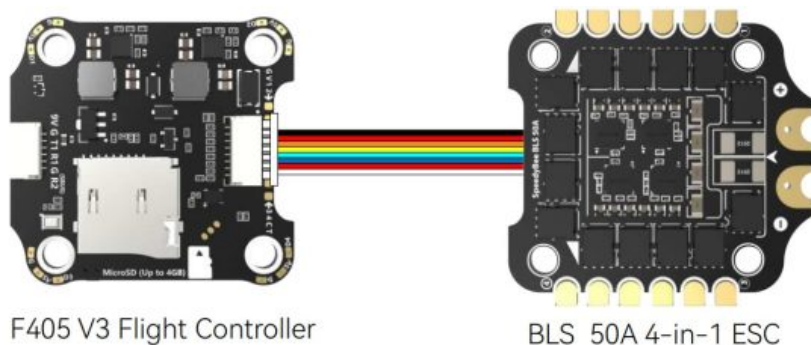


F405 V3 Flight Controller

BLS 50A 4-in-1 ESC

Method 2 – Direct soldering

 
Solder 8 wires to the 8 pads on each end referring to the pad definition below.



1. Insert a USB A to TYPE-C cable to your PC.
2. Press and hold the BOOT button, insert the USB cable into the flight controller, then release the BOOT button.
3. Open Betaflight/INAV configurator on the PC, go to the 'Firmware Flashing page, choose the target 'SPEEDYBEEF405V3' and flash.

[B]. When the FC is powered on and in standby mode, the BOOT button can be used to controller the LED strips connected to LED1-LED4 pads on the corners. By default, short-press the BOOT button to cycle the LED displaying mode. Long-press the BOOT button to switch between SpeedyBee-LED mode and BF-LED mode. Under BF-LED mode, all the LED1-LED4 strips will be controlled by the Betaflight firmware.


FC's Peripheral Connection

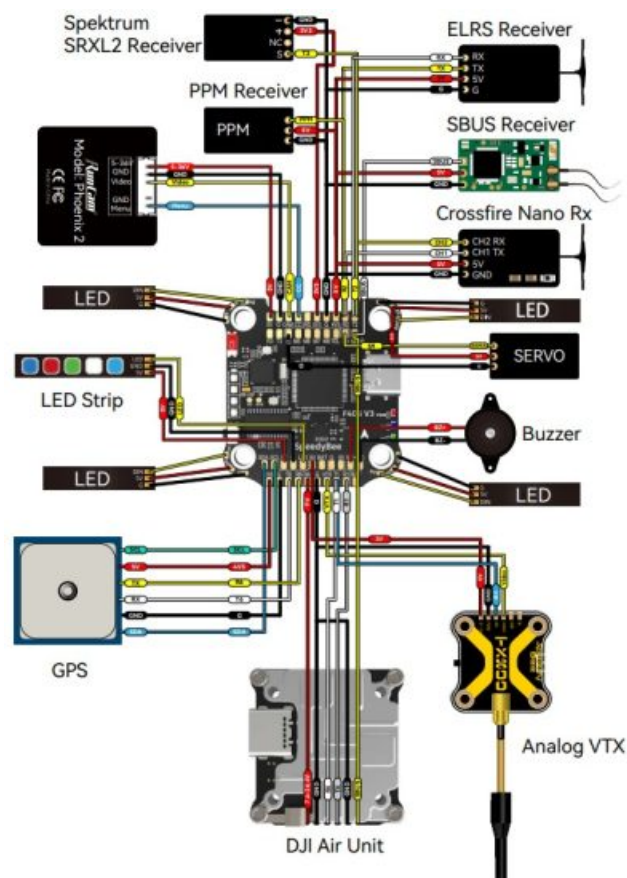

Importance notice for SBUS receiver

When using an SBUS receiver, the SBUS signal wire of the receiver must be connected to the SBUS pad on the front side of the flight controller (this pad internally uses UART2).


If you are also using the DJI Air Unit and have connected it to the flight controller through the dedicated 6-pin harness on the back, you will need to disconnect the SBUS signal wire from the Air Unit harness. Failure to do so will prevent the SBUS receiver from being properly recognized by the flight controller. You can use tweezers to pick out the SBUS wire from the 6-pin harness connector (or directly cut this wire) and insulate the exposed part of the wire carefully.

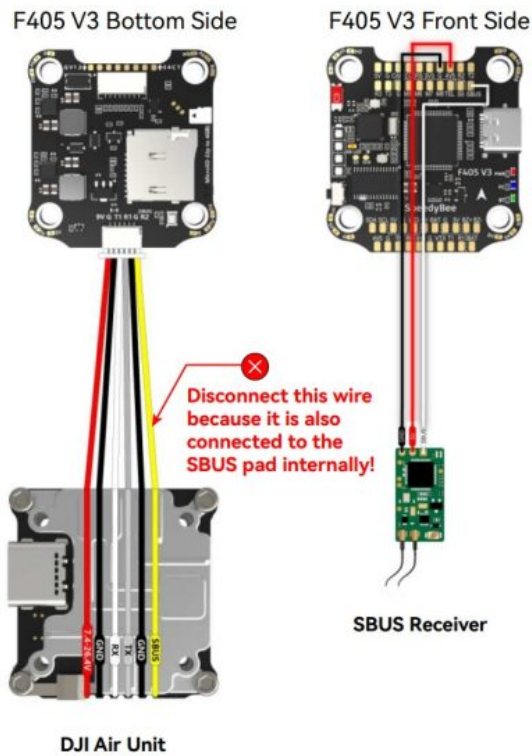

Importance notice for ELRS receiver

We recommend connecting the ELRS receiver's TX and RX to the T2 and R2 pads on the flight controller. However, when using the DJI Air Unit simultaneously, some ELRS receivers may not be recognized properly by the flight controller. If you encounter this issue, you need to disconnect the SBUS signal wire from the Air Unit harness.

You can use tweezers to pick out the SBUS wire from the 6-pin harness connector (or directly cut this wire) and insulate the exposed part of the wire carefully.

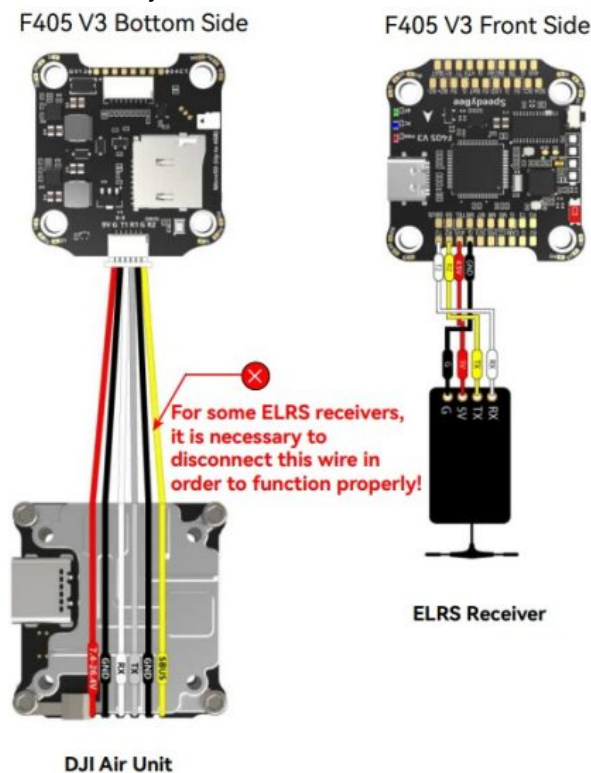


Cable Connection vs DJI O3 Air Unit

Use 6-pin cable comes with the O3 Air Unit



Cable Connection vs RunCam Link/ Caddx Vista Air Unit

Use 6-pin cable comes with the F405 V3 stack (See the accessory No.10 in the package section)

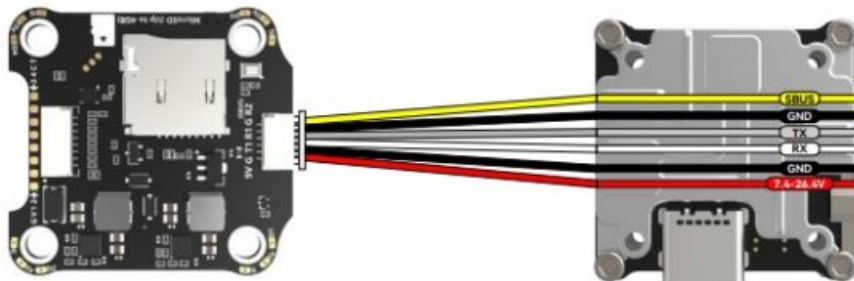

Cable Connection Vs DJI Air Unit V1

Use 6-pin cable comes with the F405 V3 stack

(See the accessory No.10 in the package section)




App & FC Configuration

■ Get the SpeedyBee App

Search 'SpeedyBee' on Google Play or App Store. Or download the Android .apk file on our website:

<https://www.speedybee.com/download>.

■ FC Configuration

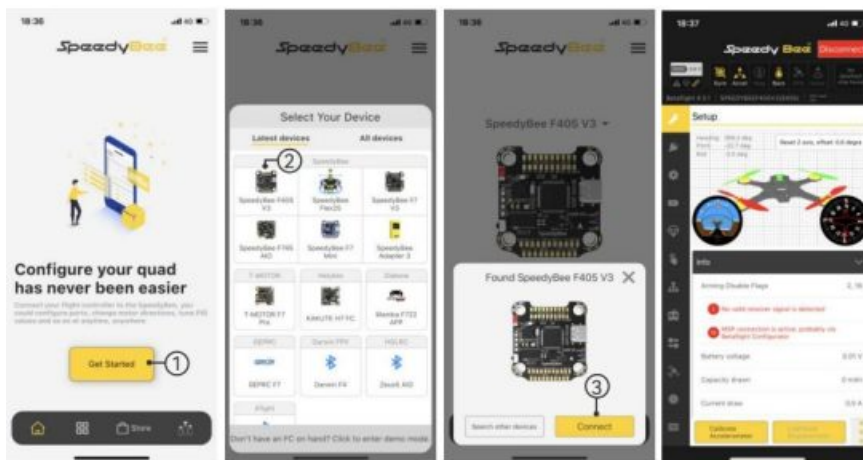


FC Firmware Update

SpeedyBee F405 V3 flight controller does not support wireless firmware flashing, so please flash firmware for it on your PC following the steps below:

1. Connect the flight controller to the PC with a USB cable

- Open Betaflight/ INAV configurator on your PC. Take Betaflight configurator as an example, go to the 'Firmware Flashing' page, choose the target SPEEDYBEEF405V3' and flash

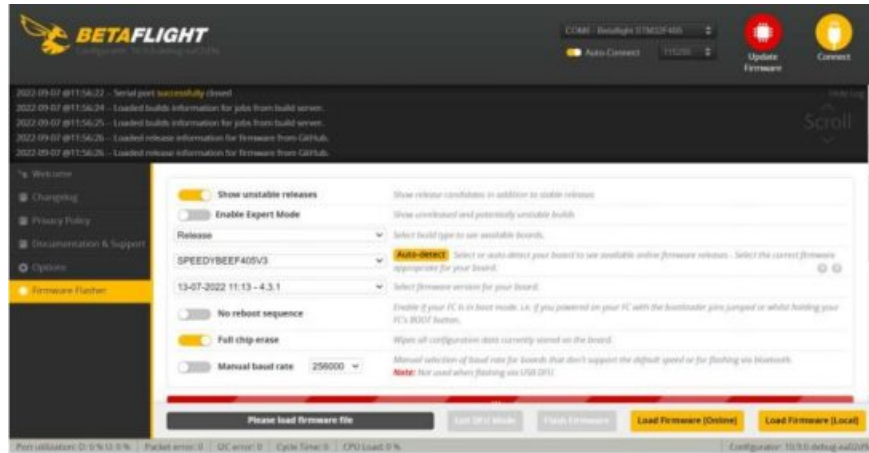


Specifications

Product Name	SpeedyBee F405 V3 30×30 Flight Controller
MCU	STM32F405
IMU(Gyro)	BMI270
USB Port Type	Type-C
Barometer	Built-in
OSD Chip	AT7456E chip
BLE Bluetooth	Supported. Used to connect with the SpeedyBee App for flight controller and ESC parameter configuration. Please make sure the MSP switch on UART 4 is turned on and set to a baud rate of 115200, otherwise Bluetooth functionality will not be available.
WIFI	Not supported
DJI Air Unit Connection Way	Two ways supported: 6-pin connector or direct soldering.
6-pin DJI Air Unit Plug	Supported. Completely compatible with DJI O3/RunCam Link/Caddx Vista/DJI Air Unit V1, no wire is needed to be changed.
Blackbox MicroSD Card Slot	*Betaflight firmware requires the type of the microSD card to be either Standard (SDSC) or High capacity (SDHC), so extended capacity cards (SDXC) are not supported (Many high-speed U3 cards are SDXC). Also the card MUST be formatted with the FAT16 or FAT32 (recommended) filesystems. So, you could use any SD card less than 32GB, but the Betaflight can only recognize 4GB maximum. We suggest you use this 3rd party formatting tool and choose 'Overwrite format' then format your card. Also check out here for the recommended SD cards or buy the tested cards from our store.
Current Sensor Input	Supported. For SpeedyBee BLS 50A ESC, please set scale = 386 and Offset = 0.
Power Input	3-6S LiPo. The flight controller is powered through the G, V wires of the 8pin cable or G, V pads from the bottom side of the flight controller.


5V Output	9 groups of 5V output, four +5V pads and 1 BZ+ pad(used for Buzzer) on front side, and 4x LED 5V pads. The total current load is 2A.
9V Output	2 groups of 9V output, one +9V pad on front side and other included in a connector on bottom side. The total current load is 2A.
3.3V Output	Supported. Designed for 3.3V-input receivers. Up to 500mA current load.
4.5V Output	Supported. Designed for receiver and GPS module even when the FC is powered through the USB port. Up to 1A current load.
ESC Signal	M1 – M4 on bottom side and M5-M8 on front side.
UART	6 sets(UART1, UART2, UART3, UART4(Dedicated for Bluetooth connection)), UART5(Dedicated for ESC telemetry),UART6
ESC Telemetry	UART R5(UART5)
I2C	Supported. SDA & SCL pads on front side. Used for magnetometer, sonar, etc .
Traditional Betaflight LED Pad	Supported. 5V, G and LED pads on bottom of the front side. Used for WS2812 LED controlled by Betaflight firmware.
Buzzer	BZ+ and BZ- pad used for 5V Buzzer
BOOT Button	Supported. [A]. Press and hold BOOT button and power the FC on at the same time will force the FC to enter DFU mode, this is for firmware flashing when the FC gets bricked.[B]. When the FC is powered on and in standby mode, the BOOT button can be used to controller the LED strips connected to LED1-LED4 connectors on the bottom side. By default, short-press the BOOT button to cycle the LED displaying mode. Long-press the BOOT button to switch between SpeedyBee-LED mode and BF-LED mode. Under BF-LED mode, all the LED1-LED4 strips will be controlled by Betaflight firmware.
RSSI Input	Supported. Named as RS on the front side.
Smart Port / F.Port	Not supported
Supported Flight Controller Firmware	BetaFlight(Default), INAV (INAV firmware can only use Multishot (recommended) and OneShot125. Please note that DShot is not supported.)
Firmware Target Name	SPEEDYBEEF405V3
Mounting	30.5 x 30.5mm(4mm hole diameter)
Dimension	41.6(L) x 39.4(W) x 7.8(H)mm
Weight	9.6g

Part 3 – SpeedyBee BLS 50A 4-in-1 ESC

Layout

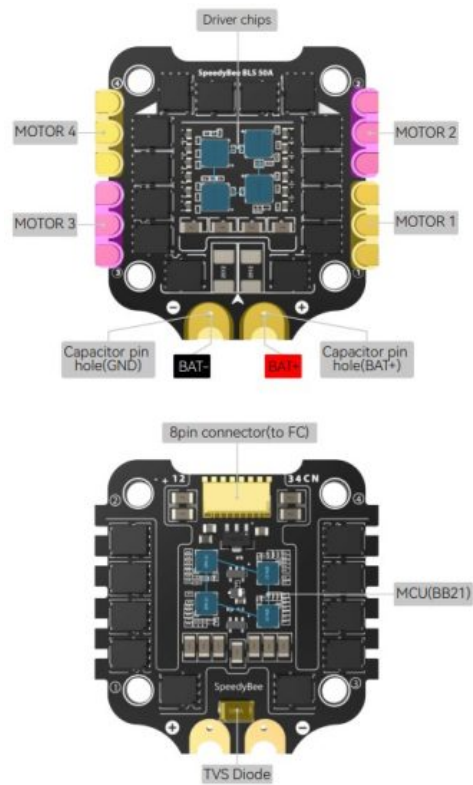


Connection with Motors & Power Cable

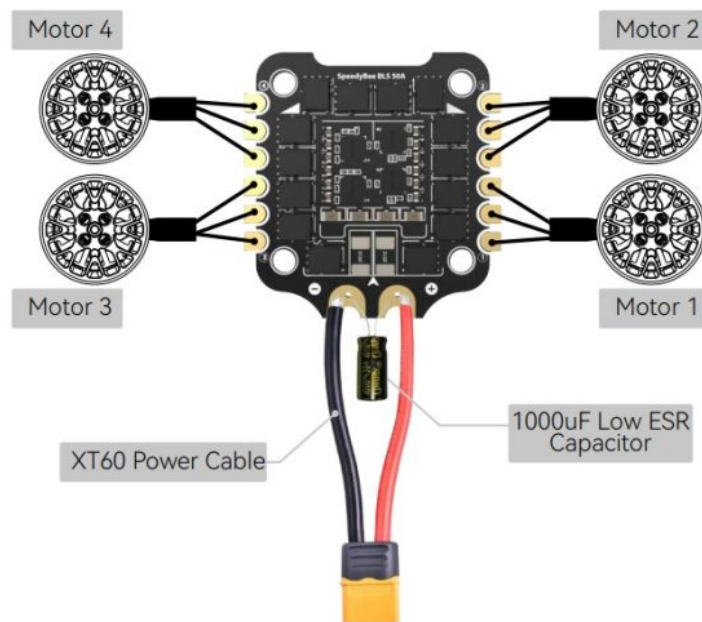

■ **Note:** In order to prevent the stack from being burnt out by voltage spikes on powering up, it is strongly recommended to use the Low ESR capacitor in the package.

ESC Configuration

■ You could use SpeedyBee app to completely configure this 8-bit ESC. The steps are as follows:

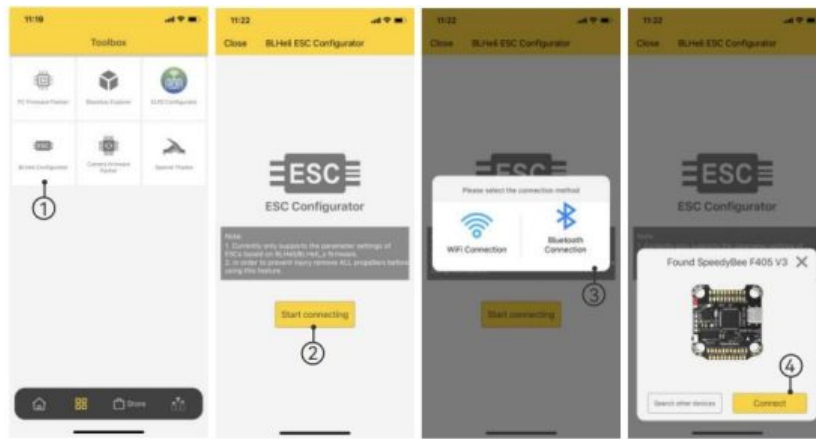

■ You could also use PC configurators to configure this ESC. We recommend the ESC Configurator. Please use Google Chrome browser and visit: <http://www.esc-configurator.com>.

ESC Firmware Update


■ This 8-bit 50A ESC can run BLHeliS or Bluejay firmware. It is loaded with BLHeliS firmware by default. You could also flash it to Bluejay firmware which can support RPM filtering and Bi-directional Dshot. Firmware flashing steps are as follows:

Remove all the propellers from your drone.

- Ensure that the flight controller is connected properly to the ESC, then power up the drone. This step ensures that the ESC starts up correctly.
- Connect the flight controller to the computer using a USB Type-C cable.
- Open the Chrome browser and visit the following website: <https://www.esc-configurator.com/>
- Follow the firmware flashing steps as shown in the screenshots below.

Important note: On the 6th interface, the “ESC” type must be selected as “J-H-50.”



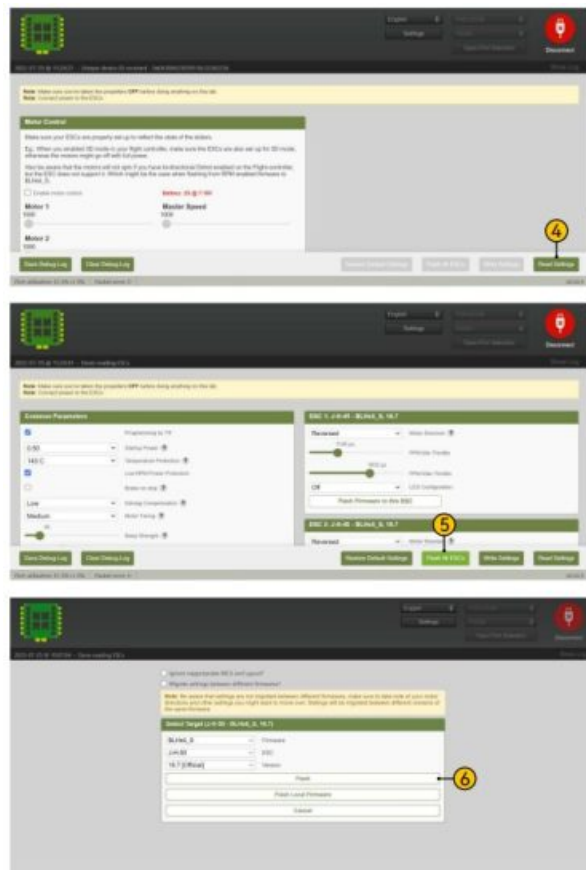


Specifications

Product Name	SpeedyBee BLS 50A 30x30 4-in-1 ESC
Firmware	BLHeli_S JH50
Wireless Configuration	Full Configuration Supported in the SpeedyBee app
PC Configurator Download Link	https://esc-configurat.or.com/
Continuous Current	50A * 4
Burst Current	55A(5S)
TVS Protective diode	Yes
External Capacitor	1000uF Low ESR Capacitor(In the package)
ESC Protocol	DSHOT300/600
Power Input	3-6S LiPo
Power Output	VBAT
Current Sensor	Support (Scale=386 Offset=0)
Mounting	30.5 x 30.5mm(4mm hole diameter)
Dimension	45.6(L) * 44(W) * 6.1mm(H)
Weight	13.8g

Documents / Resources

	<p>SpeedyBee F405 V3-BLS 50A V3 Flight Controller [pdf] User Manual</p> <p>F405 V3, BLS 50A, F405 V3-BLS 50A V3 Flight Controller, F405 V3-BLS 50A, V3 Flight Controller, Flight Controller, Controller</p>
---	--

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.