


SpeedyBee F7 35A BLS Mini Flight Controller Stack User Manual

[Home](#) » [SpeedyBee](#) » SpeedyBee F7 35A BLS Mini Flight Controller Stack User Manual 

SpeedyBee F7 35A BLS Mini Flight Controller Stack

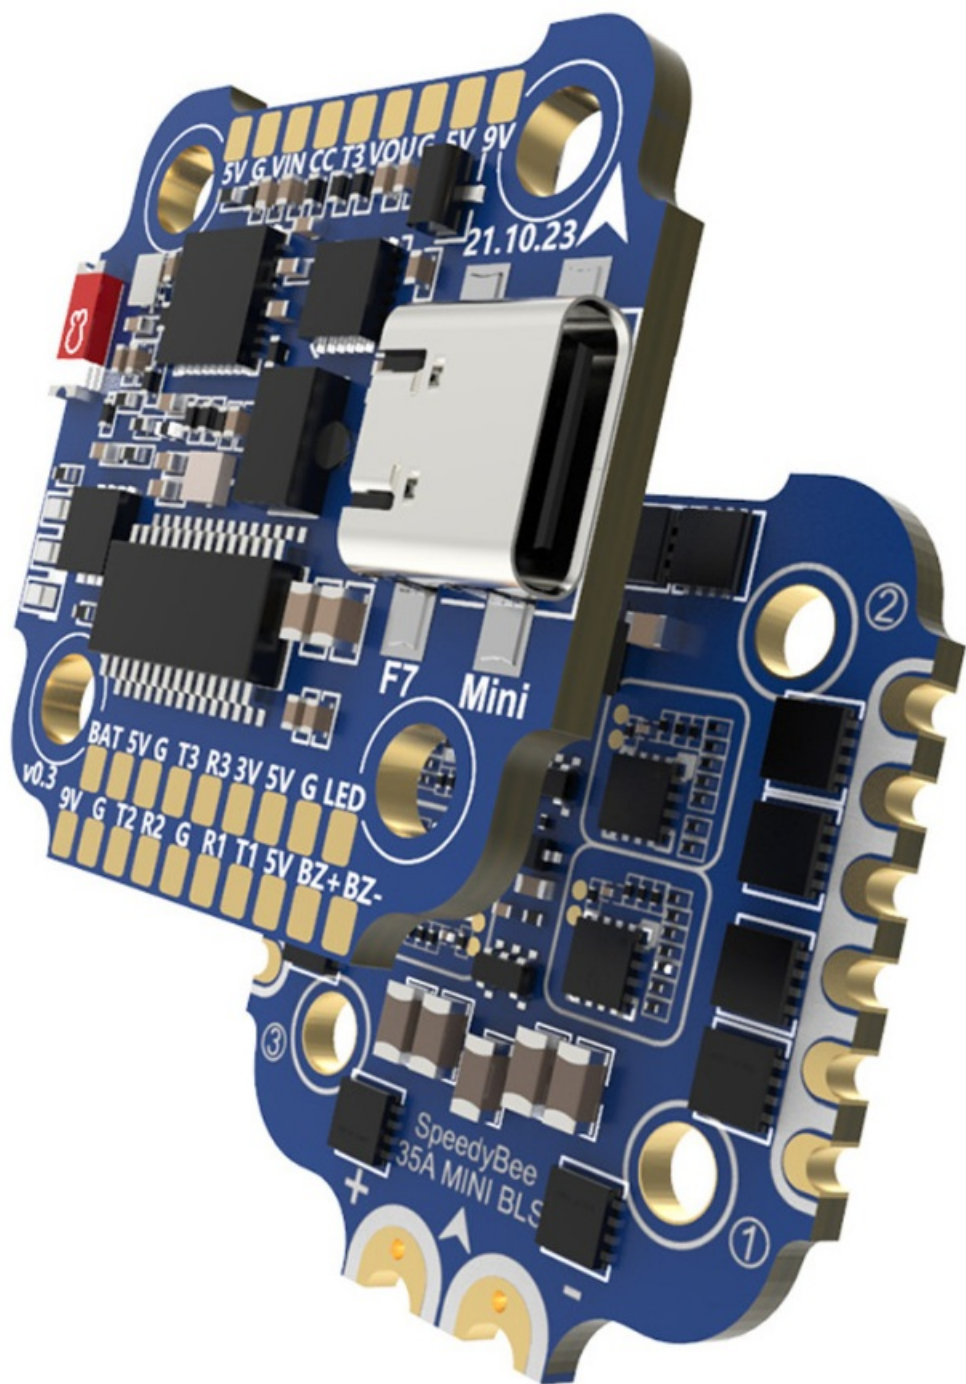

Contents

1 Overview

1.1 Specs Overview

2 Dimensions

2.1 Package

2.2 FC & ESC Connection

3 SpeedyBee F7 Mini Flight Controller

3.1 Layout

3.2 FC's Peripheral Connection

3.3 APP

3.4 FC Firmware Update

4 Parameters

5 SpeedyBee 35A BLS 4-in-1 ESC

5.1 Layout

5.2 Connection with Motors & Power Cable

5.3 ESC Configuration

5.4 ESC Firmware Update

5.5 Parameters

6 Documents / Resources

6.1 References




7 Related Posts

Overview

Specs Overview

Product Name	SpeedyBee F7 35A BLS Mini Stack
Flight Controller	SpeedyBee F7 Mini
ESC	SpeedyBee 35A BLS Mini 4-in-1 ESC
Bluetooth	Supported. For FC & ESC parameter setting
Wireless FC Firmware Flashing	Not supported
Wireless Blackbox Download	Not supported
Power Input	3-6S LiPo
Mounting	20 x 20mm ø3.5mm hole size, Compatible with M2 and M3 screws/Silicone grommets
Dimension	32mm(L) x 35mm(W) x 13mm(H)
Weight	12.7g


Dimensions

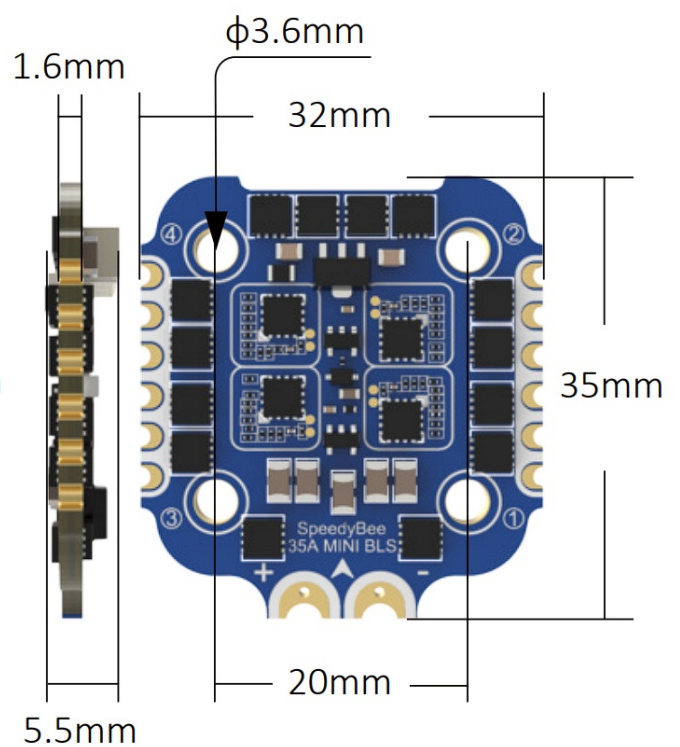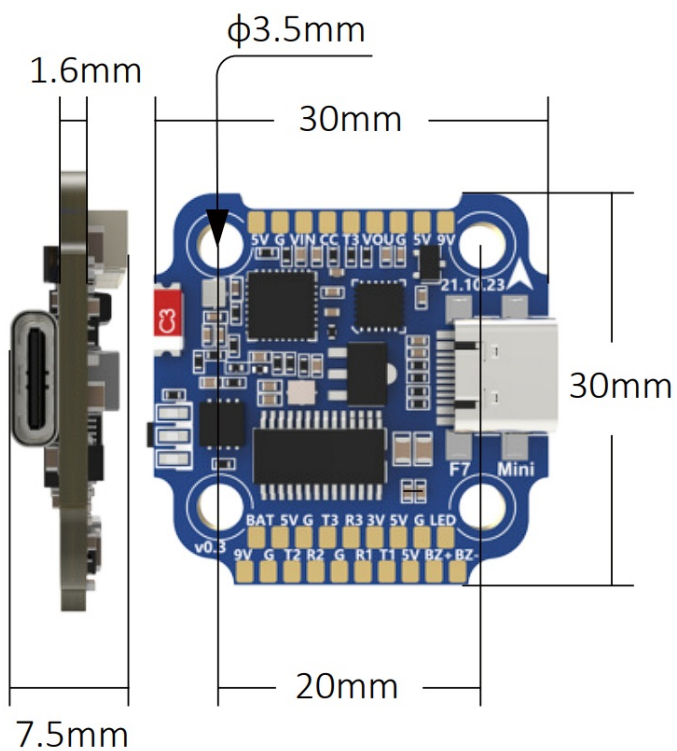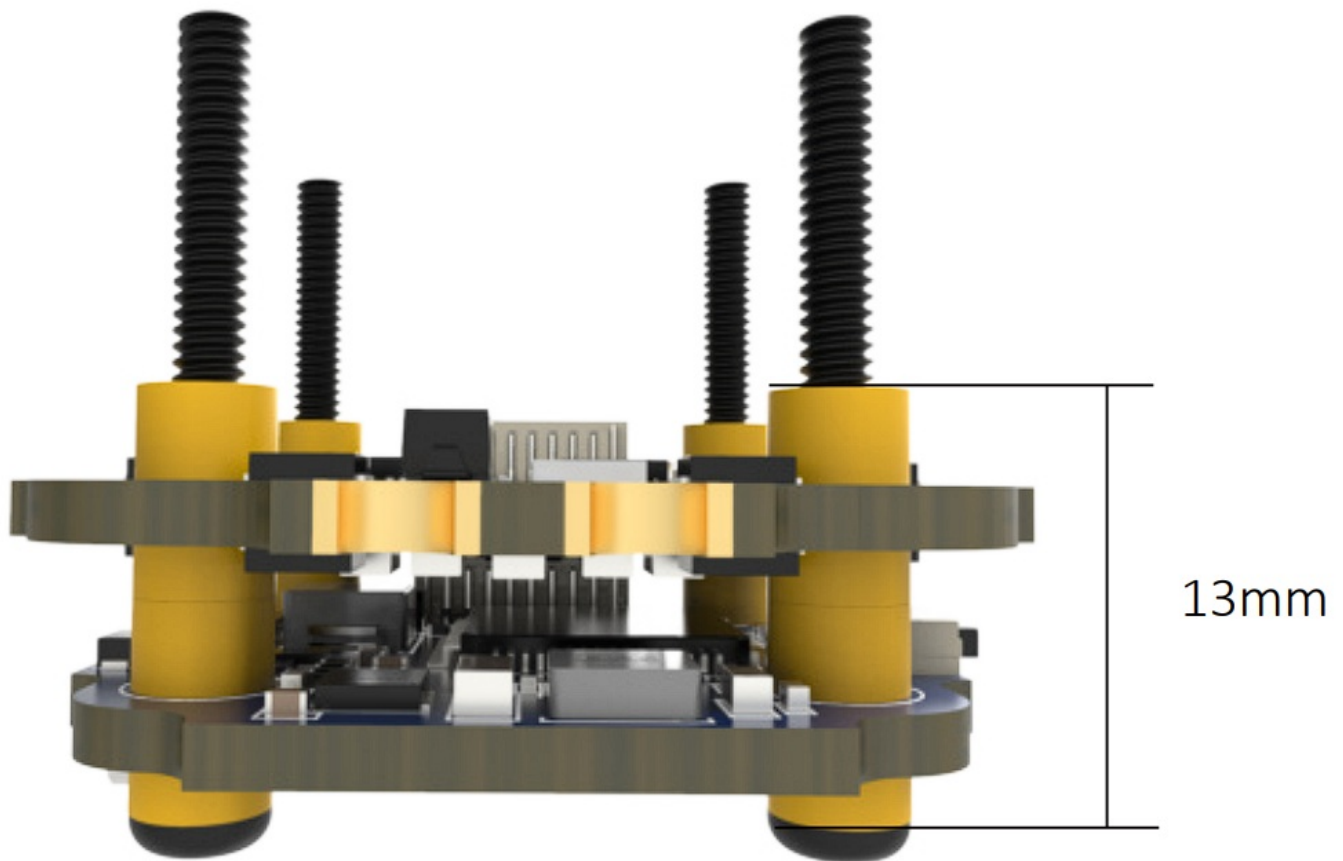

Package

- SpeedyBee F7 Mini Flight Controller x 1
- SpeedyBee 35A BLHeli_S Mini 4-in-1 ESC x 1
- Manual & App Download Card x 1
- XT30 Power Cable(Length: 7cm) x 1
- Spin JST cable(For FC & ESC Connection) x 1


- 35V 470uF Capacitor x 1
- M2 Accessories
 - M2(Diameter) * 20mm(Length) Screw x 4
 - M2(Diameter) * 25mm(Length) Screw x 4
 - M2(Hole Diameter) * 6.6mm(Height) Anti-vibration Silicone Grommets x 9
 - M2 Silicone O-Ring x 5
 - M2 Nylon Hex Nut x 5
- M3 Accessories
 - M3(Diameter) * 20mm(Length) Screw x 4
 - M3(Diameter) * 25mm(Length) Screw x 4
 - M3(Hole Diameter) * 6.6mm(Height) Anti-vibration Silicone Grommets x 9
 - M3 Silicone O-Ring x 5
 - M3 Nylon Hex Nut x 5

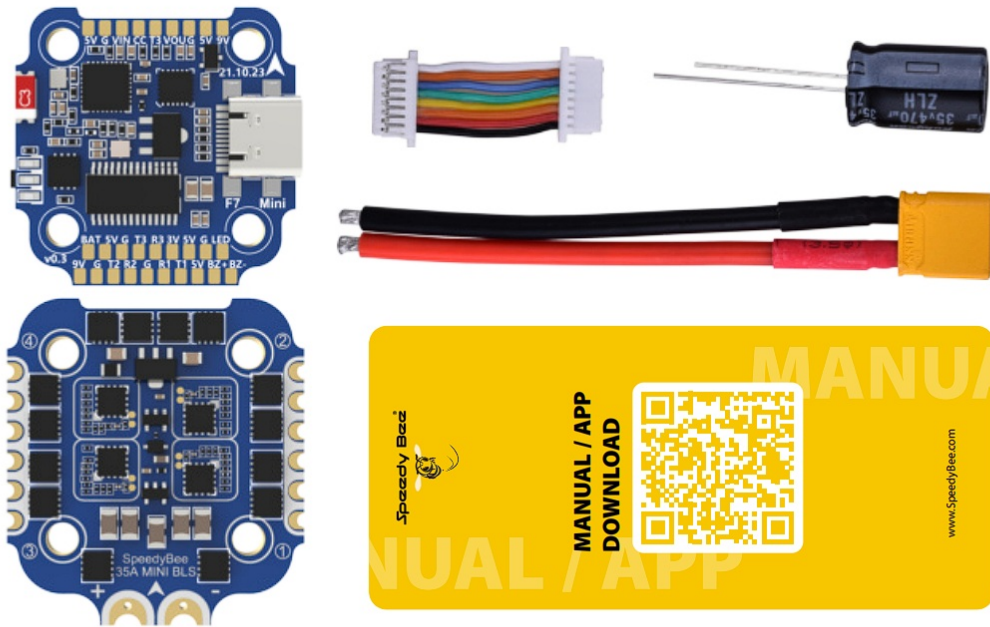

M2 Accessories

The image displays a variety of M2 hardware components. On the left, there are 12 yellow hex nuts arranged in a 3x4 grid. To their right are 10 black hex nuts, with 6 in a 2x3 grid and 4 in a single row below. Below the yellow nuts are 4 black hex bolts. To the right of these are 4 black hex bolts with black hex washers placed over their heads. The entire set of components is arranged neatly on a white background within a rounded rectangular frame.


M3 Accessories

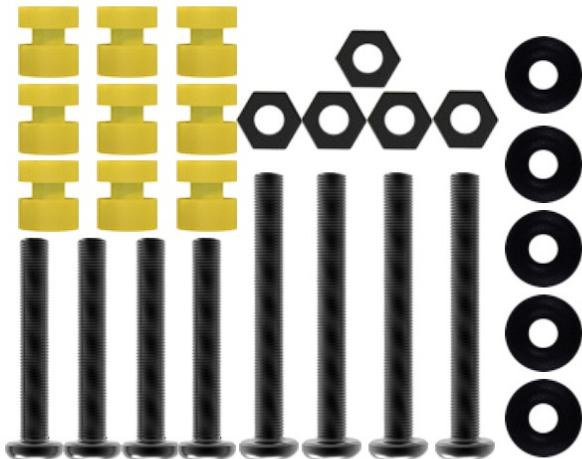

The image displays a variety of M3 hardware components. On the left, there are three vertical stacks of yellow hex nuts. In the center, there are four black hex nuts arranged in a row, with one additional black hex nut positioned above the middle two. To the right of the nuts, there are four black hex bolts standing vertically. On the far right, there are five black flat washers stacked vertically. The entire collection is presented against a white background within a rounded rectangular frame.


FC & ESC Connection


Use any end of the 8-pin JST cable to connect the FC to the ESC.

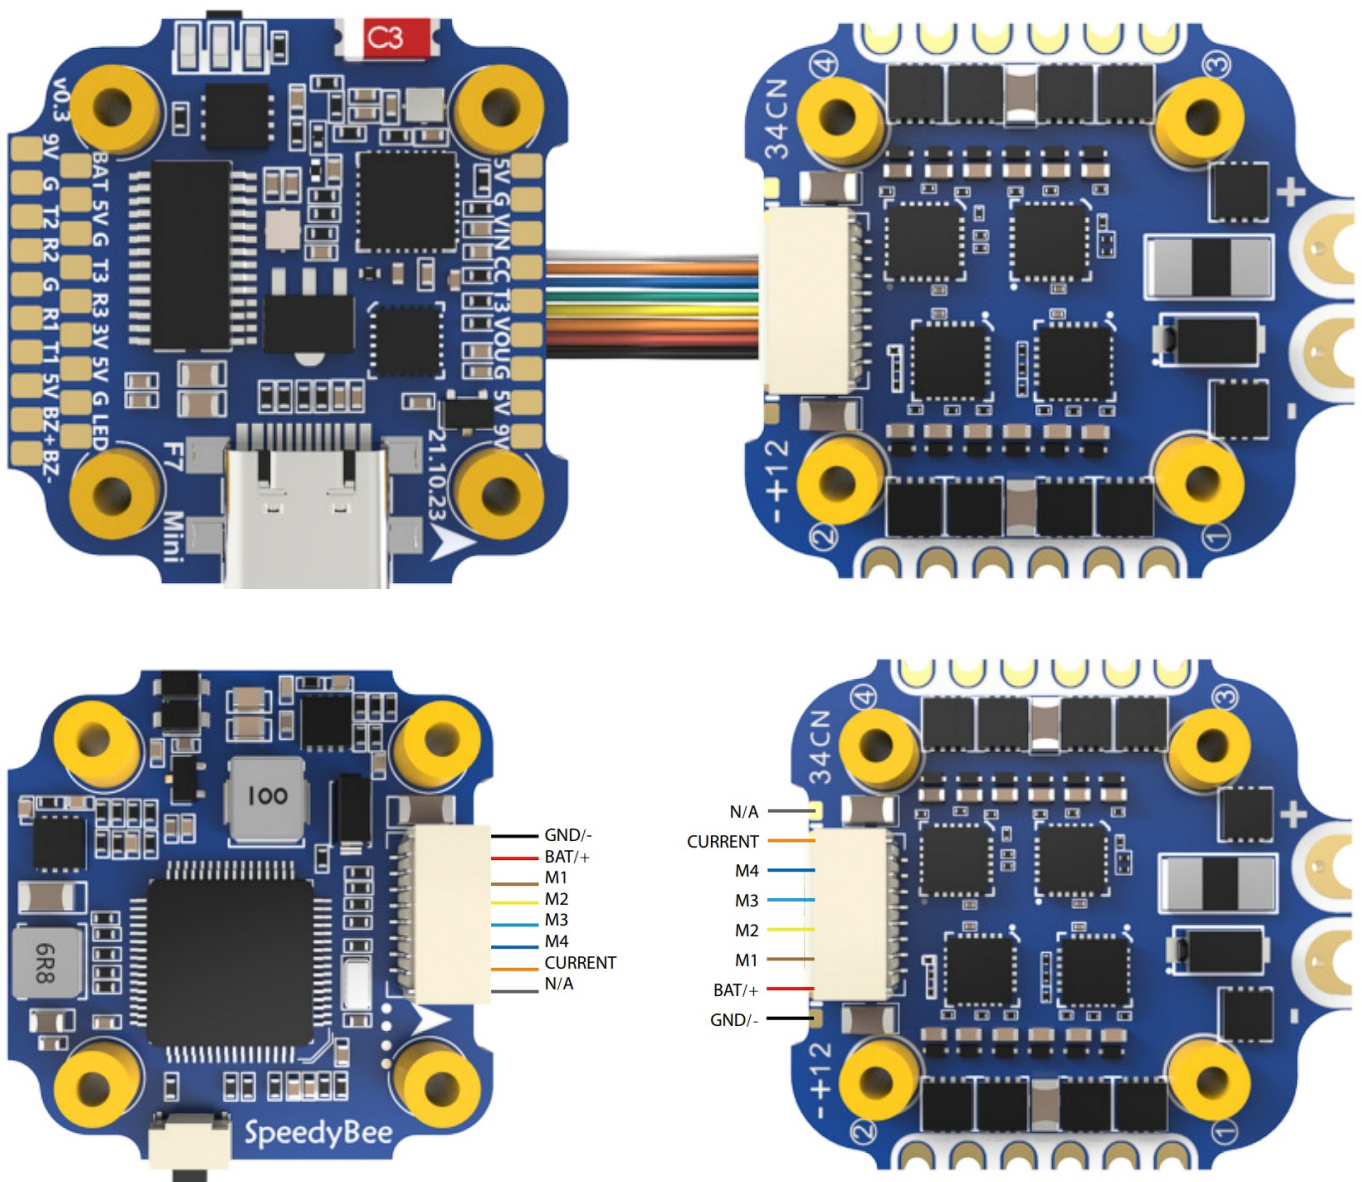

SpeedyBee F7 Mini Flight Controller

Layout

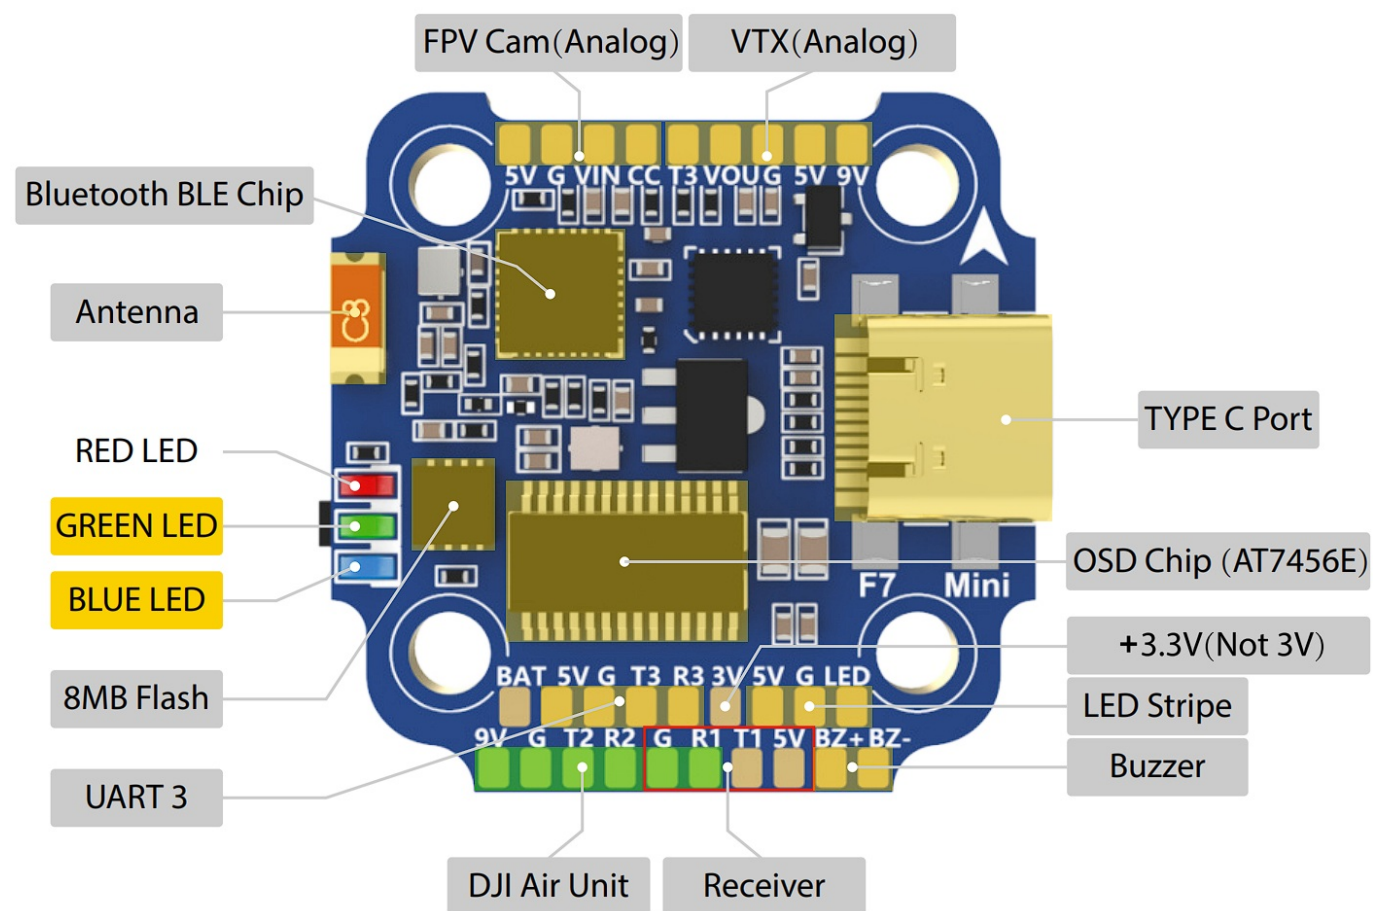

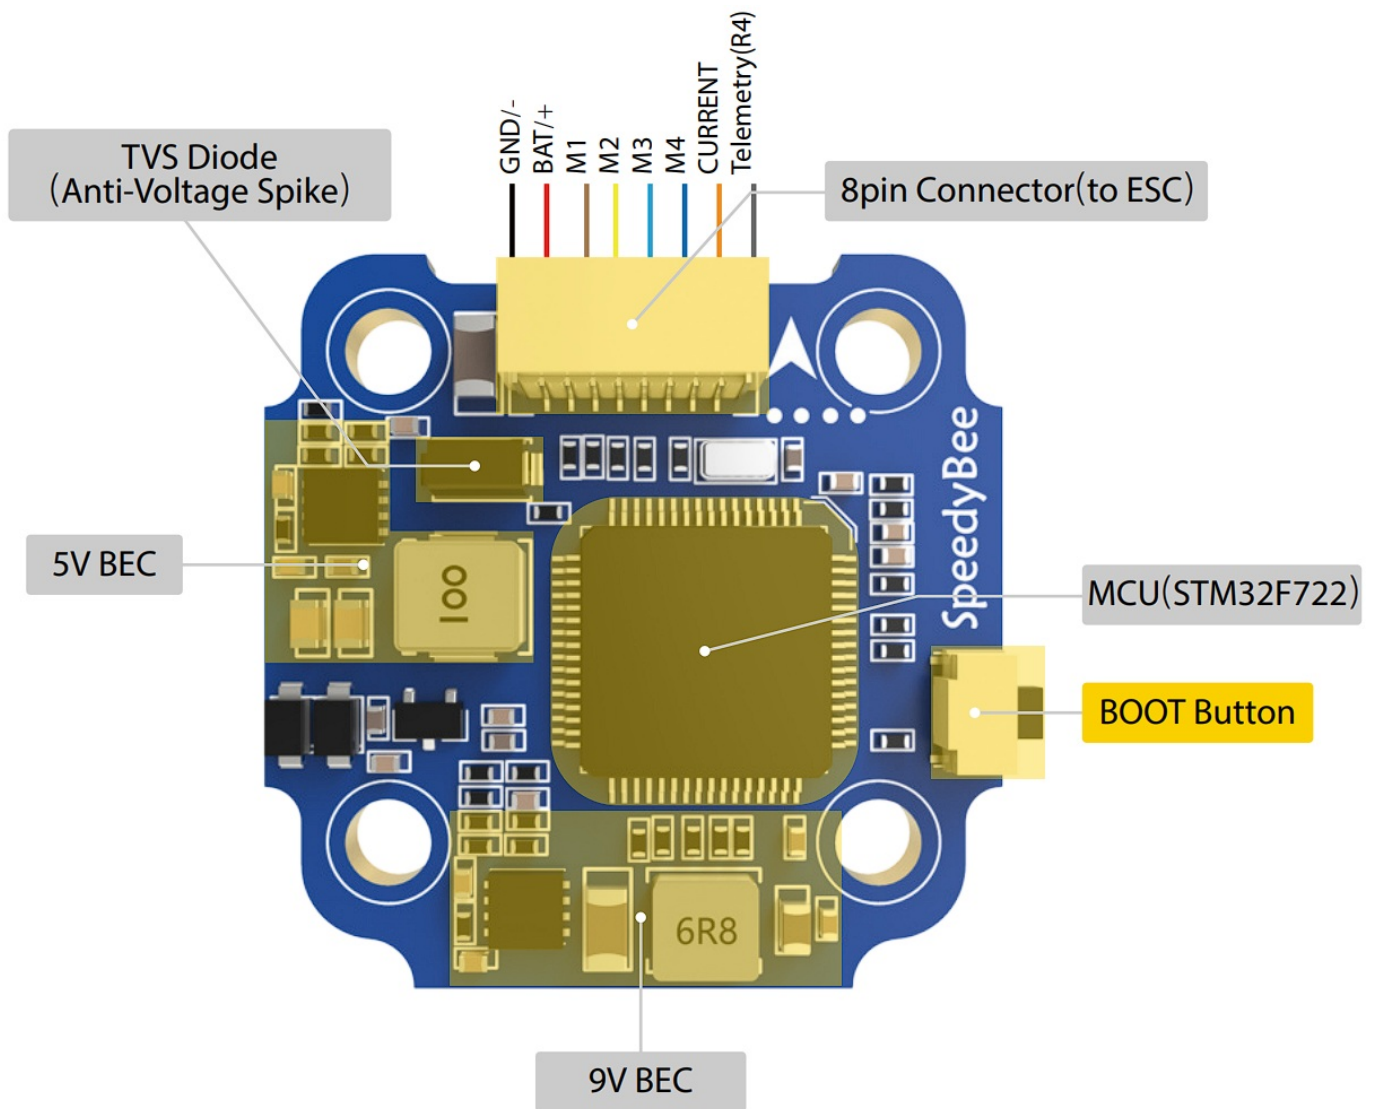

• LED Indicator Definition

■ RED LED – **Solid Red** after powering up.

■ GREEN LED – **Blinking Green** indicates Bluetooth is open and waiting for connection; **Solid Green** indicates Bluetooth is connected.

■ BLUE LED – Flight controller status light which is controlled by the flight controller firmware.

• BOOT Button

Only if the flight controller gets bricked and can't power up, please follow these steps to re-flash firmware for it:


① Insert a USB A to TYPE-C cable to your PC.

② Press and hold the BOOT button, insert the USB cable into the flight controller, then release the BOOT button.

③ Open Betaflight/ Emuflight/INAV configurator on the PC, go to the 'Firmware Flashing' page, choose the target 'SPEEDYBEEF7MINI' and flash.

FC's Peripheral Connection



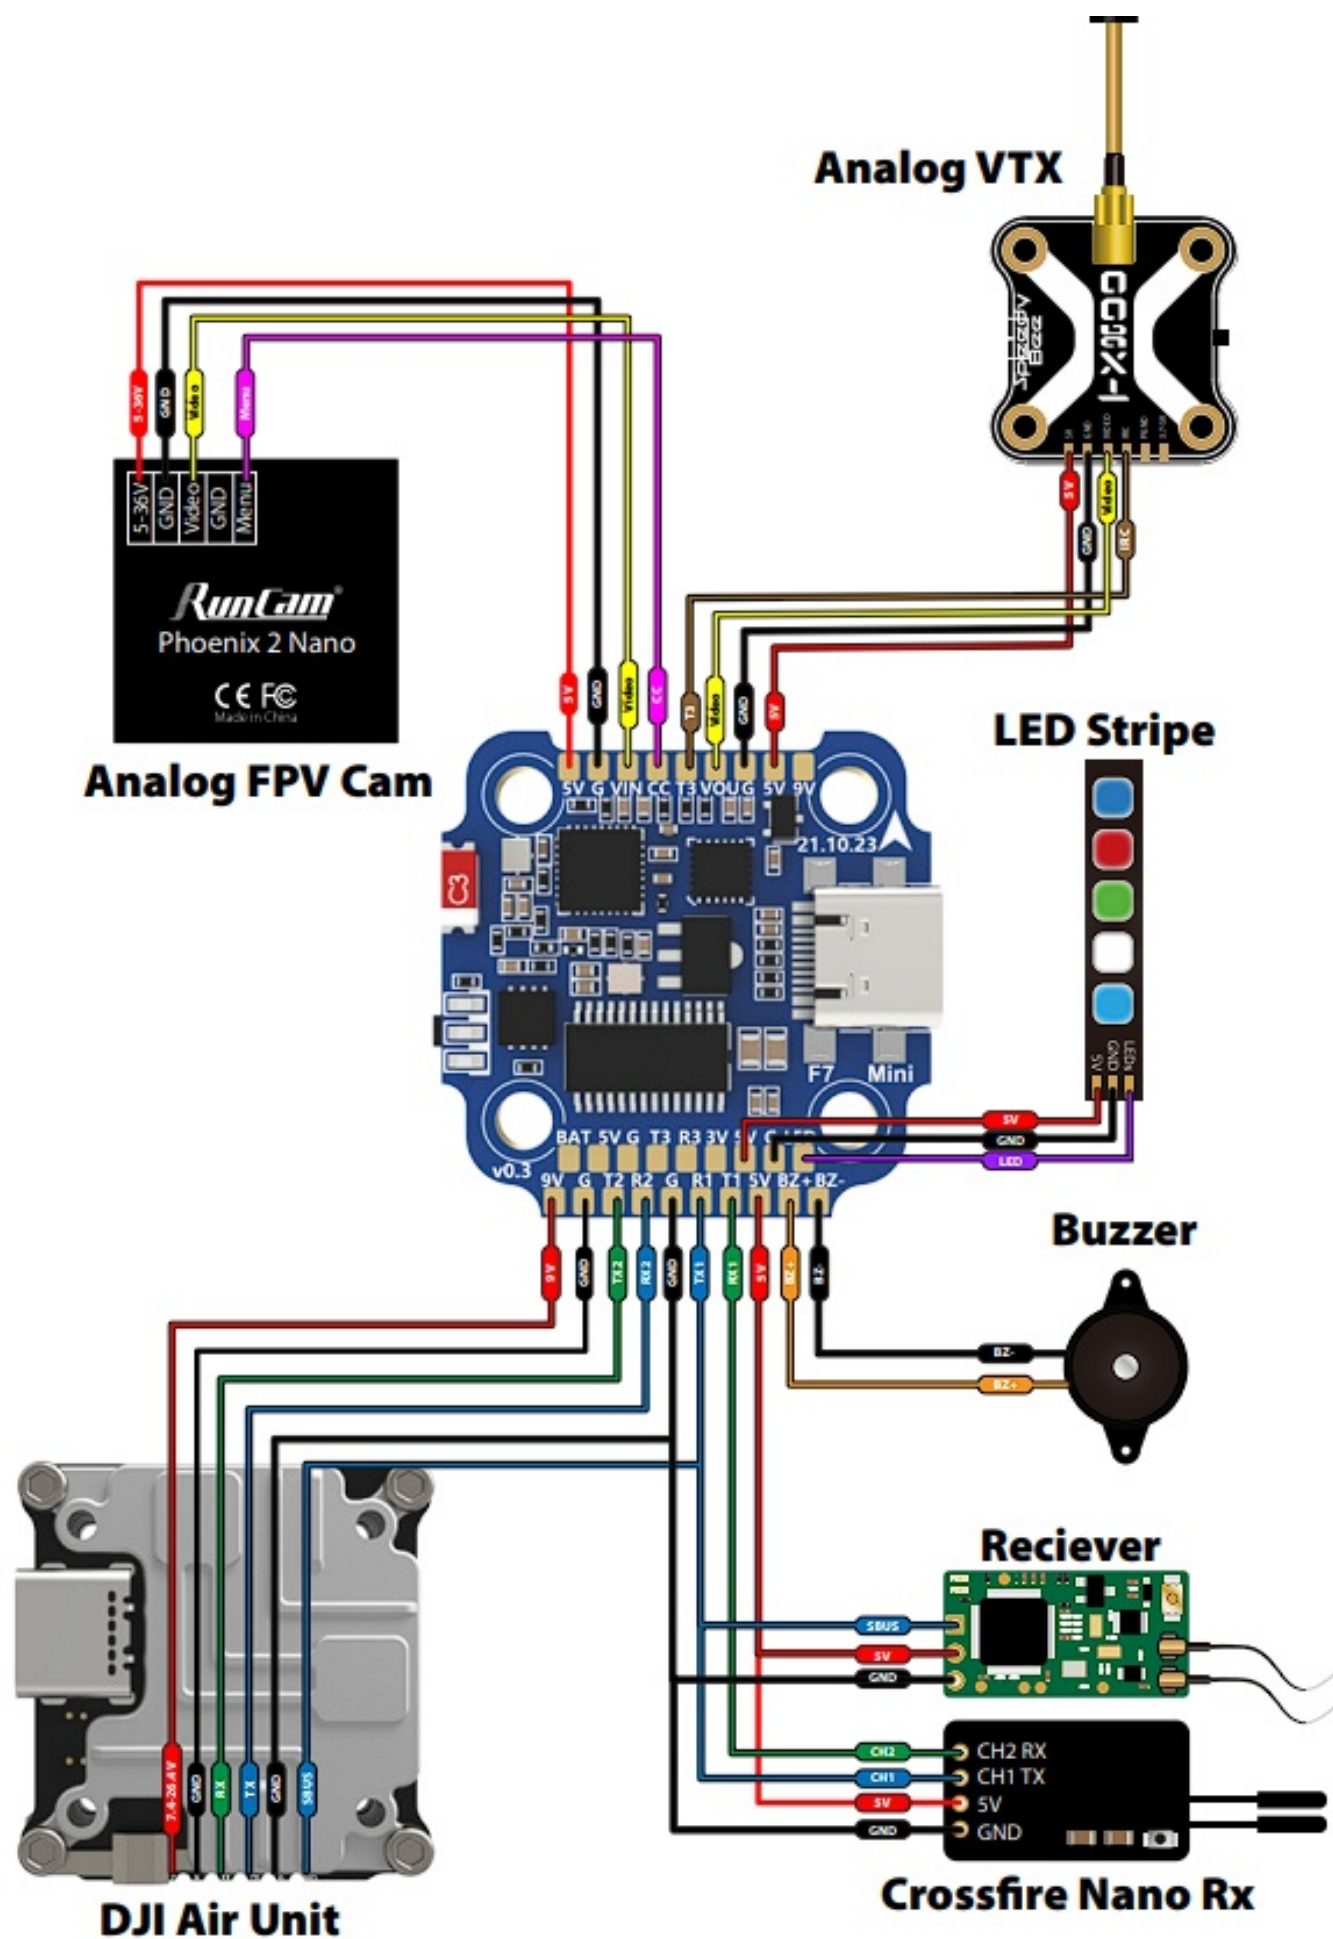


- Get the SpeedyBee App

Search 'SpeedyBee' on Google Play or App Store. Or download the Android .apk file on our website:

<https://www.speedybee.com/download>.

- Connect the App

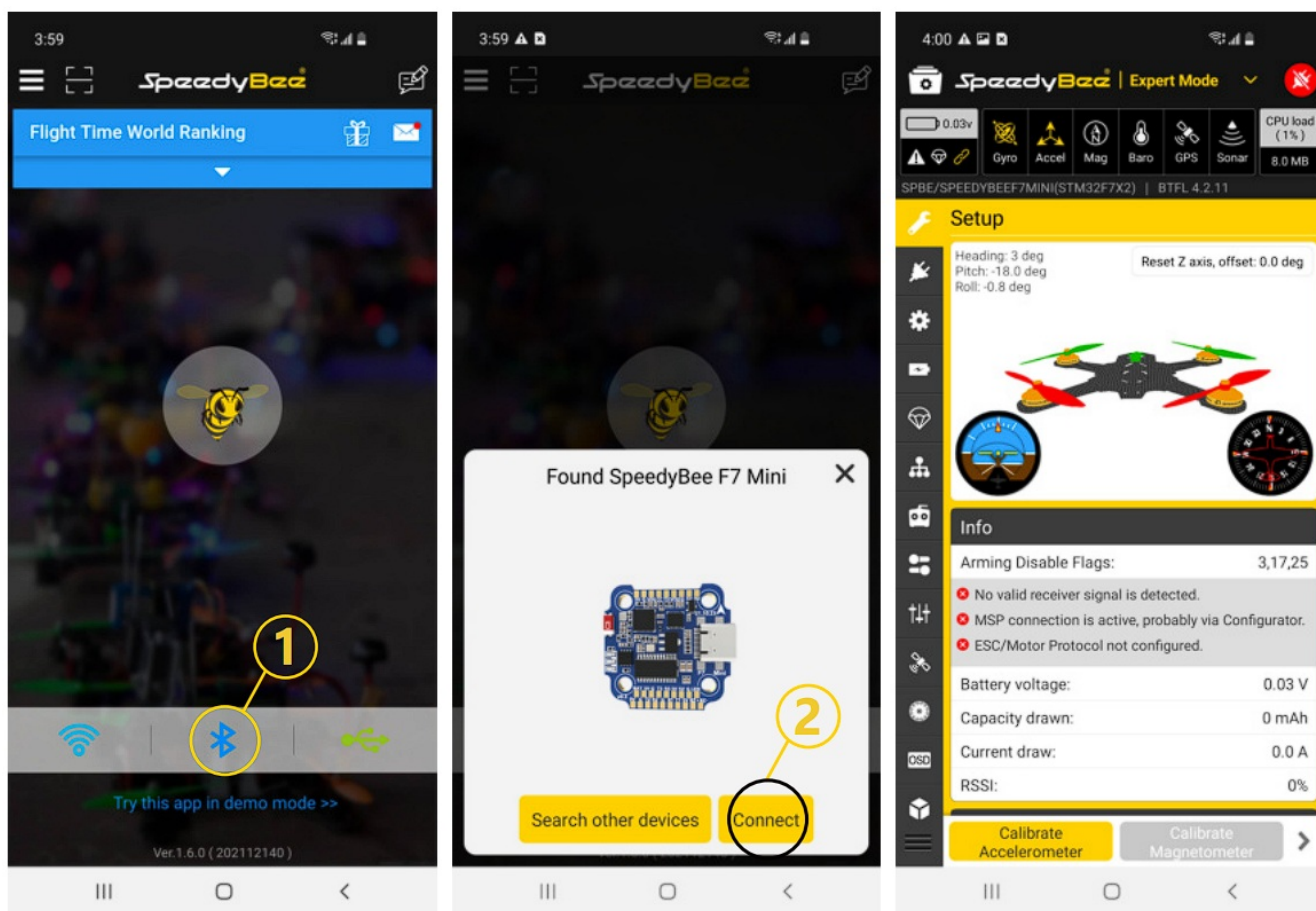

FC Firmware Update

- SpeedyBee F7 Mini does not support wireless firmware flashing, so please flash firmware for it on your PC following the steps below:
 - ① Connect the flight controller to the PC with a USB cable
 - ② Open Betaflight/Emuflight/INAV configurator on your PC. Take Betaflight configurator as an example, go to the 'Firmware Flashing' page, choose the target 'SPEEDYBEEF7MINI' and flash.



Parameters


MCU	STM32F72 2
IMU(Gyro)	MPU6000
USB Port Type	Type- C
Barometer	N/A
OSD Chip	AT7456E chip
BLE Bluetooth	Supported. Used for Flight Controller configuration
Flash FC Firmware Wirelessly	Not supported. Please update firmware for this FC on the PC
Download/ Analyze Blackbox	Not supported. Please download and analyze Blackbox data on the PC
OJI Air Unit Soldering Pads	Supported
Flash(for BlackBox)	8MB
Current Sensor	Supported, Scale=250 Offset=- 500


BetaFlight Camera Control Pad	Yes (CC pad)
Power Input	3S – 6S Lipo
5V Output	6 groups of 5V output, five +5V pads and 1 BZ+ pad(used for Buzzer). The total current load is 2.5A.
9V Output	2 groups of 9V output , the total current load is 2A.
3.3V Output	Supported. Up to 500mA current load.
ESC Signal Pads	M1 – M4
UART	Full UART * 3(UART1, UART2, UART3)
ESC Telemetry UART	R4(UART4)
I2C	Not supported
LED Pad	Used for WS2812 LED
Buzzer	BZ+ and BZ- pad used for 5V Buzzer
BOOT Button	Used to enter DFU mode
RSSI Input	Not supported
SmartPort	Use any TX pad of UART 1 or the SmartPort feature.
Supported Flight Controller Firmware	BetaFlight (Default), EMUF light, INAV
Firmware Target Name	SPEEDYBEEF7MINI
Mounting	20 x 20mm, 3.5mm hole diameter
Dimension	30 x 30 x 7.5mm

Weight	5.7g
--------	------

SpeedyBee 35A BLS 4-in-1 ESC

Layout

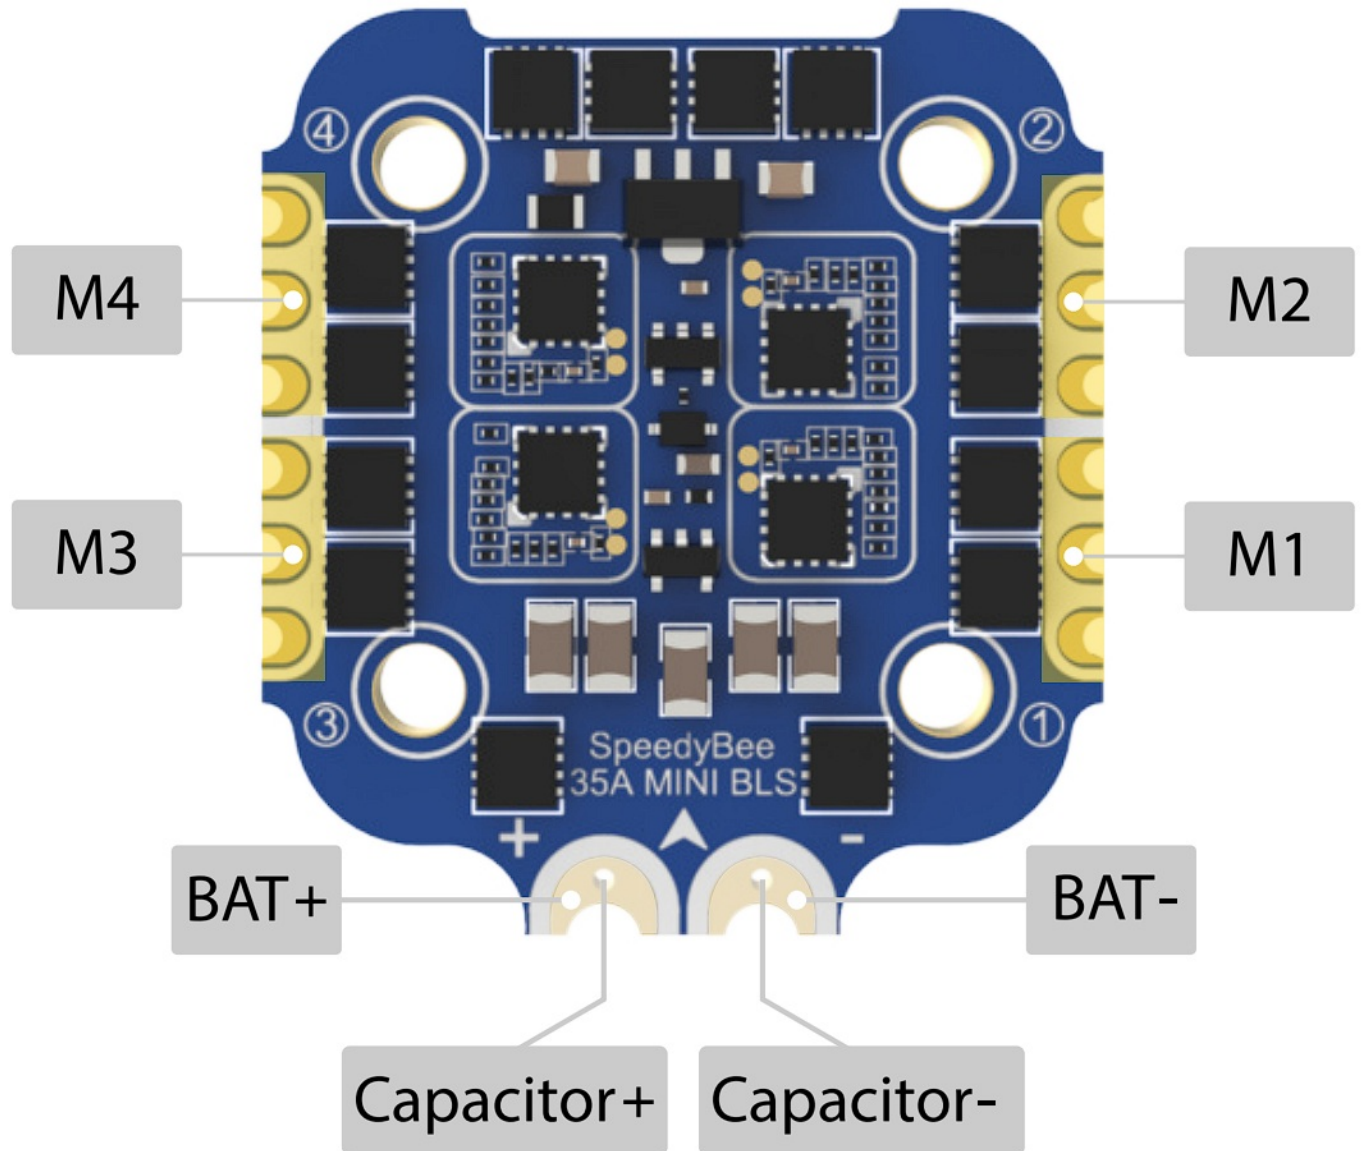

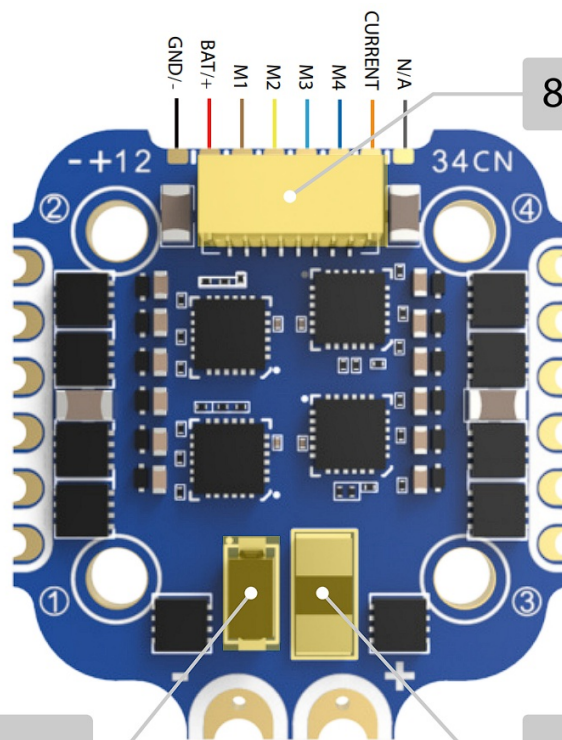


8pin Connector(to ESC)

TVS Diode
(Anti-Voltage Spike)







Resistance Calculator

Connection with Motors & Power Cable

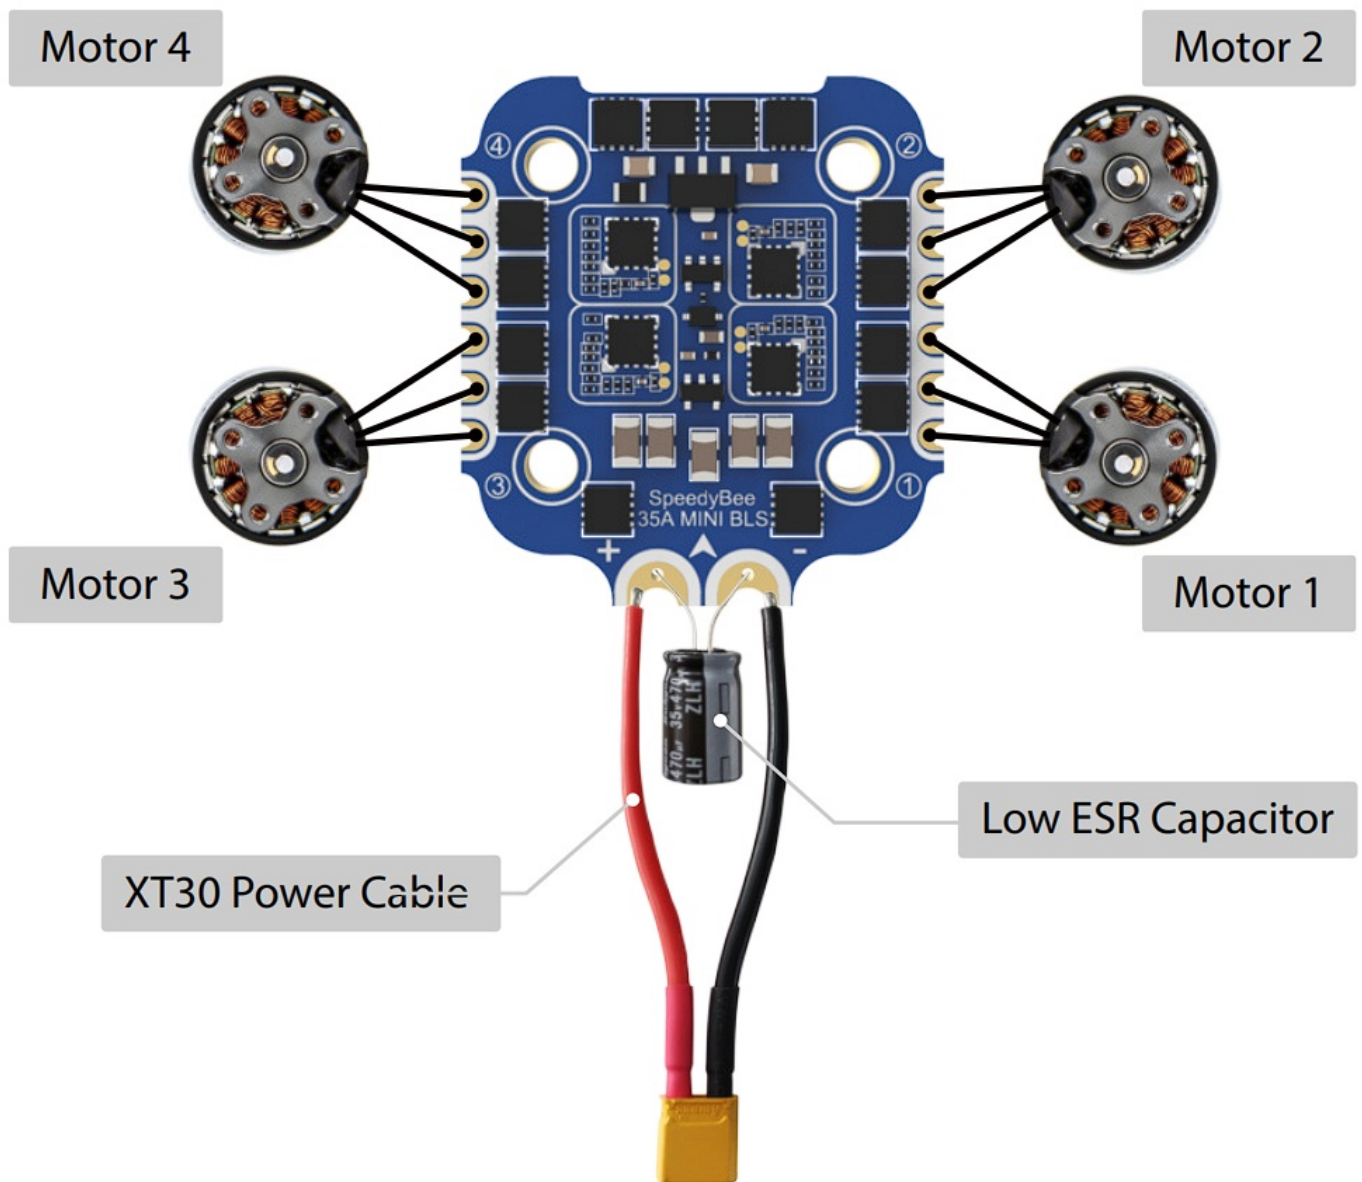

- **Note:** In order to prevent the stack from being burnt out instantaneous voltage spikes on powering up, it is strongly recommended to use the Low ESR capacitor in the package.


ESC Configuration

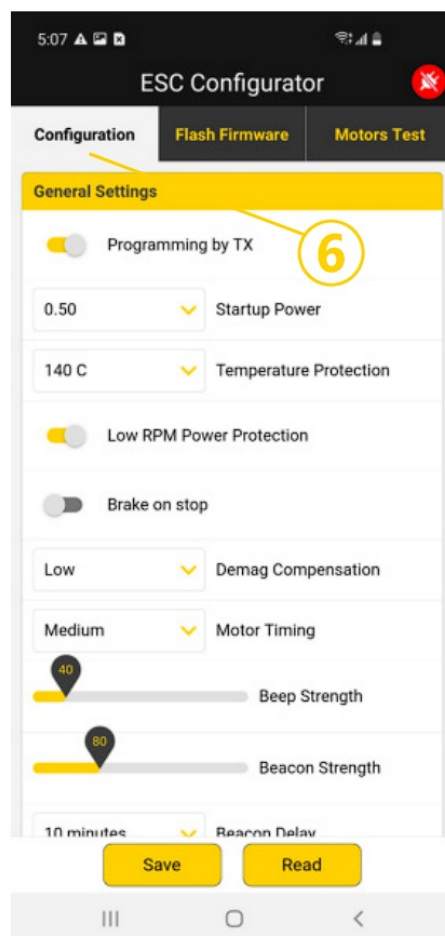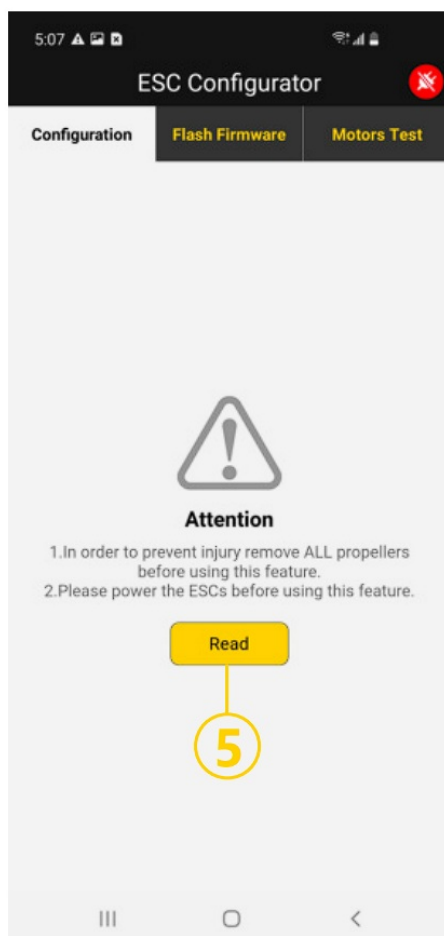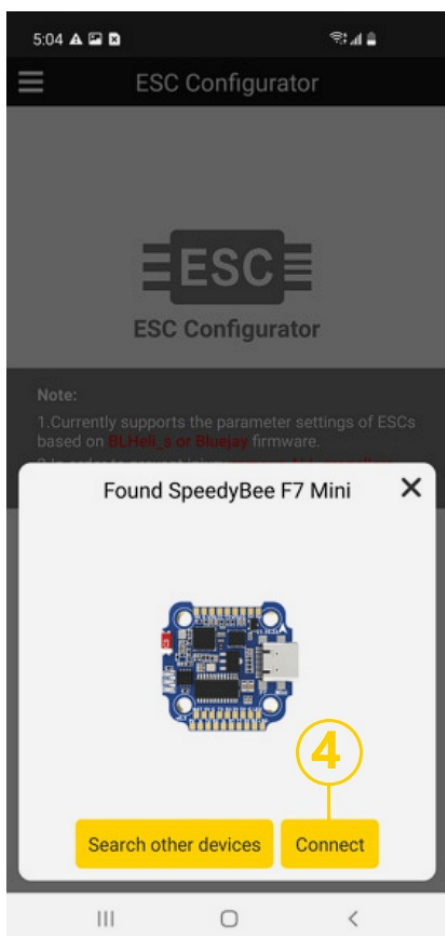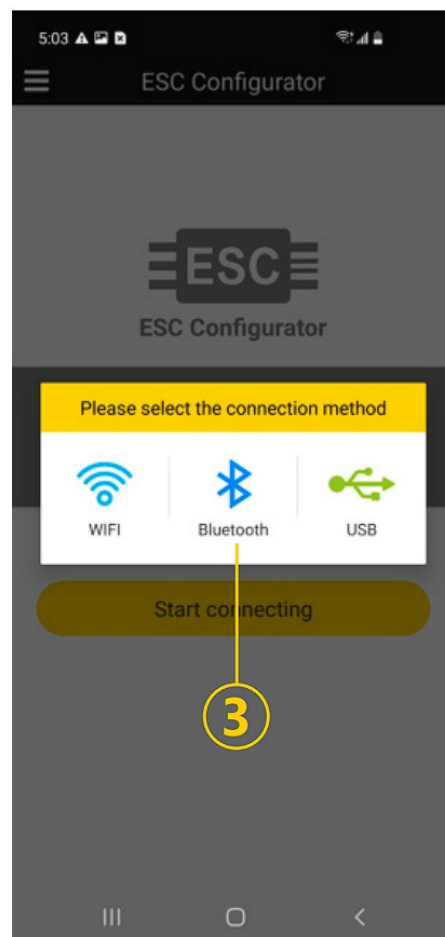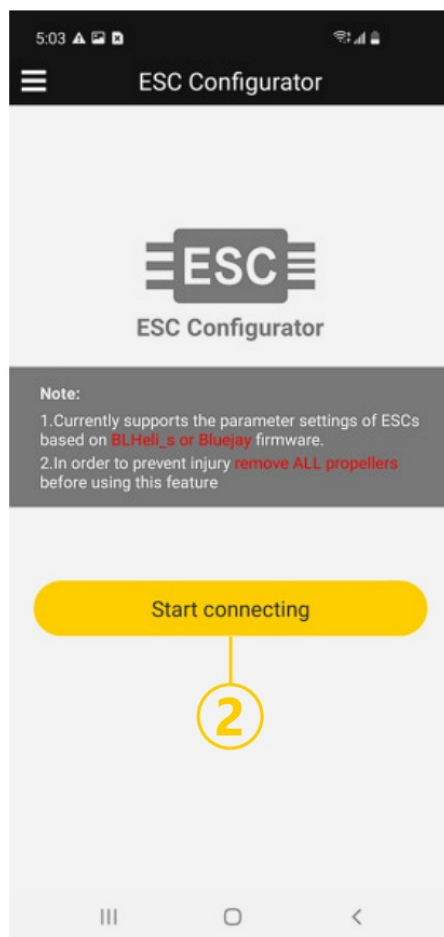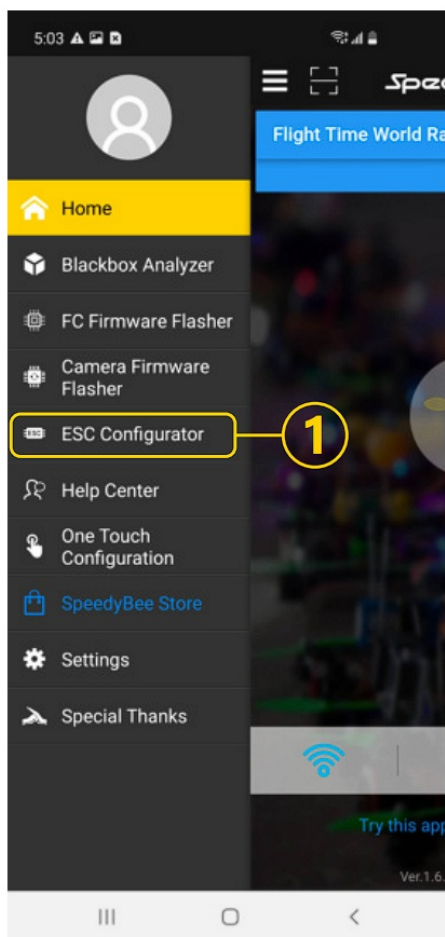


ESC Firmware Update

- You could flash both BLHeli_S and Blue Jay firmware for this ESC via Bluetooth.

Note: ESC Type should be set as 'J-H-40'.

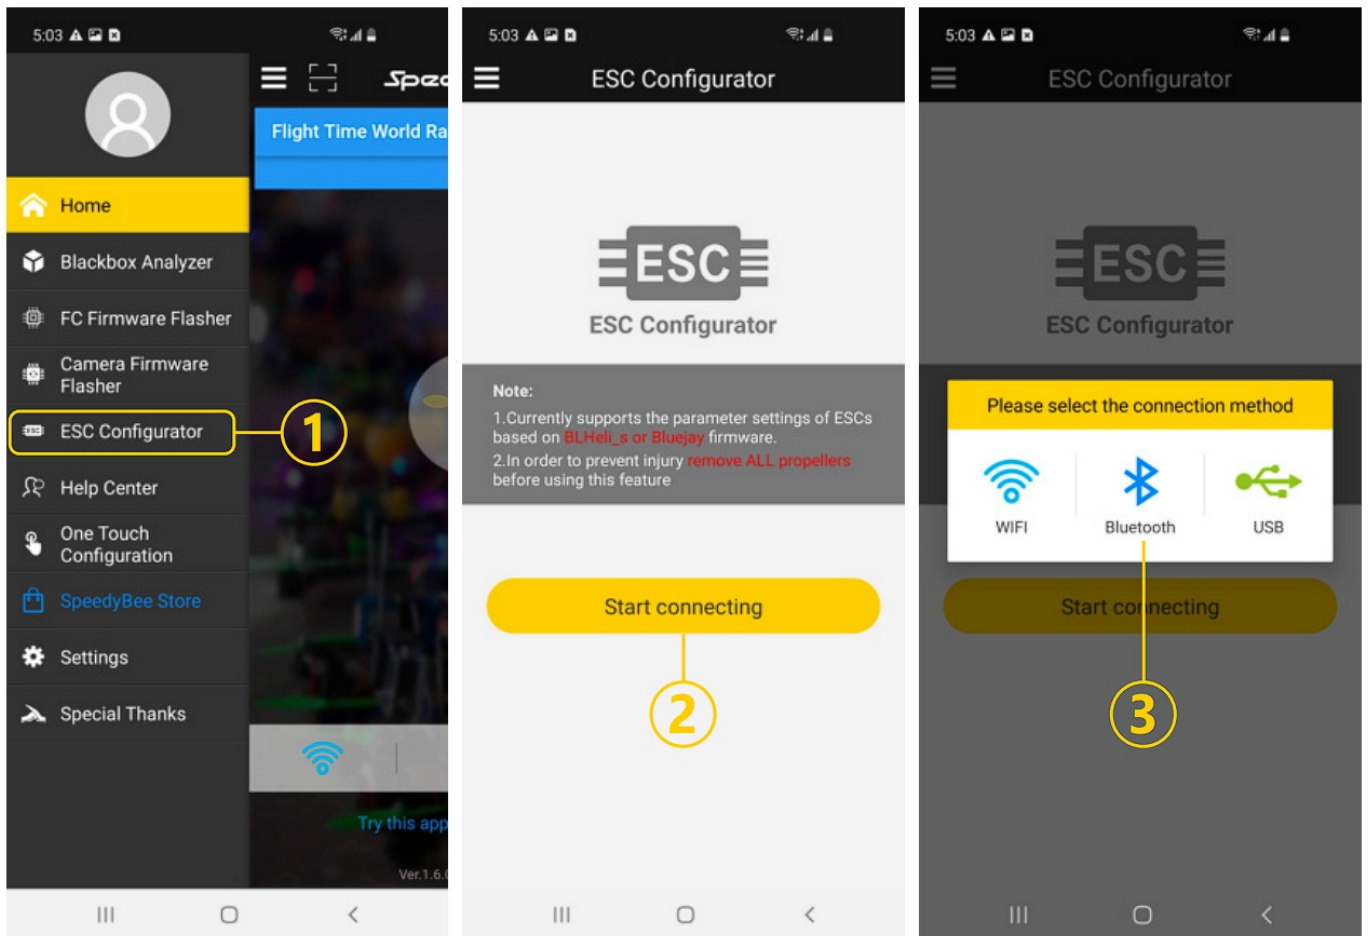

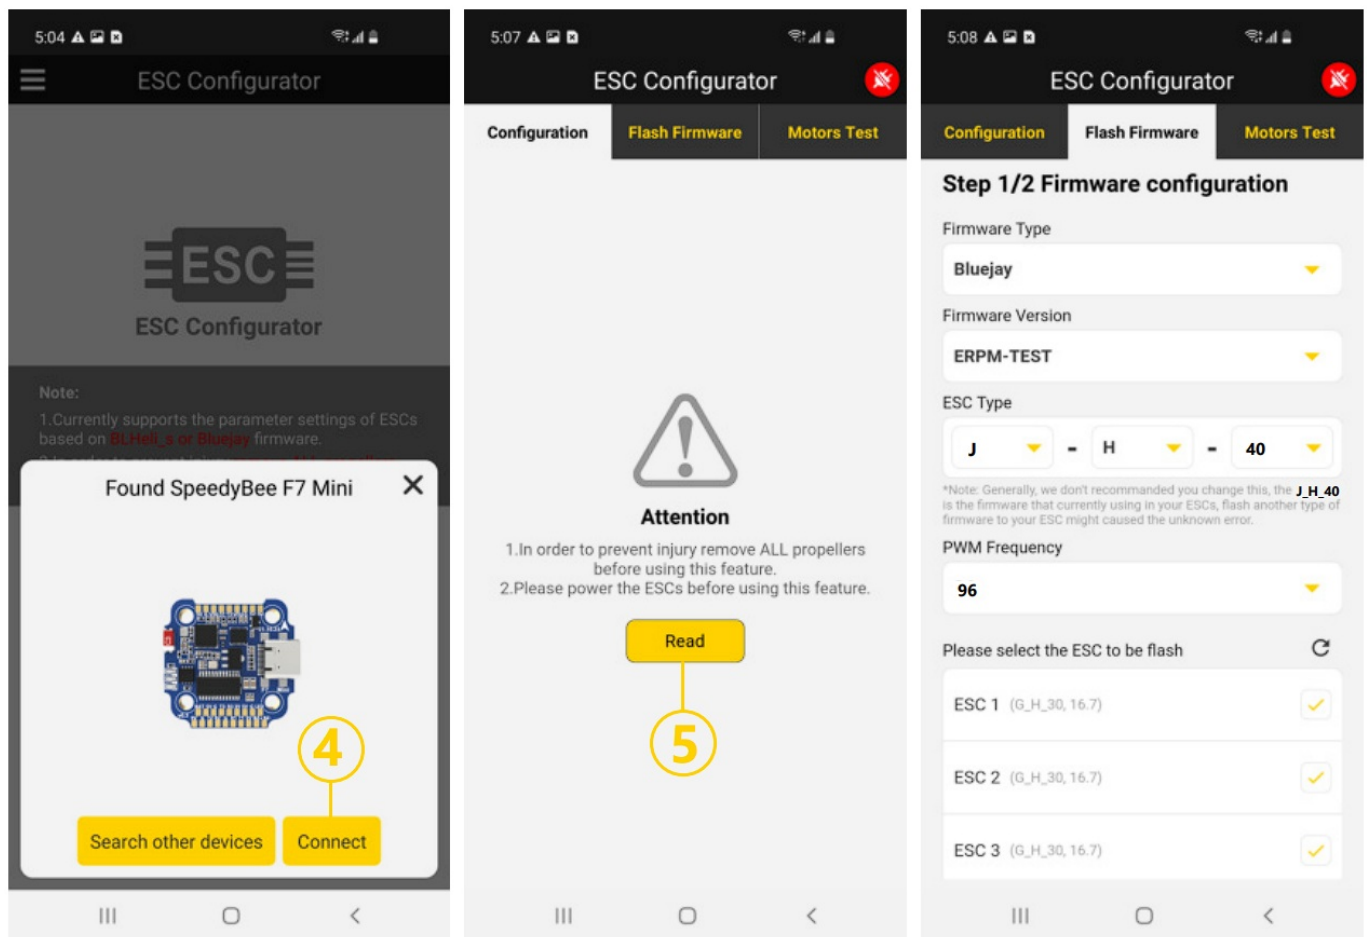

Parameters

Firmware	BLHeli_S JH40
Continuous Current	35A *4
Burst Current	45A(SS)
ESC Protocol	DSHOT300/ 600
Power Input	3-6S LiPo
Power Output	VBAT
Current Sensor	Support (Scale=250 Offset=-500)
Mounting	20 x 20mm, 3.6mm hole diameter
Dimension	32(L) * 35(W) * 5.5mm(H)
Weight	7g

SpeedyBee®

Documents / Resources

User Manual

User Manual V1.0

SpeedyBee F7 35A BLS Mini Stack

contents

Part 1: Overview

• Quick Overview

• Components

• Package

Part 2: Getting Started

• Unboxing

• F7 35A BLS Mini Stack

• F7 35A BLS Mini Stack Components

• F7 35A BLS Mini Stack Assembly

• F7 35A BLS Mini Stack Operation

• F7 35A BLS Mini Stack Troubleshooting

Part 3: SpeedyBee F7 35A BLS Mini Stack

• Overview

• Components

• F7 35A BLS Mini Stack Assembly

• F7 35A BLS Mini Stack Operation

• F7 35A BLS Mini Stack Troubleshooting

SpeedyBee

[SpeedyBee F7 35A BLS Mini Flight Controller Stack](#) [pdf] User Manual
F7 35A BLS Mini, Flight Controller Stack, F7 35A BLS Mini Flight Controller Stack, Controller S
tack, Stack

References

-  [download](#)