



SPEKTRUM SPMRFTX1 InterLink DX Simulator Controller Instruction Manual

[Home](#) » [SPEKTRUM](#) » SPEKTRUM SPMRFTX1 InterLink DX Simulator Controller Instruction Manual



InterLink® DX
Simulator Controller
SPMRFTX1 Instruction Manual
SPMRFTX1 Bedienungsanleitung
SPMRFTX1 Manuel d'utilisation
SPMRFTX1 Manuale di Istruzioni

NOTICE

All instructions, warranties, and other collateral documents are subject to change at the sole discretion of Horizon Hobby, LLC. For up-to-date product literature, visit horizonhobby.com or www.towerhobbies.com and click on the support or resources tab for this product.

Contents [[hide](#)]

- [1 Meaning of Special Language](#)
- [2 Layout](#)
- [3 Physical Transmitter Adjustments](#)
- [4 Ratcheted Throttle – Smooth Throttle Adjustment](#)
- [Ratchet](#)
- [5 Adjust Stick Tension](#)
- [6 Control Stick Length Adjustment](#)
- [7 Mode Change Slider](#)
- [8 Safety Plug](#)
- [9 Connecting](#)
 - [9.1 Using the InterLink DX Controller](#)
 - [9.2 Connecting Other Transmitters to the Flight Simulator](#)
- [10 Limited Warranty](#)
- [11 Warranty and Service Contact Information](#)
- [12 Compliance Information for the European Union](#)
- [13 Documents / Resources](#)
 - [13.1 References](#)
- [14 Related Posts](#)

Meaning of Special Language

The following terms are used throughout the product literature to indicate various levels of potential harm when operating this product:

WARNING: Procedures, which if not properly followed, create the probability of property damage, collateral damage, and serious injury OR create a high probability of superficial injury.

CAUTION: Procedures, which if not properly followed, create the probability of physical property damage AND a possibility of serious injury.

NOTICE: Procedures, which if not properly followed, create a possibility of physical property damage AND little or no possibility of injury.

Age Recommendation: Not for children under 14 years. This is not a toy.



 
WARNING: Read the ENTIRE instruction manual to become familiar with the features of the product before operating. Failure to operate the product correctly can result in damage to the product, personal property and cause serious injury. This is a sophisticated hobby product. It must be operated with caution and common sense and requires some basic mechanical ability. Failure to operate this product in a safe and responsible manner could result in injury or damage to the product or other property. This product is not intended for use by children without direct adult supervision. Do not attempt disassembly, use incompatible components, or alter the product in any way without the approval of Horizon Hobby, LLC. This manual contains instructions for safety, operation, and maintenance. It is essential to read and follow all the instructions and warnings in the manual, prior to assembly, setup or use, in order to operate correctly and avoid damage or serious injury.

NOTICE: This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.



DANGER: To reduce the risk of fire or electric shock, carefully follow these instructions.

Layout

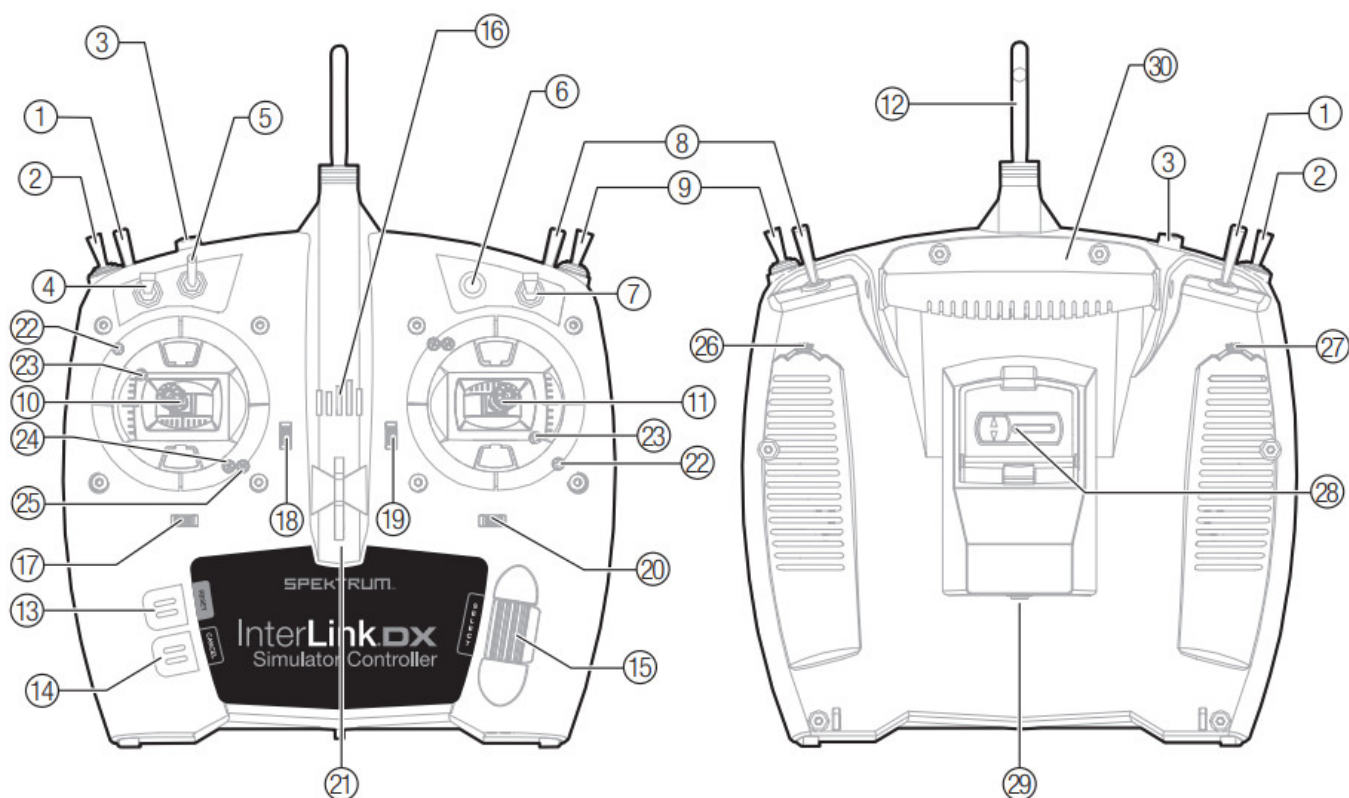

| | | | |
|----|------------------------------|----|---|
| 1 | Switch A (2 Position) | 16 | Power LED |
| 2 | Switch B (3 Position) | 17 | Rudder Trim (Mode 1, 2) Aileron Trim (Mode 3, 4) |
| 3 | I Button | 18 | Elevator Trim (Mode 1, 3) Throttle Trim (Mode 2, 4) |
| 4 | Switch C (3 Position) | 19 | Elevator Trim (Mode 2, 4) Throttle Trim (Mode 1, 3) |
| 5 | Switch D (3 Position) | 20 | Rudder Trim (Mode 3, 4) Aileron Trim (Mode 1, 2) |
| 6 | R Knob | 21 | Neck Strap Mount |
| 7 | Switch F (3 Position) | 22 | Gimbal Stick Tension Adjust (Up/Down) |
| 8 | Switch H (2 Position) | 23 | Gimbal Stick Tension Adjust (Left/Right) |
| 9 | Switch G (3 Position) | 24 | Throttle Tension Adjust |
| 10 | Left Stick | 25 | Throttle Ratchet Adjust |
| 11 | Right Stick | 26 | Right Rear Slider |
| 12 | USB Cable | 27 | Left Rear Slider |
| 13 | Reset Button | 28 | Mode Change Switch |
| 14 | Cancel Button | 29 | Trainer Port |
| 15 | Scroll Wheel / Select Button | 30 | Handle |

Physical Transmitter Adjustments

 
 
The InterLink DX controller has all the physical transmitter adjustments located around the gimbal face of each gimbal. This arrangement allows for quick and easy adjustments without taking the back cover off or removing any plugs to access adjustment screws.

Available adjustments:

Change the Throttle Ratchet

Change the Throttle Tension

Adjust stick tension

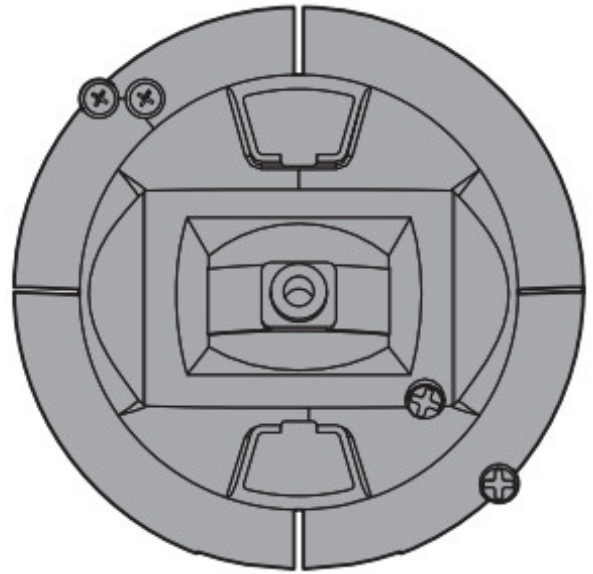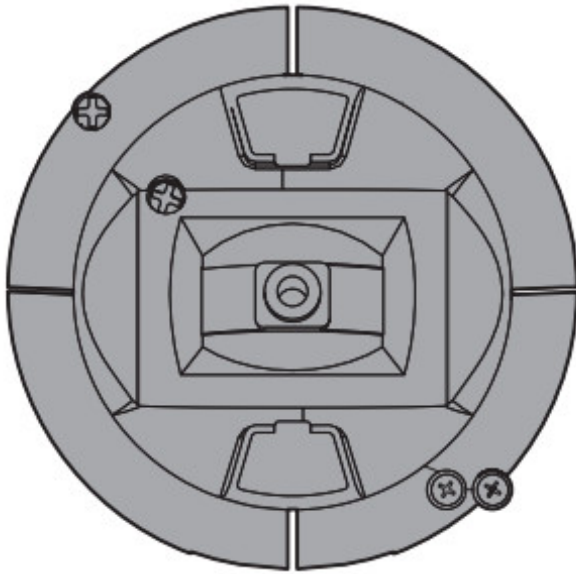**Ratcheted Throttle – Smooth Throttle Adjustment Ratchet**

1. Locate the Throttle Strap adjustment screws on both gimbals. The ratchet set screw engages a serrated section on the gimbal for a ratcheted throttle, while the tension set screw engages a strap for smooth tension on the gimbal.
2. To engage the throttle ratchet turn the ratchet set screw clockwise until the ratchet engages.
3. To disengage the throttle ratchet turn the screw counterclockwise until the gimbal moves freely.

Smooth Tension

 
1. To engage the throttle tension, turn the Tension set screw clockwise until the Tension engages.
2. To disengage the throttle Tension turn the screw counterclockwise until the gimbal moves freely.

Adjust Stick Tension

Turn the screws clockwise a small amount using a small Phillips screwdriver to tighten the stick tension and counterclockwise to loosen.

NOTICE: Always do a test of stick tension while turning these screws to ensure stick tension is not too loose or too tight.


Tightening a screw too much can damage a spring. Loosening a screw too much can let a spring-fall off and cause short circuit in the transmitter.

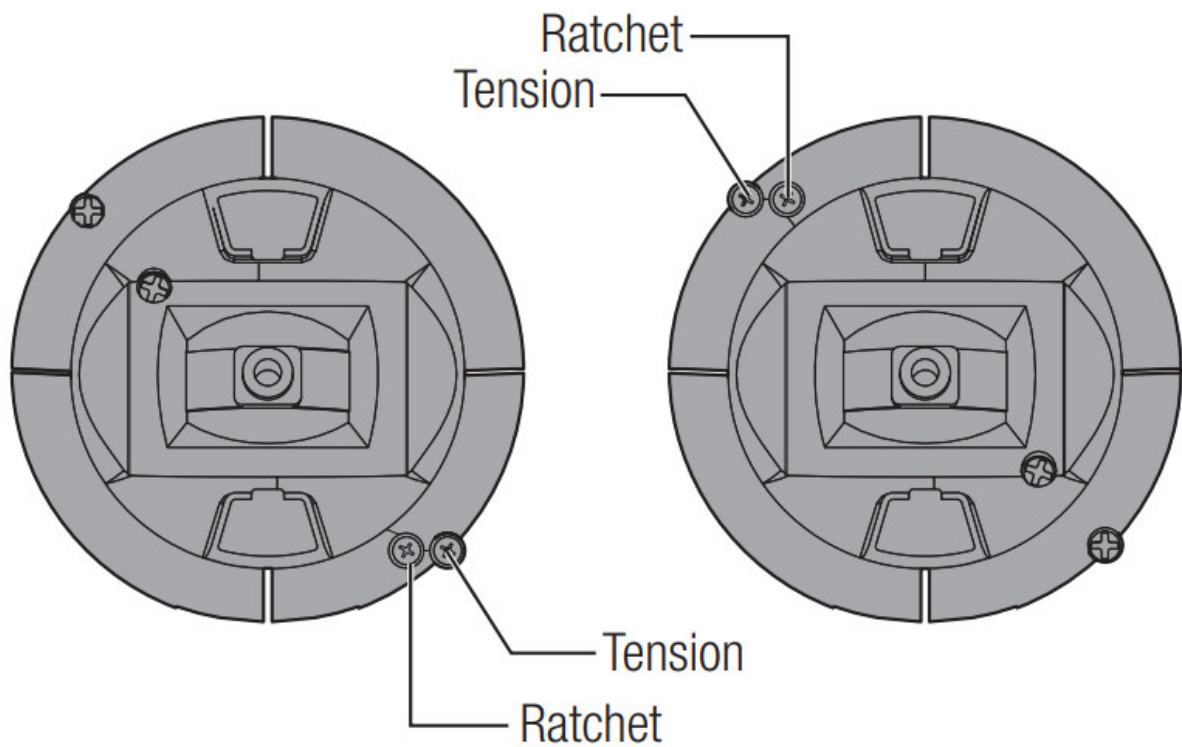

Adjust Stick Tension


Turn the screws clockwise a small amount using a small Phillips screwdriver to tighten the stick tension and counterclockwise to loosen.

 NOTICE: Always do a test of stick tension while turning these screws to ensure stick tension is not too loose or too tight. Tightening a screw too much can damage a spring. Loosening a screw too much can let a spring-fall off and cause short circuit in the transmitter.

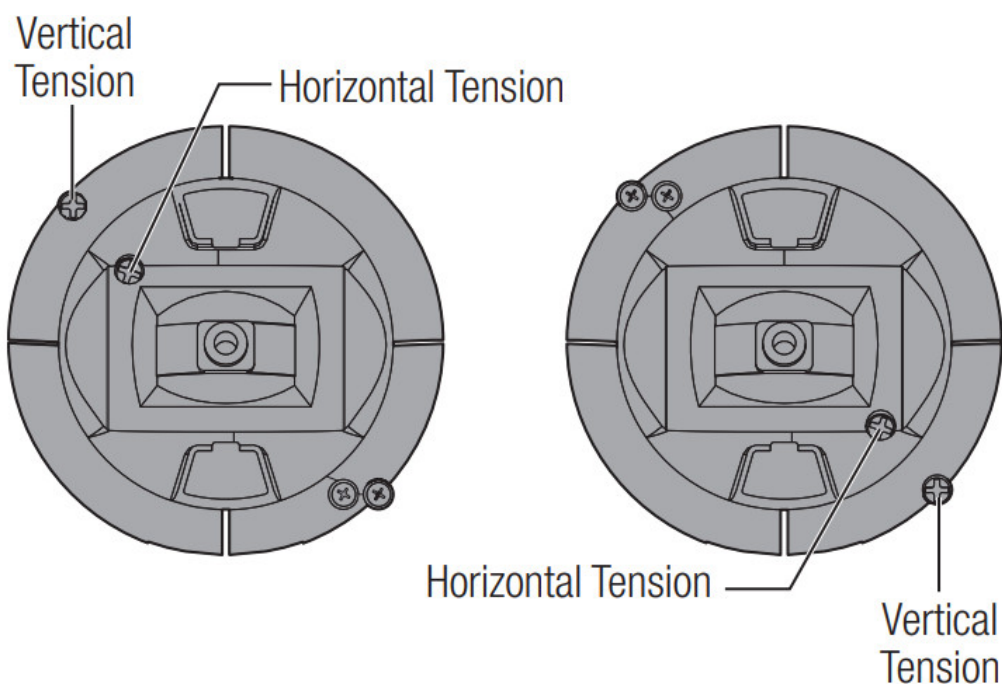


Control Stick Length Adjustment

 1. Using a 2mm Allen wrench, turn the setscrew in the stick counterclockwise to loosen it.
2. Make the stick shorter by turning it clockwise or longer by turning it counterclockwise.
3. After adjustment of stick length, tighten the setscrew.

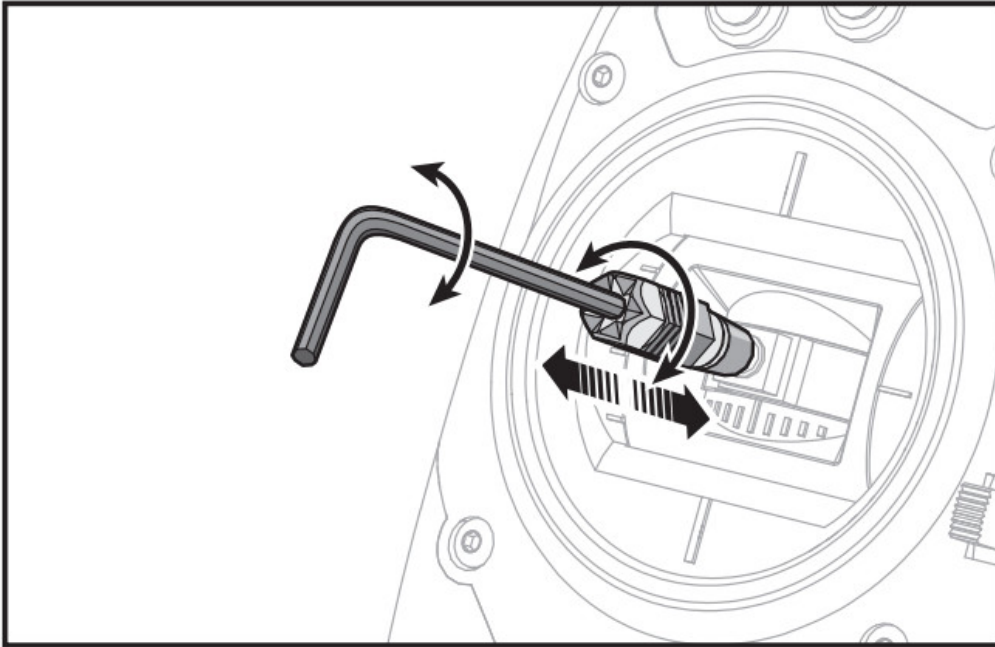


Mode Change Slider

 There is a unique slider located on the back of the transmitter that allows for simple mode changes. The slider can also be used to change each mode into a “quadcopter mode.” This mode snaps both sticks to the center position.

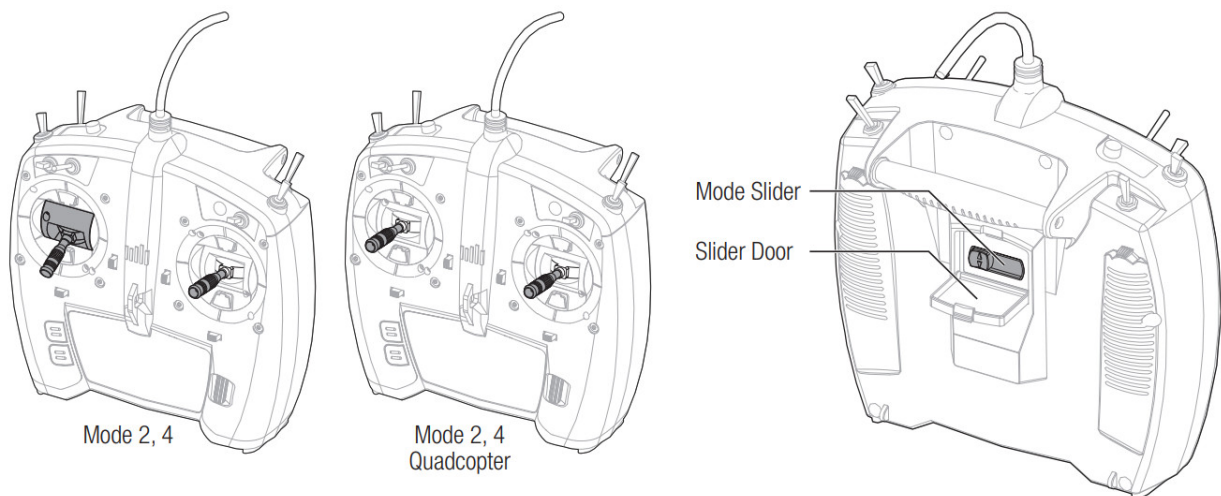


Safety Plug

 The safety plug is installed in the transmitter to ensure the mode switch cannot be accidentally moved when in the normal throttle mode (noncentered) positions.

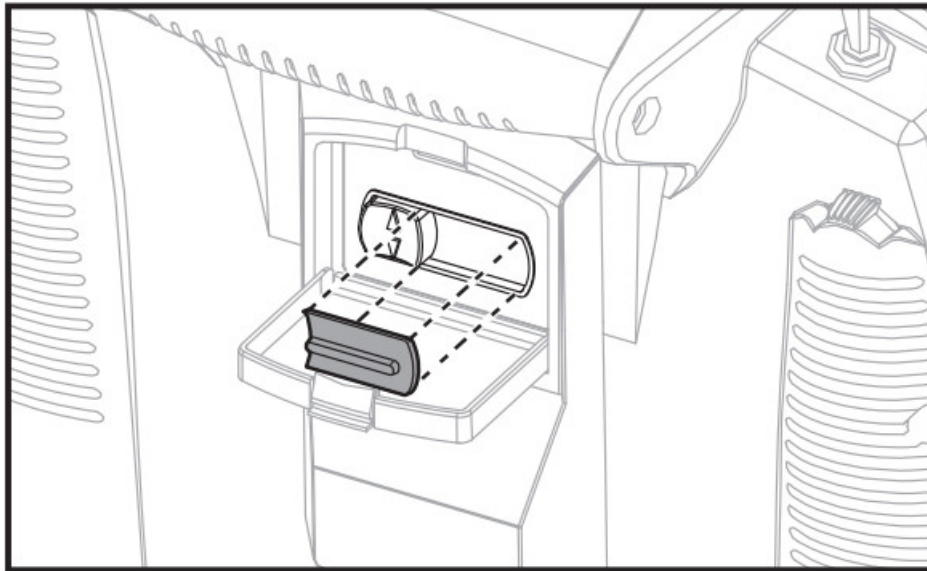


To remove the plug:

 
1. Grasp the plug by the raised rib and pull it straight out.
Tip: Use a small screwdriver to gently pry the plug out.
2. Once the mode has been changed, reinstall the safety plug.

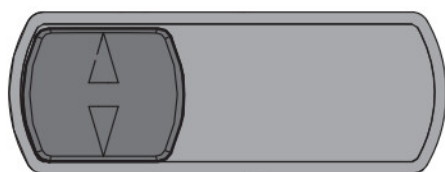


Mode 2, 4

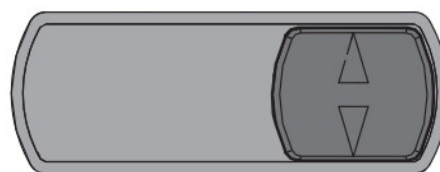 

Mode 1, 3

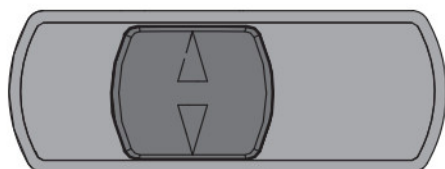 

Mode 2, 4
Quadcopter

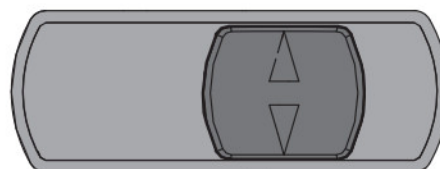 

Mode 1, 3
Quadcopter

 
Simply open the protective slider door and move the slider to the desired position. All changes happen automatically inside the transmitter.

If you are changing modes you must first center the sticks.

Connecting

Using the InterLink DX Controller


To use the InterLink DX as a simulator controller, connect the USB cable in the top of the transmitter to your computer's USB port.

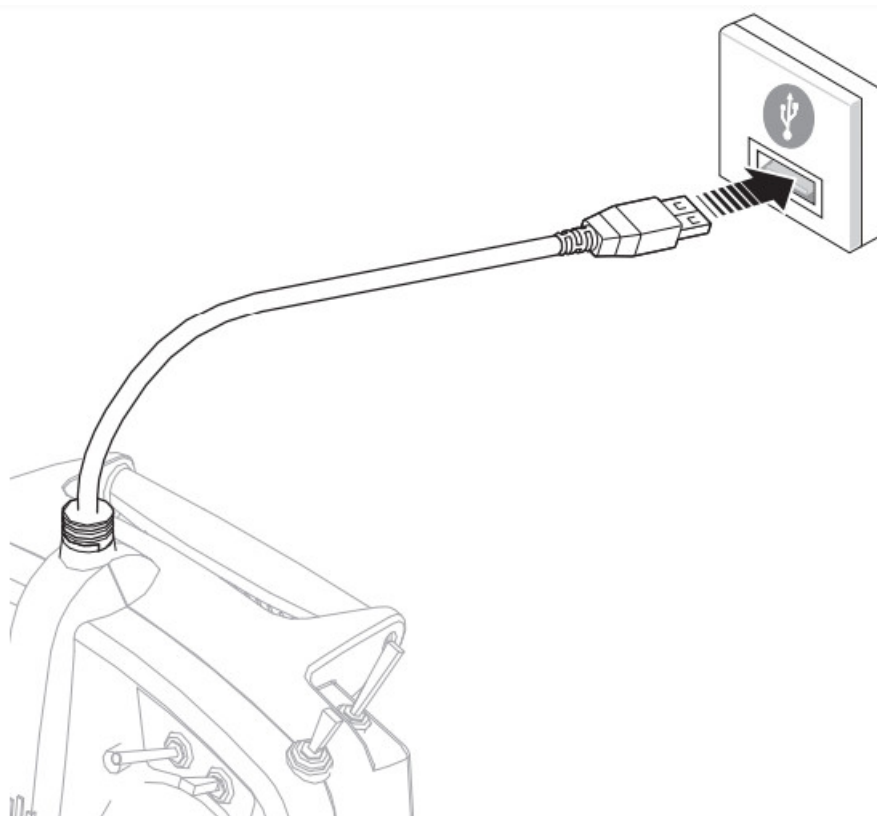

Connecting Other Transmitters to the Flight Simulator

To connect other compatible transmitters to the flight simulator, insert a Spektrum-compatible trainer cord into the port at the back of the InterLink DX.

 The Interlink DX becomes a pass-through.

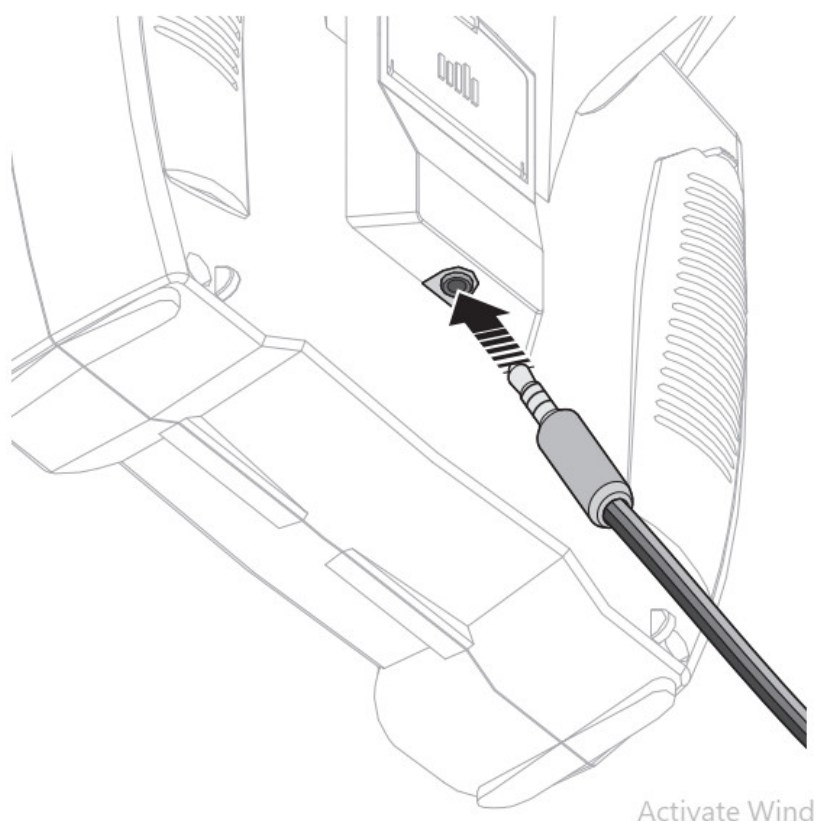

Activate Wind

Limited Warranty

What this Warranty Covers – Horizon Hobby, LLC, (Horizon) warrants to the original purchaser that the product purchased (the “Product”) will be free from defects in materials and workmanship for a period of 1 year from the date of purchase.

What is Not Covered – This warranty is not transferable and does not cover (i) cosmetic damage, (ii) damage due to acts of God, accident, misuse, abuse, negligence, commercial use, or due to improper use, installation, operation, or maintenance, (iii) modification of or to any part of the Product, (iv) attempted service by anyone other than a Horizon Hobby authorized service center, (v) Product not purchased from an authorized Horizon dealer, or (vi) Product not compliant with applicable technical regulations or (vii) use that violates any applicable laws, rules, or regulations.

OTHER THAN THE EXPRESS WARRANTY ABOVE, HORIZON MAKES NO OTHER WARRANTY OR REPRESENTATION, AND HEREBY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY, AND FITNESS FOR A PARTICULAR PURPOSE. THE PURCHASER ACKNOWLEDGES THAT THEY ALONE HAVE DETERMINED THAT THE PRODUCT WILL SUITABLY MEET THE REQUIREMENTS OF THE PURCHASERS INTENDED USE.

Purchaser’s Remedy – Horizon’s sole obligation and purchaser’s sole and exclusive remedy shall be that Horizon will, at its option, either (i) service, or (ii) replace, any Product determined by Horizon to be defective. Horizon reserves the right to inspect any and all Product(s) involved in a warranty claim. Service or replacement decisions are at the sole discretion of Horizon. Proof of purchase is required for all warranty claims. SERVICE OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE PURCHASER’S SOLE AND EXCLUSIVE REMEDY.

Limitation of Liability – HORIZON SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY, REGARDLESS OF WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, TORT, NEGLIGENCE, STRICT LIABILITY, OR ANY OTHER THEORY OF LIABILITY, EVEN IF HORIZON HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Further, in no event, shall the liability of Horizon exceed the individual price of the Product on which liability is asserted. As Horizon has no control over use, setup, final assembly, modification or misuse, no liability shall be assumed nor accepted for any resulting damage or injury. By the act of use, setup or assembly, the user accepts all resulting liability. If you as the purchaser or user are not prepared to accept the liability associated with the use of the Product,

the purchaser is advised to return the Product immediately in new and unused condition to the place of purchase.

Law – These terms are governed by Illinois law (without regard to conflict of law principles). This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Horizon reserves the right to change or modify this warranty at any time without notice.

WARRANTY SERVICES

Questions, Assistance, and Services – Your local hobby store and/ or place of purchase cannot provide warranty support or service. Once assembly, setup or use of the Product has been started, you must contact your local distributor or Horizon directly. This will enable Horizon to better answer your questions and service you in the event that you may need any assistance. For questions or assistance, please visit our website at www.horizonhobby.com, submit a Product Support Inquiry, or call the toll free telephone number referenced in the Warranty and Service Contact Information section to speak with a Product Support representative.

Inspection or Services – If this Product needs to be inspected or serviced and is compliant in the country you live and use the Product in, please use the Horizon Online Service Request submission process found on our website or call Horizon to obtain a Return Merchandise Authorization (RMA) number. Pack the Product securely using a shipping carton. Please note that original boxes may be included, but are not designed to withstand the rigors of shipping without additional protection. Ship via a carrier that provides tracking and insurance for lost or damaged parcels, as Horizon is not responsible for merchandise until it arrives and is accepted at our facility. An Online Service Request is available at

http://www.horizonhobby.com/content/servicecenter_render-service-center. If you do not have internet access, please contact Horizon Product Support to obtain an RMA number along with instructions for submitting your product for service. When calling Horizon, you will be asked to provide your complete name, street address, email address, and phone number where you can be reached during business hours.

When sending products into Horizon, please include your RMA number, a list of the included items, and a brief summary of the problem.

A copy of your original sales receipt must be included for warranty consideration. Be sure your name, address, and RMA number are clearly written on the outside of the shipping carton.

NOTICE: Do not ship Li-Po batteries to Horizon. If you have any issue with a Li-Po battery, please contact

the appropriate Horizon Product Support office.

Warranty Requirements – For Warranty consideration, you must include your original sales receipt verifying the proof of purchase date.

Provided warranty conditions have been met, your Product will be serviced or replaced free of charge.

Service or replacement decisions are at the sole discretion of Horizon.

Non-Warranty Service – Should your service not be covered by warranty, service will be completed and payment will be required without notifying cation or estimate of the expense unless the expense exceeds 50% of the retail purchase cost.

By submitting the item for service you are agreeing to payment of the service without notifying cation.

Service estimates are available upon request.

You must include this request with your item submitted for service. Non-warranty service estimates will be billed a minimum of ½ hour of labor. In addition, you will be billed for return freight.

Horizon accepts money orders and cashier's checks, as well as Visa, MasterCard, American Express, and Discover cards. By submitting any item to Horizon for service, you are agreeing to Horizon's Terms and Conditions found on our website http://www.horizonhobby.com/content/service-center_render-service-center.

ATTENTION: Horizon service is limited to Product compliant in the country of use and ownership. If received, a non-compliant Product will not be serviced. Further, the sender will be responsible for arranging return shipment of the un-serviced Product, through a carrier of the sender's choice and at the sender's expense. Horizon will hold non-compliant Product for a period of 60 days from notification, after which it will be discarded.

Warranty and Service Contact Information

| Country of Purchase | Horizon Hobby | Contact Information | Address |
|--------------------------|--|--|---|
| United States of America | Horizon Service Center (Repairs and Repair Requests) | servicecenter.horizonhobby.com/RequestForm/ | 2904 Research Road Champaign, Illinois, 61822 USA |
| | Horizon Product Support (Product Technical Assistance) | productsupport@horizonhobby.com 877-504-0233 | |
| | Sales | websales@horizonhobby.com 800-338-4639 | |
| European Union | Horizon Technischer Service Sales: Horizon Hobby GmbH | service@horizonhobby.eu +49 (0) 4121 2655 100 | Hanskampring 9 D 22885 Barsbüttel, Germany |

Compliance Information for the European Union



EU Compliance Statement: Horizon Hobby, LLC hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the EMC Directive.

A copy of the EU Declaration of Conformity is available online at:

<http://www.horizonhobby.com/content/support-render-compliance>.



Instructions for disposal of WEEE by users in the European Union

This product must not be disposed of with other waste. Instead, it is the user's responsibility to dispose of their waste equipment by handing it over to a designated collections point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more

information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service, or where you purchased the product.



© 2019 Horizon Hobby, LLC.

InterLink, IC3, EC3, and the Horizon Hobby logo are trademarks or registered trademarks of Horizon Hobby, LLC.

The Spektrum trademark is used with the permission of Bachmann Industries, Inc.

All other trademarks, service marks, and logos are property of their respective owners.

Created

06/19 60327

SPMRFTX1

Documents / Resources



[SPEKTRUM SPMRFTX1 InterLink DX Simulator Controller](#) [pdf] Instruction Manual
SPMRFTX1 InterLink DX Simulator Controller, SPMRFTX1, InterLink DX Simulator Controller

References

- [RC Airplanes and Helicopters, RC Cars and Trucks, RC Boats, RC Radios | Horizon Hobby](#)
- [Product Service Center - Request Form](#)
- [RC Airplanes and Helicopters, RC Cars and Trucks, RC Boats, RC Radios | Horizon Hobby](#)
- [RC Airplanes and Helicopters, RC Cars and Trucks, RC Boats, RC Radios | Horizon Hobby](#)
- [RC Airplanes and Helicopters, RC Cars and Trucks, RC Boats, RC Radios | Horizon Hobby](#)
- [Horizon Hobby Compliance Information](#)
- [RC Cars, RC Trucks, RC Airplanes, Model Trains, and Slot Cars at Tower Hobbies](#)