



Sphere LCD Touch Screen Instruction Manual

[Home](#) » [sphere](#) » Sphere LCD Touch Screen Instruction Manual 

Sphere LCD Touch Screen




Contents

- 1 Initial Setup
- 2 Pairing to the 12 channel receiver
- 3 Renaming a channel/button
- 4 Customer Support
- 5 Documents / Resources
 - 5.1 References

Initial Setup

Please ensure that:

1. The LCD touch screen power supply is connected correctly to the +12V and Ground screw terminals.

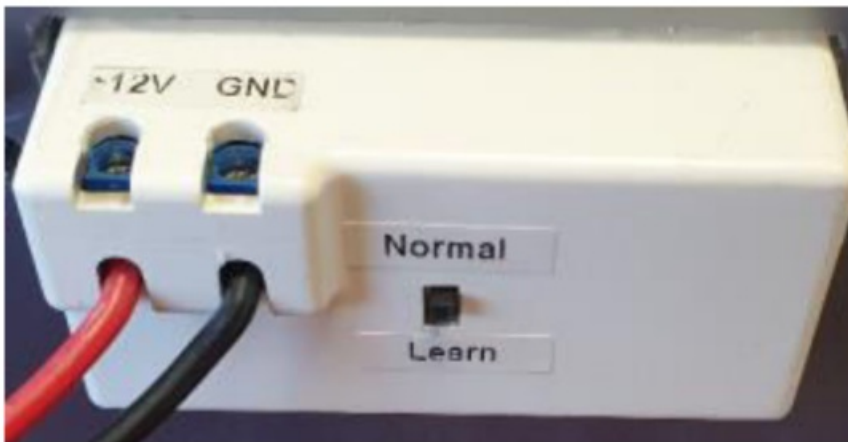

2. The switch at the back is set to "Normal" during standard operation.



3. The 12 channel receiver is powered up and ready for operation.



Pairing to the 12 channel receiver

The LCD touch screen comes with 12 channels/buttons which can be paired to the required 12 channel receiver.

1. The 12 channel receiver must first be set into pairing mode.

To do so, please go to the “Programming Wireless Switches” section of the 12 channel receiver manual.

Follow the steps for moving the dip switches.

2. With the 12 channel receiver in pairing mode, please locate the dip switch at the rear of the LCD touch screen.
3. Move the dip switch into the “Learn” position
4. Press the button on the LCD screen which you intend to pair to the 12 channel receiver.
5. The 12 channel receiver LED will flash orange to confirm
6. Move the dip switch back into the “Normal” position

Your LCD channel/button is now programmed to the selected channel(s) on the 12 channel receiver Please note, the Master OFF and Master ON buttons need to be programmed to all channels for full control To delete an LCD button from the 12 channel receiver you repeat the same pairing process:

7. The 12 channel receiver must first be set into pairing mode.

To do so, please go to the “Programming Wireless Switches” section of the 12 channel receiver manual.

Follow the steps for moving the dip switches.

8. With the 12 channel receiver in pairing mode, please locate the dip switch at the rear of the LCD touch screen.
9. Move the dip switch into the “Learn” position
10. Press the button on the LCD screen which you intend to delete from the channel receiver.
11. The 12 channel receiver LED will flash red to confirm
12. Move the dip switch back into the “Normal” position

Your LCD channel/button is now deleted from the selected channel(s) on the 12 channel receiver

Renaming a channel/button

Each of the 12 channels/ buttons on the LCD touch screen can be renamed as desired. To do so, please follow the below steps:

1. Press the Settings icon on the right hand side
2. Press on the channel which channel you wish to rename



3. Type the desired name with the keyboard that appears




4. Return to the main page by pressing the Home icon on the right hand side.

Customer Support

More information <https://www.caravansplus.com.au>



Documents / Resources

<div><div></div><div>Sphere LCD Touch Screen</div><div><small>Copyright 2010/2011</small></div><div><small>www.sphere.com.au</small></div></div>	<div><div>Sphere LCD Touch Screen [pdf] Instruction Manual</div><div>LCD Touch Screen, Touch Screen, Screen</div></div>
---	---

References

- 🚐 [Caravan Accessories & RV Parts Australia - CaravansPlus](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.