



SpinBot NinjaX Mobile Gaming Triggers User Guide

[Home](#) » [SpinBot](#) » SpinBot NinjaX Mobile Gaming Triggers User Guide 

Contents

- [1 SpinBot NinjaX Mobile Gaming Triggers](#)
- [2 Product Usage Instructions](#)
- [3 Power ON/OFF \(Only for Left Side Trigger\)](#)
- [4 Mode Switching](#)
- [5 Change Gears \(frequency\) in Automatic Burst Mode](#)
- [6 Know your Device](#)
- [7 LED Indication](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



SpinBot NinjaX Mobile Gaming Triggers



Specifications

- **Model:** NinjaX Electric
- **Compatible Platform:** Android/iOS
- **Battery capacity:** 30mAh
- **Working current:** 100mA
- **USB interface:** Micro-USB (charging only)
- **Number of Gears:** 5 (1/8/16/21/68 shots per sec)

Product Usage Instructions

Power ON/OFF

1. Locate the power button on the left side trigger.
2. To turn the trigger ON when it is in the OFF state, press and hold the power button for 2 seconds.
3. To turn the trigger OFF when it is in the ON state, press and hold the power button for 2 seconds.

Power ON/OFF (Only for Left Side Trigger)

- When in OFF state, press and hold the power button for 2 seconds to turn trigger ON.
- When in ON state, press and hold the power button for 2 seconds to turn trigger OFF.

Mode Switching

- When in ON state, short press the power button to switch between single shot mode and automatic burst mode.
- **Single Shot Mode:** The BLUE LED is ON • (fixed). Automatic Burst
- **Mode:** The BLUE LED O is flashing

Change Gears (frequency) in Automatic Burst Mode

- When in automatic burst mode, first press the FIRE Button and temptress the POWER button together to switch between 8 shots / 16 shots / 21 shots / 68 shots in 1 second (frequency of LED flashing increases with gears)

Specification

<i>Model</i>	<i>NinjaX Electric</i>
<i>Compatible Platform</i>	<i>Android/iOS</i>
<i>Battery capacity</i>	<i>30mAh</i>
<i>Working current</i>	<i>100mA</i>
<i>USB interface</i>	<i>Micro-USB (charging only)</i>
<i>Number of Gears</i>	<i>5 Gears (1/8/16/21/68 shots per sec)</i>


1. Step 1

Go to your game control settings and customize the controls by moving the AIM & FIRE button to the top and save settings. flf required adjust the size of AIM & FIRE button)




2. Step 2

Presenter over interline in then eats the back clip.

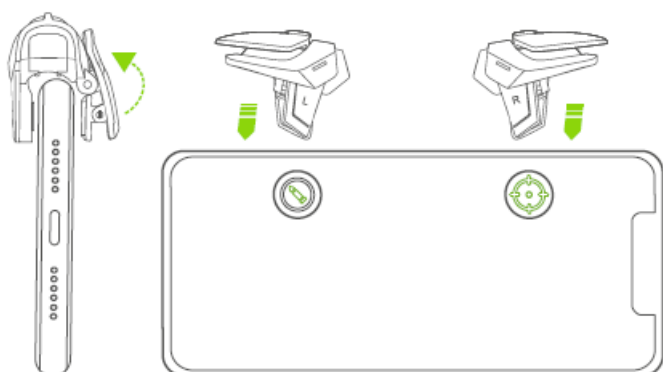


Know your Device

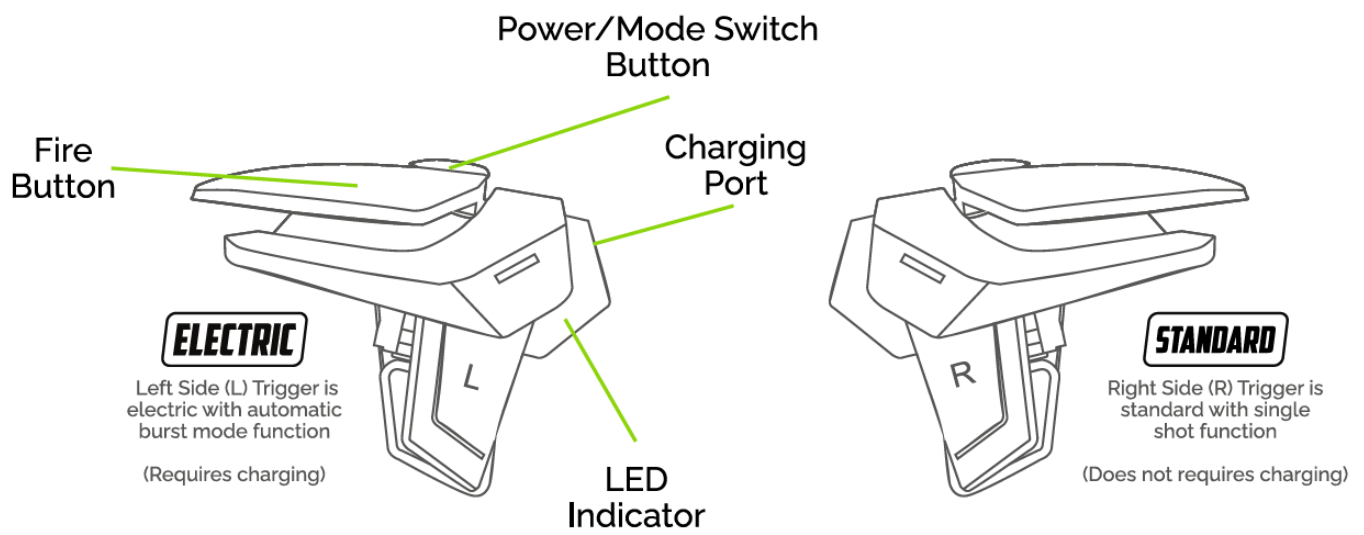

LED Indication

- **Charging:** The RED LED is ON © (fixed)
- **Charging Full:** The LED goes OFF O

Documents / Resources

	SpinBot NinjaX Mobile Gaming Triggers [pdf] User Guide NinjaX, NinjaX Mobile Gaming Triggers, Mobile Gaming Triggers, Gaming Triggers, Triggers
---	--

References

- [User Manual](#)