

SPINTLY AURA Basic Wireless Thread Access Control Instruction Manual

Home » SPINTLY » SPINTLY AURA Basic Wireless Thread Access Control Instruction Manual




Contents

- 1 SPINTLY AURA Basic Wireless Thread Access
- Control
- 2 About:
- 3 Features
- **4 Specifications**
- 5 Box content:
- 6 Mechanical dimensions
- 7 Mounting Instruction
- 8 10 core pigtail color code
- 9 Documents / Resources
- **10 Related Posts**



SPINTLY AURA Basic Wireless Thread Access Control

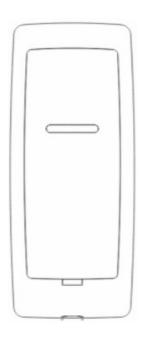

About:

Spintly AURA the advanced BLE mesh enabled reader by Spintly with highest level of security and reliability

Features

- BLE Mesh connectivity to Gateway
- · Wide Input operating voltage
- Highly Interoperable, retrof with legacy controllers over Wiegand
- No internet required for access
- Cloud based access management

Specifications


• Voltage ratings: 9Vto 30V DC

• Power consumption: 2.4W max at 12V


Box content:

Sr. No.	Contents in the box	Qty.
1	Spintly AURA BASIC unit	1
2	ISO #6, 25mmL, CSK (+)	2
3	Wall Plugs	2
4	Instruction Manual	1


Mechanical dimensions

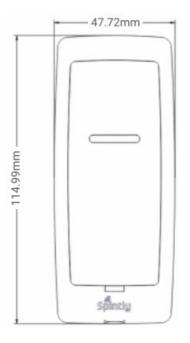


Mounting Instruction

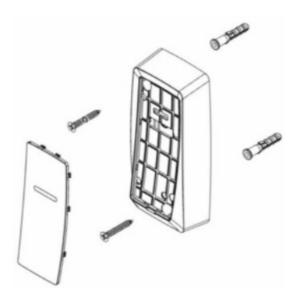


Step 1: Mount the AURA unit on the wall with 2, ISO #6, 25mmL, CSK (+) screws as shown below

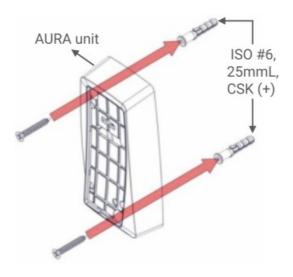

Step 2: Snap in the front face plate as shown below

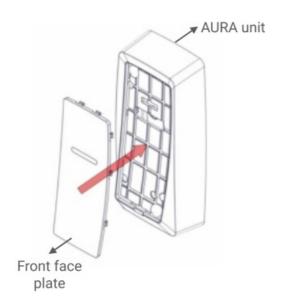

10 core pigtail color code

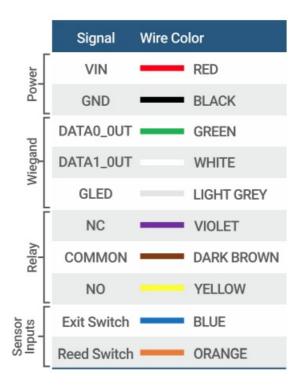





Contact Us

USA: +91 70221 97983India: +91 87668 12888

• support@spintly.com

• sales@spintly.com

• For more information visit: www.spintly.com

Documents / Resources



<u>SPINTLY AURA Basic Wireless Thread Access Control</u> [pdf] Instruction Manual AURA Basic, AURA Basic Wireless Thread Access Control, Wireless Thread Access Control, Thread Access Control, Access Control

Manuals+,