



Spok GenA Version 2 Pager User Guide

[Home](#) » [spok](#) » Spok GenA Version 2 Pager User Guide 

Spok GenA Version 2 Pager User Guide



TURNING PAGER ON

Press the ENTER button for 3 seconds to turn the pager on. A startup screen is momentarily displayed, and the pager alerts with the currently selected alert-mode (vibe, audio, silent).

IMPORTANT: The pager has an internal power reservoir. If the reservoir is depleted when a new battery is inserted, it may take up to 15 seconds before the pager can turn on.

TURNING THE BACKLIGHT ON MANUALLY

Press ESCAPE for 2 seconds.

MAIN SCREEN

As you navigate through the Main Screen, the highlighted icon will change to indicate the current location of the cursor. Press LEFT or RIGHT to navigate through the Main Screen. Press ENTER to select the highlighted icon.

SETTINGS MENU

As you navigate through the Settings menu, the row highlighted will indicate the current position of the cursor. Press UP or DOWN to navigate through the menu list. Press ENTER to select the current function. Press ESCAPE to exit the Settings menu.

TURNING PAGER OFF

From the Settings menu:

Press DOWN to move the cursor to show Pager Off. Press the ENTER and select Turn Off from the popup and press ENTER.

RECEIVING/READING MESSAGES

From the Inbox or a Groups folder:

Press DOWN to move the highlight to the message you want to read Press ENTER to read the message Press RIGHT or LEFT to move down or up the message list page by page

DELETING A MESSAGE/ALL MESSAGES**To delete a single message:**

Press UP or DOWN to select the message you want to delete Press ENTER for 2 seconds and move the highlight to show Delete Press ENTER to delete the message To delete all read messages or all messages (From the Message List screen):

Press ENTER for 2 seconds, then press UP to move the highlight to show either Delete Read Msgs or Delete All Msgs Press ENTER to delete all read messages or all messages

MOVING A MESSAGE TO THE SAVED FOLDER

Press UP or DOWN to select the message you want to move Press ENTER for 2 seconds and move the cursor to show Save Press ENTER to save the message

LOCKING AND UNLOCKING MESSAGES

Messages can be locked to prevent them from being accidentally deleted or from being automatically replaced when the memory is full Press UP or DOWN to select the message you want to lock or unlock Press ENTER for 2 seconds and move the cursor to show Lock or Unlock Press ENTER to lock or unlock the message

SETTING MESSAGE FONT SIZE (Text size)**From the Settings menu:**

Move the cursor to show Message Font Size Press ENTER to display the Message Font Size selection popup Press UP or DOWN to select the text size desired and press ENTER

SETTING DATE AND TIME

Press DOWN to move to the Set Date & Time option and press ENTER Press ENTER to select the Set Date & Time option Press UP or DOWN to change the hours' time value Press LEFT or RIGHT to move to the other settings Press ENTER to activate and exit to the main screen

SETTING INBOX OR GROUPS FOLDER ALERTS**From the Settings Menu:**

Press DOWN to move to the Folder Alerts option and press ENTER Press ENTER to select the Inbox option or DOWN & ENTER to select a specific Groups folder Press DOWN to move to the Type, Front Light, Reminder Alert or Continuous Alert options and press ENTER to select Change the option setting(s) as needed QUIET MODE When Quiet Mode is on, all audible device alerts are changed to vibrate.

When set to off, all audible alerts are restored

From the Settings menu:

Move the cursor to show Quiet Mode and press ENTER Press UP or DOWN to change the setting to On or Off

SETTING THE ALARM**From the Settings menu:**

Move the cursor to show Alarm and press ENTER Press ENTER to select the Type screen Press UP or DOWN to select the Alarm type (Off, One Time, Daily) and press ENTER Press DOWN to select the Set Time screen Press UP or DOWN to change the hours' time value Press RIGHT to move to the minutes' value and change it Press ENTER to activate and exit to the main screen An alarm status icon will appear on the bottom row of the main screen SETTING DO NOT DISTURB TIME (If feature is available in Settings) Do Not Disturb sets a time period when the device will receive messages without alerting

From the Settings menu:

Move the cursor to show Do Not Disturb and press ENTER Press ENTER to select the Mode screen and select Enabled Press DOWN to select the time range and press ENTER Adjust the From and To times to reflect when the Do Not Disturb time period should start and end.

Press UP or DOWN to change the start hours' time value Press RIGHT to move to the From minutes' time values and press UP or DOWN to adjust as needed.

After setting the start time, repeat the previous steps to set the To time and press ENTER to set The Alert at End option controls whether the pager will alert at the end of the Do Not Disturb time if a message was received

SETTING DISPLAY LOCK (Feature only available with message encryption)**From the Settings menu:**

Move the cursor to show Enable Lock Code Press ENTER to display the Enable Lock Code screen Press a four-button sequence and remember it Press ENTER to activate the lock

* Display lock will activate after 5 minutes of pager inactivity. For immediate activation select Lock Now from the Settings menu

* Select Disable Lock Code from the Settings menu and enter the current passcode to disable the display lock

Contents

[1 Gen A Icons and Symbols](#)

[2 GenA Document](#)

[Downloads](#)

[3 Documents / Resources](#)

[3.1 References](#)

[4 Related Posts](#)

Gen A Icons and Symbols

Main Screen Folder Icons



Inbox



Groups (optional)



Saved



Settings

Main and Time Screen Status Row Icons (Bottom Row)



Audio Alert



Silent Alert (Vibration)



Disabled Alert (Silent)



Alarm Enabled



Full Battery Status



3/4 Battery Status



Low Battery Status



New Message



Full Encrypted Message Support



Do Not Disturb active



2/4 Battery Status



1/4 Battery Status

General Navigation Indicators



Before Page



Next Page



Current Setting

Message Status Indicators



 
Unread Message Indicator



Locked Message Indicator



Unread & Locked Message Indicator



Duplicate Message Indicator



Unread & Duplicate Message Indicator

GenA Document Downloads


Quick Start Guide



User Manual



Documents / Resources

	<p>Spok GenA Version 2 Pager [pdf] User Guide GenA Version 2 Pager, GenA, Version 2 Pager, 2 Pager, Pager</p>
---	---

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.