

SQT Electronics SK-646BT Bluetooth and 2.4GHz Auto-Link Keyboard Instruction Manual

 
[Home](#) » [SQT Electronics](#) » SQT Electronics SK-646BT Bluetooth and 2.4GHz Auto-Link Keyboard Instruction Manual 

Contents

- 1 SQT Electronics SK-646BT Bluetooth and 2.4GHz Auto-Link Keyboard
- 2 Installing the batteries
- 3 Keyboard instructions
- 4 Multimedia Hotkeys functions
 - 4.1 Bluetooth Keyboard to use
- 5 FCC Warning Statement
- 6 Documents / Resources
- 7 Related Posts

SQT 銘鍵

SQT Electronics SK-646BT Bluetooth and 2.4GHz Auto-Link Keyboard

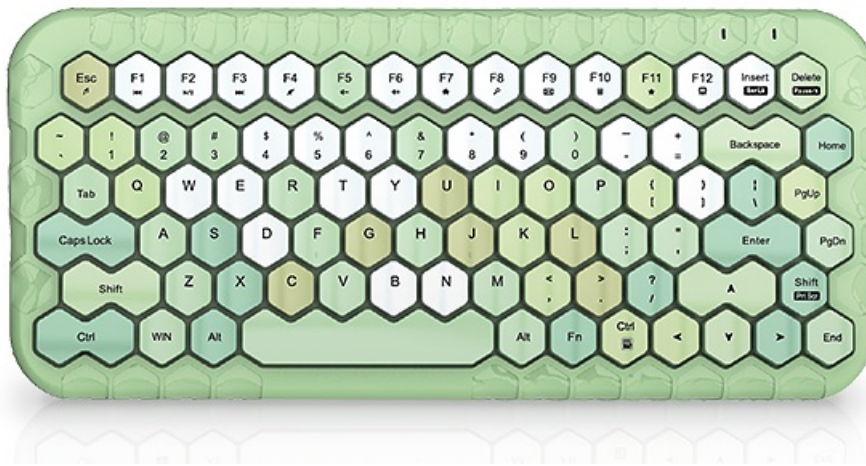 


Installing the batteries

The RF2.4GHz Optical keyboard use two AAA alkaline battery.

Install the batteries in the keyboard

- Step 1: Remove the battery compartment cover on the bottom of the keyboard by squeezing the cover in from the tab to release it
- Step 2: Insert the batteries as shown inside the battery compartment
- Step 3: Replace the cover

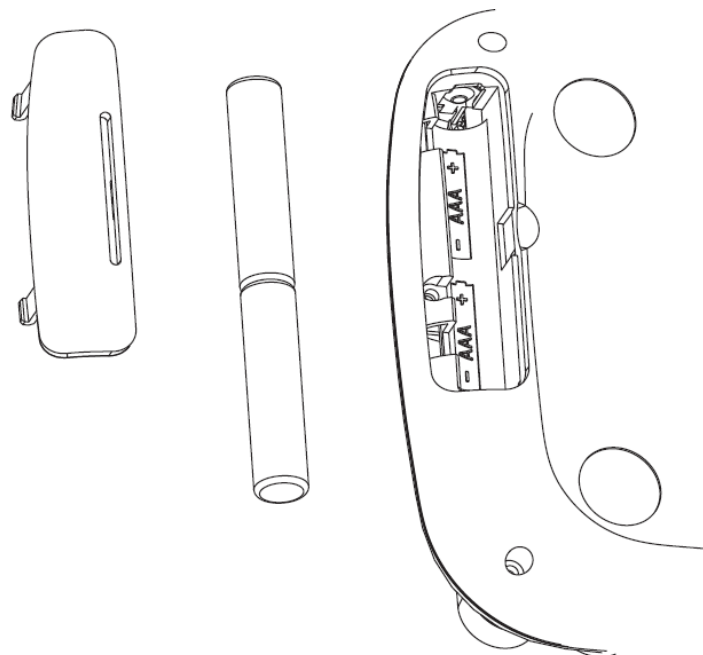

Keyboard instructions

- Bluetooth channel 1 signals
- Bluetooth channel 2 signals
- Bluetooth channel 3 signals
- Low resistance signals
- Bluetooth channel 1 indicator light
- Bluetooth channel 2 indicator light

- Bluetooth channel 3 indicator light

Multimedia Hotkeys functions

SK-646BT Multimedia Hotkeys Functions			
System Keys	FN+E(IOS)	FN+Q(Android)	FN+W(Windows)
Esc	Main Page	Main Page	Esc
F1	Clip	Clip	F1
F2	Copy	Copy	F2
F3	Stick	Stick	F3
F4	Language shift	Language shift	F4
F5	Search	Search	F5
F6	Previous Track	Previous Track	F6
F7	Play/Pause	Play/Pause	F7
F8	Next Track	Next Track	F8
F9	Mute	Mute	F9
F10	Volume Down	Volume Down	F10
F11	Volume Up	Volume Up	F11
F12	Lock screen	Lock screen	F12

Press FN+E into IOS (iPad, iPhone) operation system

Press FN+Q into Android (Samsung Galaxy products) operation system

Press FN+W into Windows operation system

Bluetooth Keyboard to use

1. Pay attention to the battery is on the cathode,
2. According to the channel switch 1 mode, switch to the Bluetooth channel 1 indicator
3. Long press the Bluetooth key for 5seconds indicator light flash Bluetooth channel the keyboard into the matching state.
4. Open the Bluetooth search switch on Bluetooth devices, search the Bluetooth keyboard
5. Double-click the MOFII_888 keyboard icon on the Bluetooth device
6. Can be used normally after the connection is successful

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed


and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

Documents / Resources

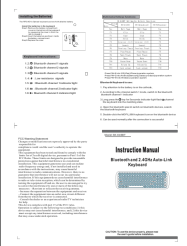	<p>SQT Electronics SK-646BT Bluetooth and 2.4GHz Auto-Link Keyboard [pdf] Instruction Manual</p> <p>SK-646BT, SK646BT, WOX-SK-646BT, WOXSK646BT, SK-646BT Bluetooth and 2.4GHz Auto-Link Keyboard, Bluetooth and 2.4GHz Auto-Link Keyboard</p>
--	--