

SSL BTB8L All-Terrain Sound System User Manual

Home » SSL » SSL BTB8L All-Terrain Sound System User Manual

Contents


- 1 SSL BTB8L All-Terrain Sound **System**
- **2 INFORMATION TO THE USER**
- **3 FCC COMPLIANCE STATEMENT**
- **4 BEFORE YOU START**
- **5 INSTALLATION PRECAUTIONS**
- **6 GETTING TO KNOW YOUR BTB8L**
- **7 BLUETOOTH OPERATION**
- **8 BLUETOOTH OPERATION**
- 9 STREAMING MUSIC
- **10 AUX INPUT**
 - **10.1 AUX-IN OPERATION**
 - **10.2 VOLUME CONTROL**
- 11 INSTALLATION
- 12 GETTING STARTED
- 13 TROUBLESHOOTING
- **14 DIMENSIONS**
- **15 WIRE DIAGRAM**
- **16 SPECIFICATIONS**
- 17 Documents / Resources
- **18 Related Posts**



SSL BTB8L All-Terrain Sound System



Thank you for purchasing this SOUND STORM BTB&L All-Terrain Sound System Please read through these instructions carefully so you will know how to operate your model properly. After you have finished reading the instructions, keep this document in a safe place for future reference.

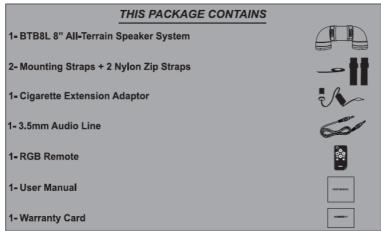

INFORMATION TO THE USER

Bluetooth The Bluetooth@ word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license. Other trademarks and trade names are those of their respective owners.

INFORMATION TO THE USER

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. this device may not cause interference, and
- 2. this device must accept any interference, including interference that may cause undesired operation of this device

This transmitter must not be coeducated or operated in conjunction with any other antenna or transmitter. The Bluetooth antenna cannot be removed (or replaced) by user. this equipment complies with FCC/ IC radiation exposure limits set forth for an uncontrolledly environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles). Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equip mint generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Life this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate or reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION!! ADJUSTMENT OR ALTERATIONS OF THIS DEVICE MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

BEFORE YOU START

IMPORTANT SAFETY PRECAUTIONS

- Do not operate mobile equipment while driving a motorized vehicle safe driving and safety consideration of others should always be your highest priority.
- In the event you should notice smoke, strange noises or odor from this product, or any other abnormal signs, immediately turn off the power and consult your dealer or the nearest authorized sound STORM LABS Service Center. Using this product in this condition may result in permanent damage to the system.
- Set your volume control at a low setting, then slowly increase the sound until you can hear it comfortably without distortion, or ear discomfort.
- BE SURE TO OBSERVE THE FOLLOWING GUIDELINES:
 - Do not turn up the volume so high that you can't hear what's around you.
 - Use caution or temporarily discontinue use in potentially hazardous situations.

INSTALLATION PRECAUTIONS

WARNING-Always consult a professional installer

- Professional installation recommended. Do not attempt to service this product by yourself.
- Servicing of this product by persons without professional training and experience in electronic equipment and notarized vehicle accessories may be dangerous and could expose you to the risk of electric shock, Injury or other hazards.
- Contact SSL for any installation, service questions or requests.
- The BTB8L can be powered from a vahines cigarette lighter/ auxiliary power port, or hard wired directly to the battery through an optional relay accessory Switch
- When wiring directly to the vehicles battery, be sure to disconnect the batteries negative terminal wire before starting any wiring procedures, it is suggested that an optional fuse and fuse holder (not included) with minimum rating of 15 Amps be in line with the positive battery terminal
- The ground cable length should not exceed 18-inches (See wiring diagram)

- The BTB8L has a weather resistant design, it should not be submerged in or under water under any circumstances
- Use only the installation parts provided with the BTBBL
- Wash with a mild soap or detergent and lukewarm water using a dean sponge or a soft cloth. Rinse well with dean water.

"Don'ts" Very Important


- DON'T clean in hot sun or on very hot days.
- DON'T use abrasive or highly alkaline cleaners on the main body
- DON'T scrape the main body with razor blades, or other sharp instruments
- DON'T ever use, gasoline, acetone or carbon tetrachloride

CAUTION!! Using other mounting methods may void this warranty

GETTING TO KNOW YOUR BTB8L

- 1. BTBBL BOOMTUBE
- 2. 3.5mm AUX-INPUT
- 3. CIGARETTE POWER CABLE ADAPTOR
- 4. LED POWER INDICATOR
- 5. RGB LED LIGHTS
- 6. RGB REMOTE

BLUETOOTH OPERATION

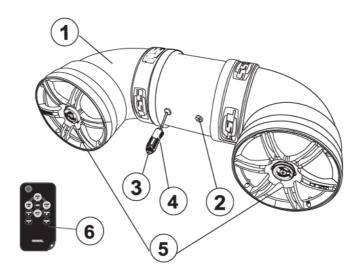

PAIRING& DISCOVERING A NEW BLUETOOTH CONNECTION

- 1. Power on the BTB8Lby plugging in the male cigarette lighter adaptor into3)a female cigarette lighter receptacle.
- 2. The BTB8L will automatically go in to pairing mode:

ANDROID users:

1. Go into the Settings Menu of your device

- 2. Enter the Bluetooth Menu
- 3. TURN ON Bluetooth and press SCAN
- 4. "SSL BTBL" will now be displayed under AVAILABLE DEVICES
- 5. If prompted, enter passcode. "0000"


iOS users:

- 1. Go into the Settings Menu of your iOS device
- 2. Enter the Bluetooth Menu
- 3. TURN ON Bluetooth
- 4. "SSL BTB8L" will now be displayed
- 5. If prompted, enter passcode: "0000"

NOTE: You have 2 minutes before you must restart this procedure over again.

- 3. If SSL BTB8L is not seen, repeat the above steps to refresh the "Device List"
- 4. When the connection is successful, you are now ready to stream music from your favorite media player to the BTB8L

BLUETOOTH OPERATION

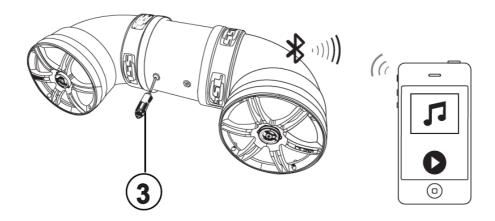


RECONNECTION

- 1. Power on the BTB&L and your last paired Bluetooth device.
- 2. The unit will now automatically reconnect
- 3. If your device was previously paired with the BTB8L, but it wasn't the last paired device:
 - 1. Ensure no other devices are currently paired
 - 2. Enter the Bluetooth Menu on your device being paired
 - 3. "SSL BTB8L" will display under AVAILABLE DEVICES
 - 4. Choose the "SSL BTB8L "to reconnect
- 4. If the device is out of range from the BTB8L, it will disconnect automatically:
 - 1. The BTB&L will automatically reconnect to the device once back in range

To avoid battery exhaustion, be sure to oCcasionally run the ips: vehicles engine while using this product. Using this product without running the engine can drain the battery.

STREAMING MUSIC

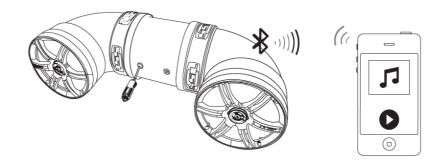

BLUETOOTH OPERATION

1. Press the PLAY/PAUSE from your devices touch screen


volume control

1. To raise or lower the volume use your device volume controls

Tins

For maximum performance, ensure your device Bluetooth volume is set to a minimum 75% level before stowing

AUX INPUT

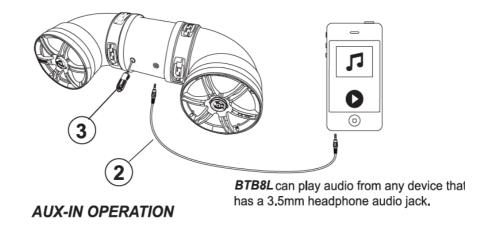

AUX-IN OPERATION

- 1. Power on the BTB&L by plugging in the male cigarette lighter adaptor into a female cigarette lighter receptacle.
- 2. Connect the integrated 3.5mm AUX-IN cable2one end of to BTB8L jack and one end to your devices headphone jack
- 3. Route the wire back to BTB8L, and secure your device


VOLUME CONTROL

To raise or lower the volume use your device volume controls

Tip: For maximum performance, ensure your device Bluetooth volume is set to a minimum 75% level before stowing


INSTALLATION

- 1. Use the supplied adjustable straps to secure to rails or roll bars
- 2. Always recheck straps before every ride

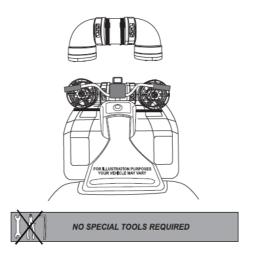


GETTING STARTED

GETTING TO KNOW YOURR BTB8L RGB REMOTE

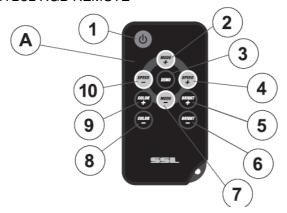

1. RGB REMOTE

- 1. POWER ON/OFF
- 2. MODE UP
- 3. AUTO DEMO
- 4. SPEED UP
- 5. BRIGHTNESS UP
- 6. BRIGHTNESS DOWN
- 7. MODE DOWN
- 8. color DOWN
- 9. color UP
- 10. SPEED DOWN

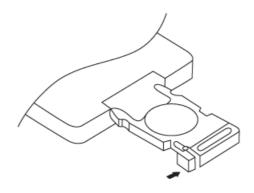

REPLACEMENT BATTERY - CR2025

- 1. RF controller range: Up to 25ft (LoS)
- 2. Do not obstruct the RF remote with metal
- 3. Always keep away from small children
- 4. Do not store in direct sunlight

TROUBLESHOOTING

TROUBLE	CAUSE	SOLUTION
	Thefuae lablown	Check / replace the fuse
Unit will not turn on	Main accawitch not engaged	Turn switch to on position
	Device volume is low / muted	Turn the volume level up
No sound is heard	Device is paused or muted	Check your devices playing / volume status
Cannot pair Bluetooth	The Bluetooth function of the device is not enabled	Refer to the user manual of the device for how to enable the Bluetooth function
The audio quality is poor after connection with a Bluetooth enabled device	The Bluetooth reception is poor	Move the device closer to the audio system of remove any obstacle between the device
Unit has become unresponelve	Power giltch or interference	Disconnect power for 10 aeconds to reset


SUPPORT

For the latest information about this product please visit www.soundstormlab.com


TECH SUPPORT:

805-751-4855 www.soundstormlab.com/technical-support

DIMENSIONS

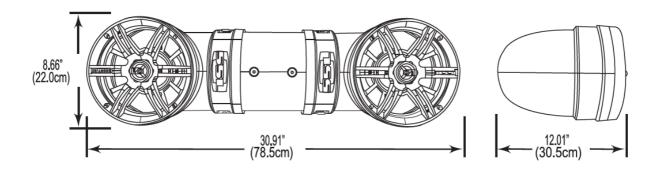

WIRE DIAGRAM

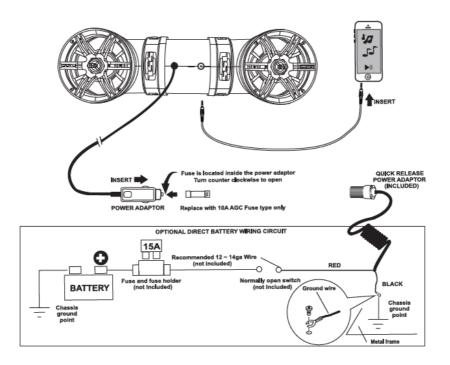

SPECIFICATIONS

BLUETOOTH

• Version: 5.0/ EDR

A2DP

• Range:33ft(10m)

SPEAKERS

• Dimensions: 8"/ 203. 3mm

• Cone Type: PP CARBON+ RUBBER SURROUND

• Tweeter Size: 1" PEI SOFT DOME

AMPLIFIER

• Class A/B

Maximum Output

• Power: 700 Watts

• Input impedance: 10k

• Frequency Response: 45Hz-22kHz

GENERAL

• Operational Power 12VDC (10-16V allowable)

• MAX Current Draw: 10A

• Replacement Fuse: 10A AGC TYPE

· Color: Black

• Weight: 12.7lbs /5.75Kg

• Dimensions cm WxHxD: 78.5 x 22.0 x 30.5

• Dimensions Inches WxHXD: 30.91x 8.66 x 12.01

SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE

Documents / Resources

SSL BTB8L All-Terrain Sound System [pdf] User Manual BTB8L All-Terrain Sound System, BTB8L, All-Terrain Sound System, Sound System

Manuals+,