



SSL T26 Portable Karaoke Machine User Guide

[Home](#) » [SSL](#) » SSL T26 Portable Karaoke Machine User Guide 

SSL T26 Portable Karaoke Machine User Guide



Contents

- [1 Play music via Bluetooth](#)
- [2 Play music via USB flash drive](#)
- [3 Play music via TF card](#)
- [4 Echo fuction](#)
- [5 Record fuction](#)
- [6 FM radio fuction](#)
- [7 Connect a second microphone](#)
- [8 Charge the speaker](#)
- [9 Documents / Resources](#)
- [10 Related Posts](#)

Play music via Bluetooth

1. Power on the speaker, the default mode is Bluetooth, the screen display "blue" will flash.
2. Open the Bluetooth of your device, search "EARISE T26", click to pair.
3. To adjust the volume of music, you can adjust the master volume knob on the speaker or adjust the volume on your Bluetooth device.
4. If you want to adjust the volume of mic separately, you can adjust the volume of music on your Bluetooth device and adjust the volume of mic via the master volume knob.

Play music via USB flash drive

1. Insert the USB flash drive, the speaker plays existing music automatically.
2. The song file format must be MP3.
3. The capacity of the USB flash drive must be 8G to 32G.
4. The USB flash drive must be USB 2.0 and the file system must be FAT32.
5. If the USB flash drive is formatted, the file system is not FAT32, it can't work.

Play music via TF card

1. Insert the TF card, the speaker plays existing music automatically.
2. The song file format must be MP3.
3. The capacity of the TF card must be 8G to 32G.
4. The file system of the TF card must be FAT32.

Echo fuction

Press the "ECHO" button to select the intensity of the reverb, EC0 is off, and EC3 is the strongest.

Record fuction

1. Insert the TF card or USB flash drive, please ensure enough recording storage space.
2. Press and hold the "REC" button to start recording. Press the "REC" button to pause recording.
3. Press and hold the "REC" button again to finish recording.
4. Delete the recording file: when playing the recording file, press and hold the "MODE" button to delete the current recording file.
5. Unplug the USB flash drive or TF card, insert it to your device (such as notebook, computer) to check the recording file. The recording file format will be MP3.

FM radio fuction

1. Press the "MODE" button to switch to the FM radio mode.
2. Press and hold the "Play/Pause" button to search FM stations automatically. The station will be saved automatically, the screen display shows "P01", "P02"..... and so on.
3. Press the "Last Song" or "Next Song" button to select a saved station.

Connect a second microphone

- 1. There is a MIC IN jack (the 6mmAUX jack) on the speaker for a second microphone.
- 2. If connect to a wired microphone, just connect it via the MIC IN jack.
- 3. If connect to a wireless microphone, just connect the wireless receiver with the MIC IN jack. But please note that the frequency of the wireless mic can not be 261.8MHz, or it will cause interference with the original mic.

Charge the speaker

- 1. When the low battery symbol flashes, it means the speaker is in low battery level and the volume will be dropped to around 70% automatically.
- 2. Use the included USB cable to charge the speaker. One end of the USB cable is connected to the USB 5V charging port on the speaker and the other end is connected to the power socket. (The adapter is not included)
- 3. When charging, the charging indicator lights up, and it will turned off when fully charged.
- 4. For the first use, the charging time can't be less than 12 hours.

Documents / Resources

<div><p>T26 User Guide</p><p>How to use the Bluetooth</p><ol style="list-style-type: none">1. Turn on the Bluetooth function of the speaker.2. Turn on the Bluetooth function of the mobile phone.3. Search for the speaker in the Bluetooth list of the mobile phone.4. Connect the speaker to the mobile phone.<p>How to use the USB Flash drive</p><ol style="list-style-type: none">1. Turn on the USB function of the speaker.2. Insert the USB Flash drive into the USB port of the speaker.3. Press the "Mode" button to switch to the USB mode.4. Press the "Play/Pause" button to start playing the music.<p>How to use the TF card</p><ol style="list-style-type: none">1. Turn on the TF function of the speaker.2. Insert the TF card into the TF card slot of the speaker.3. Press the "Mode" button to switch to the TF mode.4. Press the "Play/Pause" button to start playing the music.<p>Other features</p><ol style="list-style-type: none">1. Press the "Power" button to turn on the speaker.2. Press the "Power" button to turn off the speaker.3. Press the "Volume +" button to increase the volume.4. Press the "Volume -" button to decrease the volume.5. Press the "Mode" button to switch between different modes.6. Press the "Play/Pause" button to start or pause the music.7. Press the "Next" button to skip to the next track.8. Press the "Previous" button to skip to the previous track.9. Press the "Repeat" button to repeat the current track.10. Press the "Shuffle" button to shuffle the tracks.<p>Special Notice</p><ol style="list-style-type: none">1. Please do not use the speaker in a fire or explosion-prone area.2. Please do not use the speaker near water or other liquids.3. Please do not use the speaker near strong magnetic fields.4. Please do not use the speaker for long periods of time.5. Please do not use the speaker for high power output.6. Please do not use the speaker for high frequency output.7. Please do not use the speaker for high voltage output.8. Please do not use the speaker for high current output.9. Please do not use the speaker for high temperature output.10. Please do not use the speaker for high pressure output.</div>	<div><p>SSL T26 Portable Karaoke Machine [pdf] User Guide</p><p>T26, Portable Karaoke Machine</p></div>
--	---