



Stack TL-100 Traffic Light Remote Programing Instructions

[Home](#) » [Stack](#) » Stack TL-100 Traffic Light Remote Programing Instructions 

Stack TL-100 Traffic Light Remote Programing




Contents

- [1 PROGRAMING INSTRUCTIONS](#)
- [2 CUSTOMERS SUPPORT](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

PROGRAMING INSTRUCTIONS

1. Remove the panel from the bottom LED to locate the Receiver PCB.
2. Press The Small Black Button on the Receiver. (LED will turn on)

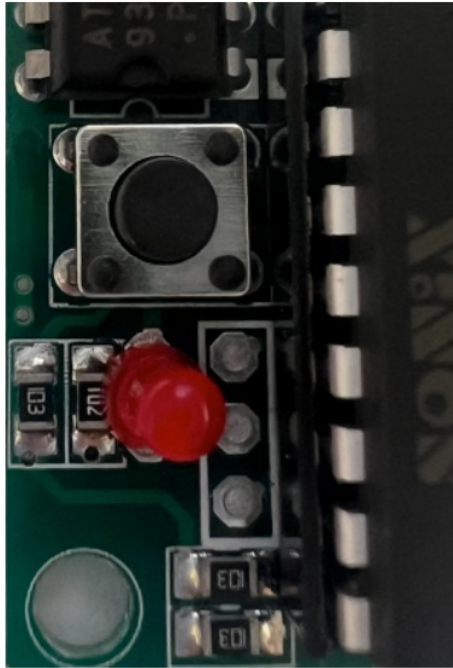

3. Press Button to be programmed on the Remote. (LED will start blinking)
4. Wait until LED stops Flashing.
5. Press Remote Button Again.
6. Repeat for other Remote Buttons to be programmed.

CUSTOMERS SUPPORT

For Help call Stack [Light.com](https://www.light.com) at (678) 288-9678

Documents / Resources

	Stack TL-100 Traffic Light Remote Programming [pdf] Instructions TL-100 Traffic Light Remote Programming, TL-100, Traffic Light Remote Programming, Light Remote Programming, Remote Programming, Programming
---	--

References

- [Light.com](https://www.light.com)
- [User Manual](#)