



## Stadler Form Lucy Aroma Diffuser Instruction Manual

[Home](#) » [Stadler Form](#) » Stadler Form Lucy Aroma Diffuser Instruction Manual

# Stadler Form<sup>®</sup>

### Operating instructions



# Lucy



Share your feedback about Lucy on: Teilen Sie Ihr Feedback von Lucy auf: Partagez votre commentaire sur Lucy : [www.stadlerform.com/Reviews](https://www.stadlerform.com/Reviews)



For frequently asked questions go to: Für häufig gestellte Fragen besuchen Sie: Trouvez la foire aux questions sur : [www.stadlerform.com/Lucy/support](https://www.stadlerform.com/Lucy/support)



Download instruction manual: Bedienungsanleitung hier herunterladen: Téléchargez le mode d'emploi : [www.stadlerform.com/Lucy/manual](https://www.stadlerform.com/Lucy/manual)



Watch the video of Lucy: Schauen Sie sich das Video zu Lucy an: Regardez la vidéo du Lucy : [www.stadlerform.com/Lucy/video](https://www.stadlerform.com/Lucy/video)



Stadler Form Aktiengesellschaft, Chamerstrasse 174, 6300 Zug, Switzerland Phone +41 41 720 48 48, Fax +41 41 720 48 44, [www.stadlerform.com/contact](http://www.stadlerform.com/contact)

Congratulations! You have just purchased the exceptional LUCY aroma diffuser. It will bring you a great deal of pleasure and improve the ambient air for you.

As with all domestic electrical appliances, particular care is needed with this model also, in order to avoid injury, fire damage or damage to the appliance. Please study these operating instructions carefully before using the appliance for the first time and follow the safety advice on the appliance itself.

### **Description of the appliance**

The appliance consists of the following main components:

1. USB cable
2. Connection for USB-C cable
3. Status LED light
4. On/Off button
5. Button for LED dimmer (normal, dimmed, lights-out)
6. Lower part/water container
7. Maximum mark
8. Ultrasonic membrane
9. Air outlet opening (Caution: no water may enter this opening!)
10. Upper part / lid
11. Mist outlet

#### **Contents** [ [hide](#) ]

[1 Important safety instructions](#)

[2 Setting up / operation](#)

[3 Repairs](#)

[4 Disposal](#)

[5 Documents / Resources](#)

[5.1 References](#)

[6 Related Posts](#)

## **Important safety instructions**

Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference; if necessary pass them on to the next owner.

- Stadler Form refuses all liability for loss or damage which arises as a result of failure to follow these operating instructions.
- The appliance is only to be used in the home for the purposes described in these instructions. Unauthorized use and technical modifications to the appliance can lead to danger to life and health.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Only connect the cable to alternating current. Observe the voltage information given on the appliance.
- Do not use damaged extension cords.
- Do not run the power cord over sharp edges and make sure that it does not get trapped.
- Do not pull the plug from the socket with wet hands or by holding on to the power cord.
- Do not use the appliance in the immediate vicinity of a bathtub, a shower, or a swimming pool (observe a minimum distance of 0.7 m). Place the appliance such that a person in the bathtub cannot touch the appliance.
- Keep the device away from heat sources.
- This device contains a lithium battery.
- In case of battery leakage: Avoid contact with human eyes and skin. Collect spillage.
- Do not place the appliance near a heat source. Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates or heaters for example). Protect power cords from oil.
- Do not drop the device. Otherwise, the battery may overheat, cause a fire or malfunction and reduce the service life
- See to it that the appliance is properly positioned to ensure high stability during its operation and make sure that no one can trip over the power cord.
- The appliance is not splash-proof.
- For indoor use only.
- Do not store the appliance outdoors.
- Store the appliance in a dry place inaccessible to children (pack the appliance).
- If the power cord is damaged, it must be replaced by the manufacturer or a repair shop authorized by the manufacturer or by similarly qualified persons in order to avoid a hazard.
- Only use fragrances, aromas of essential oils that do NOT contain alcohol. Alcohol can damage the appliance. Appliances that are damaged by such additives are not covered by the warranty.
- Prior to any maintenance, cleaning and after each use, switch off the appliance and unplug the mains cable from the socket.
- Repairs to electrical appliances must only be carried out by a qualified electrical technician.
- WARNING: Only use the USB cable provided by the manufacturer. Use only an external supply with the following specifications: DC 5V/2A.

## Setting up / operation

1. Place Lucy in the desired position on a flat surface. Connect the USB-C cable (1) to the appliance (2) and connect the cable to a suitable power source (PC, external battery, USB socket or to a suitable socket via a power adapter with min. 2 A/5 V). When the appliance is used for the first time, the battery must be charged by connecting the appliance to a power source for at least 6 hours. When the battery is fully charged, the status LED light (3) will go out. After the battery has been fully charged for the first time, you can operate the appliance without the cable using the power from the integrated rechargeable battery. A fully charged battery will give the appliance a running time of up to 7 h. When the water container is full and the appliance is connected to a power source, Lucy can operate for up to 10 h.
2. Remove the lid (10) to fill with water and fragrance.

3. Fill the water container (6) up to the maximum mark (MAX) (7) with water. No water may enter the air outlet opening (9). This will damage the appliance and will void any claim to the warranty.
4. Important: transport the appliance in an upright position and without making any jerky movements if there is water in the container (6). If the appliance is moved quickly or tilted, water may leak out and run into the electronics inside the appliance. This will damage the appliance and will void any claim the warranty.
5. Add 2–3 drops of your favorite liquid fragrance directly into the water. It is not necessary to mix them as the ultrasonic membrane (8) does this for you. Only use fragrances, aromas or essential oils that do NOT contain alcohol.
6. Close the lid (10) again.
7. Then switch Lucy on by pressing the on/off button (4).
8. If you would like to top the water up, switch off the appliance and disconnect the USB cable if it is connected to the appliance (1 + 2). Remove the lid (10) and fill the water up to the maximum mark.
9. If you are disturbed by the brightness of the illuminated mist (in the bedroom, for example), you can reduce the brightness of the LEDs by pressing the dimmer button (5). You can choose between three different modes:
  - Normal mode (switched on as standard)
  - Dimmed mode (press once)
  - light-off mode (press twice) You can return to normal mode by re-pressing the dimmer button (5).
10. On the back of the bottom part above the connection for the USB cable (2), you will find the status display for the battery (3):
  - Normal operation with fully charged battery: LED is not illuminated
  - Battery level 10 % or lower: LED flashes
  - Battery is charging: LED is illuminated constantly When the device is fully charged, the LED will go out. You can now disconnect the USB cable and use the device in battery mode (for up to 7 hours).

**Note:** If you would like to change the fragrance, empty Lucy completely and clean the water container with a damp cloth. Fill Lucy once again and pour the drops into the device following the instructions.

### **Cleaning**

Prior to any maintenance and after each use, switch off the appliance and disconnect the USB cable (1) from it. Careful: Never immerse the device in water (danger of short circuit).

- Regularly as required: To clean the outside, rub with a damp cloth and then dry thoroughly.
- If there are marks caused by water and/or fragrances on the top of the lid (10), clean it with a damp cloth and a squirt of washing-up liquid. Then dry the lid thoroughly before using the appliance again.
- Internal cleaning: You can clean the ultrasonic membrane with a conventional household descaler. If there are lime deposits, we recommend that you use Stadler Form Cleaner & Descaler ([www.stadlerform.com/accessories](http://www.stadlerform.com/accessories)). Alternatively, you can use a household descaling agent or vinegar. Please do not try to scratch off deposits from the membrane with a hard object. For stubborn deposits, we recommend that you descale the device several times in a row. After the descaling rinses the base and then dry thoroughly.
- No water may enter the air outlet opening (9). This will damage the appliance and will void any claim to the warranty.

### **Repairs**

- Repairs to electrical appliances must only be carried out by a qualified electrical technician. If improper repairs

are carried out, the warranty lapses and all liability is refused.

- Never operate the appliance if the adaptor or plug is damaged, after it has malfunctioned, if it has been dropped or has been damaged in any other way (cracks/breaks in the casing).
- Do not push any object into the appliance.
- If the appliance is beyond repair, make it unusable immediately by cutting through the cable and hand it in at the collection point provided for the purpose.
- In the event of a repair, the following points must be observed before the appliance is shipped or taken to the dealer: completely empty the water in the appliance (water tray or water tank), and allow the appliance to dry completely. Appliances containing residual water may be damaged during transport, invalidating the warranty.

## Disposal



■ The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed-out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliances. Battery disposal method: This appliance contains batteries that are non-replaceable. When the battery is at end of life, the appliance shall be properly disposed of. Do not throw it into the trash can, the electrode is wrapped in insulating paper, it can be recycled and reused.

Specifications	DC 5 V
Rated voltage	10 W
Power output	up to 7 h on battery power and
Running time	up to 10 h on mains power
Dimensions	70 x 150 mm (diameter x height)
Weight	360 g
Tank capacity	50 ml
Sound level	< 26 dB(A)
Battery charging	
temperature range	0–45 °C, Humidity ≤85 % RH
Battery model	MT-3P18650 -6000mAh
Complies with EU	
regulations	CE / WEEE / RoHS / EAC






**All rights for any technical modifications are reserved**



Design by Fabian Zimmerli

Thanks to all people involved in this project: Barry Huang with Alan Lu for their engagement and organization, Jerry Lee with Shen Yongjiu for the main engineering CAD work, Mario Rothenbühler for the photos, Fabian Zimmerli for the flickering idea and design, Matti Walker for the graphic work. Martin Stadler, CEO Stadler Form Aktiengesellschaft [www.stadlerform.com](http://www.stadlerform.com)

## Documents / Resources

	<a href="#">Stadler Form Lucy Aroma Diffuser</a> [pdf] Instruction Manual Lucy Aroma Diffuser, Lucy, Aroma Diffuser
	<a href="#">Stadler Form Lucy Aroma Diffuser</a> [pdf] Instruction Manual Lucy Aroma Diffuser
	<a href="#">Stadler Form Lucy Aroma Diffuser</a> [pdf] Instruction Manual Lucy Aroma Diffuser, Aroma Diffuser, Lucy Diffuser, Diffuser, Lucy

## References

- § [Stadler Form ensures optimal indoor climate](#)
- § [Newsletter subscription | Stadler Form](#)
- § [Stadler Form Review Products | Stadler Form](#)
- § [Stadler Form USA - Ensuring Your Optimal Indoor Climate](#)