

Stadler Form Zoe Aroma Diffuser



Stadler Form Zoe Aroma Diffuser Instruction Manual

[Home](#) » [Stadler Form](#) » Stadler Form Zoe Aroma Diffuser Instruction Manual 

Contents

- 1 Stadler Form Zoe Aroma Diffuser
- 2 Product Usage Instructions
- 3 FAQs
- 4 Description of the appliance
- 5 Important safety instructions
- 6 Setting up / operation
- 7 Specifications
- 8 Warranty
- 9 CONTACT
- 10 MORE INFO
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

Stadler Form®

Stadler Form Zoe Aroma Diffuser



Product Usage Instructions

- **Setting up / Operation:**

- Place Zoe on a flat surface in the desired position.
- Connect the USB cable to the power adapter for power supply.
- Fill the water container up to the maximum mark.
- Switch the device on using the On/Off button.
- Adjust LED dimmer settings as desired (normal, dimmed, lights-out).

- **Cleaning and Maintenance:**

- **If you wish to change the fragrance:**

- Empty Zoe completely and clean the water container with a damp cloth.
 - Refill Zoe with water and add the desired fragrance drops following the instructions.

- **Disposal:**

- Ensure proper disposal of the device according to local regulations and guidelines.

FAQs

- **Q: How do I change the fragrance in Zoe?**

- **A:** To change the fragrance, empty Zoe completely, clean the water container, refill it with water, and add the new fragrance drops following the instructions.

- **Q: What should I do if water enters the air outlet opening?**

- **A:** If water enters the air outlet opening, immediately switch off the device, unplug it, and dry the affected area thoroughly before using it again.

Congratulations!

- You have just purchased the exceptional ZOE aroma diffuser.

- It will bring you a great deal of pleasure and improve the ambient air for you.
- As with all domestic electrical appliances, particular care is needed with this model also, to avoid injury, fire damage, or damage to the appliance.
- Please study these operating instructions carefully before using the appliance for the first time and follow the safety advice on the appliance itself.

Description of the appliance

The appliance consists of the following main components:





1. USB cable
2. Power adapter for power supply
3. Connection for USB cable
4. Upper part/lid
5. Lower part/water container
6. . Maximum mark
7. Ultrasonic membrane
8. On/Off button
9. Button for LED dimmer (normal, dimmed, lights-out)
10. Air outlet opening
 - (**Caution:** no water may enter this opening!)

Important safety instructions

Please read through the operating instructions carefully before you use the appliance for the first time and keep them safely for later reference; if necessary pass them on to the next owner.

- Stadler Form refuses all liability for loss or damage that arises as a result of failure to follow these operating instructions.
- The appliance is only to be used in the home for the purposes described in these instructions. Unauthorized use and technical modifications to the appliance can lead to danger to life and health.
- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- Only connect the cable to the alternating current. Observe the voltage information given on the appliance.
- Do not use damaged extension cords.
- Do not run the power cord over sharp edges and make sure that it does not get trapped.
- Do not pull the plug from the socket with wet hands or by holding on to the power cord.
- Do not use the appliance near a bathtub, a shower, or a swimming pool (observe a minimum distance of 3 m). Place the appliance such that a person in the bathtub cannot touch the appliance.
- Do not place the appliance near a heat source. Do not subject the power cord to direct heat (such as a heated hotplate, open flames, hot iron sole plates, or heaters for example). Protect power cords from oil.
- See to it that the appliance is properly positioned to ensure high stability during its operation and make sure that no one can trip over the power cord.
- The appliance is not splash-proof.
- For indoor use only.
- Do not store the appliance outdoors.
- Store the appliance in a dry place inaccessible to children (pack the appliance).
- If the power cord is damaged, it must be replaced by the manufacturer or a repair shop authorized by the manufacturer or by similarly qualified persons to avoid a hazard.
- Before any maintenance, cleaning, and after each use, switch off the appliance and unplug the main cable from the socket.
- Repairs to electrical appliances must only be carried out by a qualified electrical technician.
- Only use the adapter provided by the manufacturer.
- Do not permit the area around the diffuser to become damp. If dampness occurs, turn the output of the diffuser down. If the diffuser output cannot be turned down, use the diffuser intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Unplug the appliance during filling and cleaning.
- Never leave water in the water tank when the appliance is not in use.
- Clean the water tank every 3 days
- Empty and clean the diffuser before storage. Clean the diffuser before the next use.
- **Warning:** Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water tank and be blown in the air causing very serious health risks.

Setting up / operation

1. Place Zoe in the desired position on a flat surface. Connect the USB cable (1) to the power adapter (2) and the appliance (3) and insert the adapter into a suitable socket. Alternatively, you can also connect the USB cable to another power source such as a PC or an external battery (battery pack/power bank) with 2 A.
2. Remove the lid (4) to fill with water and fragrance.
3. Fill the water container (5) up to the maximum mark (MAX) (6) with water. No water may enter the air outlet opening (10). This will damage the appliance and will void any claim to the warranty. Important: please do not carry Zoe around whilst it is filled with water. The water could run into the electronics.
4. Add 2–3 drops of your favorite liquid fragrance directly into the water. It is not necessary to mix them as the ultrasonic membrane (7) does this for you. If the fragrance is not intense enough, you can increase the number of drops.
5. Close the lid (4) again.
6. Then switch Zoe on by pressing the on/off button (8). The LED in the center of the top part will then start to glow. If this does not happen, check whether there is sufficient water in the device or if the adapter is connected to the electricity supply.
7. If you would like to top the water up, switch the device off and pull the network plug out. Remove the lid and fill the water up to the maximum mark.
8. If you are disturbed by the brightness of the illuminated mist (in the bedroom, for example), you can reduce the brightness of the LEDs by pressing the dimmer button (9). You can choose between three different modes:
 - Normal mode (switched on as standard)
 - Dimmed mode (press once)
 - Light-off mode (press twice)
 - You can return to normal mode by re-pressing the dimmer button (9).

Note: If you would like to change the fragrance, empty Zoe completely and clean the water container with a damp cloth. Fill Zoe once again and pour the drops into the device following the instructions.

Cleaning

Before maintenance and after every use, switch the device off and pull the network adapter out of the socket.

- **Careful:** Never immerse the device in water (danger of short circuit).
 - To clean the outside, rub with a damp cloth and then dry thoroughly.
 - If there are marks caused by water and/or fragrances on the top of the lid (4), clean it with a damp cloth and a squirt of washing-up liquid. Then dry the lid thoroughly before using the appliance again.
- **Internal cleaning:** You can clean the ultrasonic membrane with a conventional household descaler. If there are lime deposits, we recommend that you use Stadler Form Cleaner & Descaler (www.stadlerform.com/accessories). Alternatively, you can use a household descaling agent or vinegar. Please do not try to scratch off deposits from the membrane with a hard object. For stubborn deposits, we recommend that you describe the device several times in a row. After the descaling rinse the base and then dry thoroughly.
- No water may enter the air outlet opening (10). This will damage the appliance and will void any claim to the warranty.

Repairs

- Repairs to electrical appliances must only be carried out by a qualified electrical technician. If improper repairs are carried out, the warranty lapses, and all liability is refused.
- Never operate the appliance if the adaptor or plug is damaged, after it has malfunctioned, or if it has been dropped, or has been damaged in any other way (cracks/breaks in the casing).
- Do not push any object into the appliance.
- If the appliance is beyond repair, make it unusable immediately by cutting through the cable and hand it in at the collection point provided for the purpose.
- In the event of a repair, the following points must be observed before the appliance is shipped or taken to the dealer: empty the water in the appliance (water tray or water tank), and allow the appliance to dry completely.
- Appliances containing residual water may be damaged during transport, invalidating the warranty.

Disposal

The European directive 2012 / 19 / CE on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed-out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliances.



Specifications

- **Rated voltage** DC 5 V
- **Power output** 5 W
- **Dimensions** 113 x 105 mm (diameter x height)
- **Weight** 0.3 kg
- **Tank capacity** 80 ml
- **Sound level** < 27 dB(A)
- **Complies** with EU
- **regulations** CE / WEEE / RoHS / EAC

All rights for any technical modifications are reserved



Warranty

2 Years warranty

This warranty covers defects in construction, manufacturing, and material. Excluded are all wearing parts and improper usage, or consequential damages due to lack of cleaning and/or descaling of the appliance.

CONTACT

MANUFACTURER

- Stadler Form
- Aktiengesellschaft
- Chamerstrasse 174
- 6300 Zug, Switzerland
- **Phone** +41 41 720 48 48

DISTRIBUTION EU

- Stadler Form Germany GmbH
- Alt-Heerdt 104
- 40549 Düsseldorf, Germany
- **Phone** +49 211 97531-640
- **Design by** Fabian Zimmerli

Thanks to all: the people involved in this project: Barry Huang for his engagement and organization, Jerry Lee with Shen Yongjiu for the main engineering Shu Hebo for his CAD work, Mario Rothenbühler for the photos, Fabian Zimmerli for the unique idea and design, Matti Walker for the graphic work. Martin Stadler, CEO Stadler Form Aktiengesellschaft www.stadlerform.com.

MORE INFO

- Share your feedback about Zoe on: www.stadlerform.com/reviews
- For frequently asked questions go to: www.stadlerform.com/zoe/support.
- Download instruction manual: www.stadlerform.com/zoe/manual.
- Watch the video of Zoe: www.stadlerform.com/zoe.


Subscribe to our newsletter!

- www.stadlerform.com/newsletter.



- Stadler Form Aktiengesellschaft, Chamerstrasse 174, 6300 Zug, Switzerland
- **Phone** +41 41 720 48 48,
- **Fax** +41 41 720 48 44,
- www.stadlerform.com/contact.

Documents / Resources

	<p>Stadler Form Zoe Aroma Diffuser [pdf] Instruction Manual</p> <p>Zoe 4, Zoe 6, Zoe 7, Zoe Aroma Diffuser, Zoe, Diffuser, Zoe Diffuser, Aroma Diffuser</p>
--	--

References

- § [Stadler Form ensures optimal indoor climate](#)
- § [Stadler Form ensures optimal indoor climate](#)
- § [Contact us | Stadler Form](#)
- § [Newsletter subscription | Stadler Form](#)
- § [Stadler Form Review Products | Stadler Form](#)
- [🇷🇺 Официальный интернет магазин Stadler Form](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.