



## STAGE RIGHT SRD212 12" Powered Speaker User Manual

[Home](#) » [Stage Right](#) » STAGE RIGHT SRD212 12" Powered Speaker User Manual 



SRD212 12" Powered Speaker  
P/N 600014  
User's Manual



## Contents

|                                         |
|-----------------------------------------|
| <b>1 SAFETY WARNINGS AND GUIDELINES</b> |
| <b>2 CUSTOMER SERVICE</b>               |
| <b>3 PACKAGE CONTENTS</b>               |
| <b>4 PRODUCT OVERVIEW</b>               |
| <b>5 BLUETOOTH PAIRING</b>              |
| <b>6 TECHNICAL SUPPORT</b>              |
| <b>7 SPECIFICATIONS</b>                 |
| <b>8 REGULATORY COMPLIANCE</b>          |
| <b>9 Documents / Resources</b>          |
| <b>9.1 References</b>                   |
| <b>10 Related Posts</b>                 |

## SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

- This device is intended for indoor use only. · Do not expose this device to water or moisture of any kind. Do not place drinks or other containers with moisture on or near the device. If moisture does get in or on the device, immediately remove it from its power source and allow it to fully dry before reapplying power
- Do not touch the device, the power cord, or any other connected cables with wet hands.
- If operating this speaker in a humid environment, ensure that no condensation occurs. Condensation could cause damage to the speaker cone and could cause a short in the amplifier, which in turn could cause fire or severe electric shock.
- Do not install this device on an unstable surface where it could fall and cause either personal injury or damage to the device and/or other equipment.
- Do not expose this device to excessive vibration, extreme force, shock, or fluctuations in temperature or humidity.
- Do not expose this device to excessively high temperatures. Do not place it in, on, or near a heat source, such as a fireplace, stove, radiator, etc. Do not leave it in direct sunlight.
- Do not place or install this device in an area where it can be exposed to excessive amounts of dust, humidity, oil, smoke, or combustible vapors.
- Prior to operation, check the unit and power cord for physical damage. Do not use if physical damage has occurred.
- Before plugging the unit into a power outlet, ensure that the outlet provides the same type and level of power required by the device.
- This device uses a grounded power cord and requires a ground connection for safe operation. Ensure that the power source has a proper ground connection. Do not modify the plug or use a “cheater” plug to bypass the ground connection.
- Disconnect the unit from the power source when replacing the fuse. Replace the fuse only with the same type.
- Unplug this device from the power source when not in use.
- Take care to prevent damage to the power cord. Do not allow it to become crimped, pinched, walked on, or become tangled with other cords. Ensure that the power cord does not present a tripping hazard.

- Never unplug the unit by pulling on the power cord. Always grasp the connector head or adapter body.
- Ensure that power is turned off and disconnected before making any electrical connections.
- Clean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.
- This device has no user-serviceable parts. Do not attempt to open, service, or modify this device.

## CUSTOMER SERVICE

The Monoprice Customer Service department is dedicated to ensuring that your ordering, purchasing, and delivery experience is second to none. If you have any problem with your order, please give us an opportunity to make it right. You can contact a Monoprice Customer Service representative through the Live Chat link on our website [www.monoprice.com](http://www.monoprice.com) or via email at [support@monoprice.com](mailto:support@monoprice.com). Check the website for support times and links.

## PACKAGE CONTENTS

Please take an inventory of the package contents to ensure you have all the items listed below. If anything is missing or damaged, please contact Monoprice Customer Service for a replacement.

1x SRD212 12" Powered Speaker  
 1x AC Power Cord  
 1x User's Manual


## PRODUCT OVERVIEW

1. SD: Slot for an SDTM card with mp3 files for playback with the Digital Player.
2. USB: USB port for connecting a USB flash drive with mp3 files for playback with the Digital Player.
3. CONTROLS: Controls for the Digital Player. Press the MODE button to switch between USB, SD, and Bluetooth® playback with the Digital Player. The remaining buttons are Play/Pause, Stop, Repeat, Previous Track, and Next Track. The Repeat button cycles through OFF (no repeat), ONE (current track), RDO (random), and ALL (all tracks).
4. DSP MODE LEDs: One of the LEDs illuminates to indicate which DSP mode is in use.



5. OPERATING LEDS: The POWER LED illuminates when the speaker is powered on, the SIG LED illuminates when an input signal is detected, and the CLIP LED illuminates when clipping is detected. If clipping occurs, the volume level should be reduced.
6. DSP PRESET: Rotate the knob to select the various DSP modes.

7. RCA IN: Unbalanced stereo line input.
8. LINEA: Combination 1/4" / XLR input jack for line-level inputs.
9. RCA/LINE A LEVEL: Volume control for the RCA and LINE A inputs.
10. MIX OUT: Line level output for connecting another speaker.
11. MIC/LINE B: Combination 1/4" / XLR input jack for input from a line-level source or a dynamic microphone.
12. LINE/MIC: Button to switch the MIC/LINE B input sensitivity between line level and microphone level.
13. MIC/LINE B LEVEL: Volume control for the MIC/LINE B input.
14. 115V/230V: Voltage selector switch used to set the input voltage. The switch is covered by a clear plastic plate to prevent it from being accidentally changed.

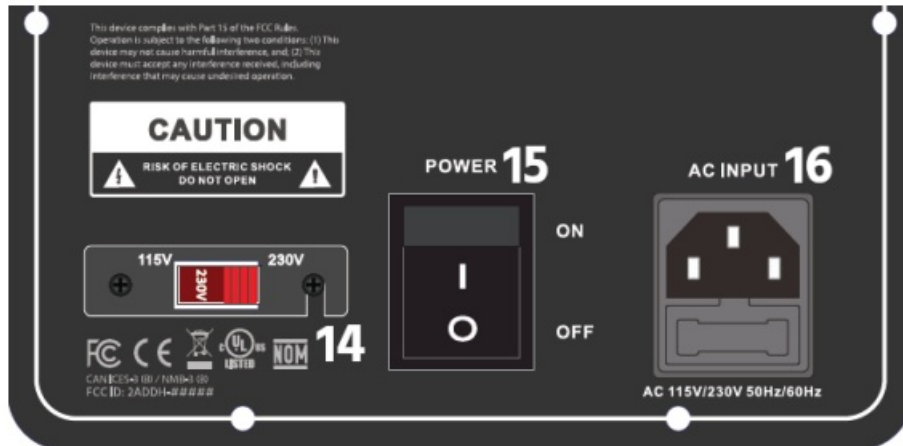

15. POWER: Switch for turning the speaker on or off.
16. AC INPUT: Combination IEC 60320 C14 power connector and fuse holder.

## BLUETOOTH PAIRING

Perform the following steps to pair your mobile device with the Digital Player.

1. Press the MODE button to select BT mode. If a previously paired device is within range, the speaker will connect to that device. Otherwise, the speaker will enter Bluetooth® Pairing Mode.
2. Open the Bluetooth settings on your phone and scan for nearby Bluetooth devices.
3. Locate and select the SRD212 entry. If prompted for a passcode, enter 0000 (four zeros).
4. The speaker and your mobile device will pair and connect.

## TECHNICAL SUPPORT

Monoprice is pleased to provide free, live, online technical support to assist you with any questions you may have about installation, setup, troubleshooting, or product recommendations. If you ever need assistance with your new product, please come online to talk to one of our friendly and knowledgeable Tech Support Associates. Technical support is available through the online chat button on our website [www.monoprice.com](http://www.monoprice.com) or through email by sending a message to [tech@monoprice.com](mailto:tech@monoprice.com). Check the website for support times and links.

To download the latest drivers, firmware, manuals, etc., go to [www.monoprice.com](http://www.monoprice.com) and type the P/N into the search bar. If available, support files are linked at the bottom of the product page.

## SPECIFICATIONS

|                         |                                            |
|-------------------------|--------------------------------------------|
| P/N                     | 600014                                     |
| Woofer Size             | 12"                                        |
| Tweeter Size            | 1.35"                                      |
| Input Power (RMS)       | 300 watts                                  |
| Input Power (Maximum)   | 600 watts                                  |
| Input Power (Peak)      | 1200 watts                                 |
| Nominal Impedance       | 4 ohms                                     |
| Sensitivity             | 96dB                                       |
| Bluetooth® Pairing Name | SRD212                                     |
| Input Power             | 115 VAC, 60Hz or 230 VAC, 50Hz             |
| Dimensions              | 17.5" x 16.5" x 27.0" (445 x 420 x 685 mm) |
| Weight                  | 353 lbs. (16 kg)                           |

## REGULATORY COMPLIANCE



### Notice for FCC

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifying the equipment without Monoprice's authorization may result in the equipment no longer complying with FCC requirements for Class B digital devices. In that event, your right to use the equipment may be limited by FCC regulations, and you may be required to correct any interference to radio or television communications at your own expense.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Notice for Industry Canada

This Class B digital apparatus complies with Canadian ICES-003.  
Monoprice™, Stage Right™, the Stage Right logo, and all Monoprice logos are trademarks of Monoprice Inc. SD™ and the SD logo are trademarks of SD-3C, LLC. The Bluetooth® word mark and logos are registered trademarks of Bluetooth SIG, Inc.

## Documents / Resources

|                                                                                                          |                                                                                                        |
|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
|  | <a href="#">STAGE RIGHT SRD212 12" Powered Speaker</a> [pdf] User Manual<br>SRD212, 12 Powered Speaker |
|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|

## References

-  [HDMI Cable, Home Theater Accessories, HDMI Products, Cables, Adapters, Video/Audio Switch, Networking, USB, Firewire, Printer Toner, and more! - Monoprice.com](#)