

[Skip to content](#)

Manuals+

User Manuals Simplified.



STANLEY 10-06439-026 Classic Trigger Action Travel Mug User Manual

[Home](#) » [Stanley](#) » STANLEY 10-06439-026 Classic
Trigger Action Travel Mug User Manual

Contents [hide](#)

[1 STANLEY 10-06439-026 Classic Trigger Action
Travel Mug](#)

[2 Care& Use](#)

[3 INSTRUCTION](#)

[4 Guarantee](#)

[5 Documents / Resources](#)

[6 Related Posts](#)

STANLEY®

STANLEY 10-06439-026 Classic Trigger Action Travel Mug



Care & Use

Thank you for purchasing a Stanley product. Please read the following information before using this product. If you have any questions regarding these instructions, please contact us for further explanation. You can email our customer service department at info@stanleypmi.com or, in North America, call 1-800-251-4535. Always inspect your Stanley item before use.

WARNING:

Do not overfill with hot liquids. Do not fill beyond bottom of threads. This may be marked by a fill line. Overfilling can lead to spills and scalding.

When filled with hot liquid, keep out of reach of children. Hot liquids can cause scalding.

To prevent spills, ensure lid is assembled properly and fully tightened before use. Hot liquids can cause scalding. Push button only when mug is in upright position. Depression of button in angled position can lead to ejection of liquid and scalding.

Do not use sealable items with carbonated or fermenting beverages or foods. Doing so may cause pressure buildup and lead to lid failure and spills which can scald, or forceful ejection of lid and contents, which can cause injury.

CAUTION:

- Do not use in microwave or oven. Doing so can damage the appliance and the product.
- Do not place directly on a drip coffee maker, stovetop, or other heat source. Doing so can damage the appliance and the product.
- Do not use with warm milk products or baby food. This will minimize bacterial growth.

Care & Use:

Wash all components thoroughly before first use.

Press button to sip. Release button to seal.

Your lid can be disassembled for a thorough cleaning, to disassemble
 Rotate lid cartridge (A) In a counter clockwise direction, until it clicks and releases from lid body (8).



To reassemble your lid:

Insert lid cartridge (A) Into lid body (8). Ensure plunger () is seated properly, with lid plug under drink-thru opening. Rotate lid cartridge (A) In a clockwise direction until it clicks back into its seated position in lid body

Once plunger is seated properly, you may need to rotate lid cartridge (A) counter-clockwise for mechanism to drop into place prior to reassembly



INSTRUCTION

Dishwashing instructions

- Dishwasher safe.
 - Do not wash in commercial-strength appliances or on high heat settings. This can lead to reduced thermal performance.
 - Do not use dishwashing detergents that contain high levels of chlorine or bromide. This can lead to reduced thermal performance.
- dishwashing may age the appearance of your item faster than hand washing. If preserving the finish of any paint and artwork on your item is important to you, we recommend hand washing

Hand wash Instructions

- Use mild detergent and warm water
- To remove stubborn stains soak overnight with a solution of warm water and baking soda
- Remove lid during soak to ensure pressure does not build up
- Gaskets can be removed for a thorough clean. Hand wash with mild detergent and warm water. Ensure gaskets are sent properly when reassembled.
- Pressure buildup in your mug may lead to a slight "washing" sound when button is pressed. This is normal-the pressure is venting through the button. This can happen when extremely hot beverages create steam pressure, or during flights due to pressure change in cabin.

Guarantee


Guarantee#: Stanley products are warranted to be free from any defect in workmanship or materials and to be thermally efficient provided and according to the instructions. This warranty does not cover component parts or malfunction due to alteration or accident. If you have any questions regarding this or any other Stanley product, please email our MCL/Service department at info@stanley-pmi.com or, in North America, call T-800-2514535.

Please note: do not return product to retailer.

Stanley is a registered trademark of Stanley, A Brand of PMI

www.stanley-pmi.com

Documents / Resources

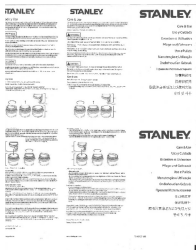

[STANLEY 10-06439-026 Classic Trigger Action Travel Mug](#) [pdf] User Manual

10-06439-026 Classic Trigger-Action Travel Mug, 10-06439-026, Classic Trigger-Action Travel Mug, Action Travel Mug

[Manuals+](#)

- [home](#)
- [privacy](#)