

STAR MICRONICS How to Setting Printer BSC10 to Support 58mm Paper Size Instructions

Contents

- [1 How to Setting Printer BSC10 to Support 58mm Paper Size](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
 - [3.1 Documents / Resources](#)

How to Setting Printer BSC10 to Support 58mm Paper Size

Product Information

The Printer BSC10 is a versatile printer that supports a paper size of 58mm. It is designed to be connected to a Windows PC via a USB port. Please ensure that you have installed the printer driver before proceeding with the setup.

Product Usage Instructions

 
1. Connect the Printer BSC10 to your Windows PC using a USB cable and turn it on. Windows will automatically detect and install the Star BSC10 printer driver. You can verify this in the Control Panel.
2. Right-click on the Star BSC10 printer and select "Printer Properties".
3. In the Printer Properties window, go to the "Advanced" tab and click on "Printing Defaults".
4. In the Printing Defaults window, click on "Advanced".
5. Change the Paper Size to "58mm X Receipt (33 Columns)" and click "OK" twice.
6. Select "Device Setting" and change the FRICTION setting to "58mm X Receipt (33 Columns)". Click "OK".
7. Right-click on the Star BSC10 printer again and select "Printer Properties".
8. In the Printer Properties window, select "Star / Help" and click on "Open Printer Utility".
9. If you do not wish to change the printer name, click "OK" in

the utility.

10. Click on "Printer Setting" and the program will download the current settings.
11. Change the Paper Size to "58mm x Receipt (33 Columns)".
12. Click on "Store" to save the setting.
13. Click on "Print Settings" to print a self-test.

Following these instructions will help you set up the Printer BSC10 to support a paper size of 58mm.

[View Fullscreen](#)



How to setting Printer BSC10 to support 58mm paper size

****Please install driver printer before setting ****This manual is using BSC10UD and connecting through USB Port

1. Connect USB Cable between printer to Windows PC and turn it on then Windows will get automatic Star BSC10 drive printer [Check in Control Panel] 2. Right click at Star BSC10 > Printer Properties

3. Select Advance > Printing Defaults...

How to setting Printer BSC10 to support 58mm paper size

4. Click Advanced...

5. Change Paper Size to 58mm X Receipt (33 Columns) then click OK 2 times

6. Select Device Setting and change FRICTION to 58mm X Receipt (33 Columns) then click OK

How to setting Printer BSC10 to support 58mm paper size

7. Right click at Star BSC10 > Printer Properties again 8. Select Star / Help and click Open Printer Utility

9. Click OK if do not change printer name in this utility

How to setting Printer BSC10 to support 58mm paper size

10. Click Printer Setting and program will download current setting


11. Change Paper Size to 58mm x Receipt (33 Columns)

12. Click Store to save setting

How to setting Printer BSC10 to support 58mm paper size

13. Click Print Settings to print self-test

Documents / Resources

	<p>STAR MICRONICS How to Setting Printer BSC10 to Support 58mm Paper Size [pdf]</p> <p>Instructions BSC10UD, How to Setting Printer BSC10 to Support 58mm Paper Size, How to Setting Printer BSC10</p>
--	--