

[Skip to content](#)

Manuals+

User Manuals Simplified.



STAR WARS TSTE-SRW-VAD1 Darth Vader Toaster User Manual

[Home](#) » [STAR WARS](#) » STAR WARS TSTE-SRW-VAD1
Darth Vader Toaster User Manual

Contents [hide](#)

[1 STAR WARS TSTE-SRW-VAD1 Darth Vader Toaster](#)

- [2 IMPORTANT SAFEGUARDS](#)
- [3 POWER CORD INSTRUCTIONS](#)
- [4 POLARIZED PLUG](#)
- [5 Before Your First Use](#)
- [6 Main Components](#)
- [7 Operation](#)
- [8 Cleaning and Care](#)
- [9 Documents / Resources](#)
- [9.1 References](#)
- [10 Related Posts](#)



STAR WARS TSTE-SRW-VAD1 Darth Vader Toaster



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. READ ALL INSTRUCTIONS CAREFULLY.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against risk of electric shock, do not put toaster, cord or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or is dropped or damaged in any manner. Return the appliance to an authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury and voids warranty.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces, including the stove.
10. Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts resulting in risk of electric shock.
11. Do not place on or near a hot gas or electric burner or in a heated oven.
12. Do not use appliance for anything other than its intended use.
13. Oversize foods, foil packages, or utensils must not be inserted in a toaster because they may cause a fire or electrical shock.
14. Do not operate toaster in an enclosed space, such as an appliance cabinet, caddy, garage, or other storage area.
15. A fire may occur if toaster is covered or touching flammable materials, including curtains, draperies, walls, etc., when in operation.
16. Failure to clean crumb tray may result in a fire hazard.
17. Do not attempt to dislodge food when toaster is plugged in.
18. Do not place pastry items with runny-type frosting or open filling in toaster.
19. When heating toaster pastries, always use the lightest toast color setting.
20. To protect against risk of fire, do not put rice cakes in this toaster.
21. This appliance is intended for household use only and not for commercial or industrial use.
22. Do not leave appliance unattended while in use.
23. To disconnect, turn any control to "off" or "cancel", then remove plug from the wall outlet.
24. Do not use this appliance as a toy.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

DARTH VADER™ Toaster: Two Slice Toaster

PRODUCT SPEC: 120 V, 60 Hz, 900 W

POWER CORD INSTRUCTIONS

1. A short power-supply cord is provided to reduce the hazard resulting from entanglement or tripping over a long cord.
2. Extension cords may be used if care is exercised. If it is necessary to use an extension cord, it should be positioned so that it does not drape over the counter or tabletop where it can be pulled on by children or tripped over unintentionally.
3. If a longer detachable power supply cord or extension cord is used: The electrical rating of the extension cord must be the same or more than the wattage of the appliance (the wattage is shown on the rating label located on the underside or back of the appliance). The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
4. Avoid pulling or straining the power cord at outlet or appliance connections.

POLARIZED PLUG

1. Your appliance is equipped with a polarized plug (one blade is wider than the other).

2. To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way.
3. If the plug does not fit fully into the outlet, reverse the plug.

If it does not fit, please consult a qualified electrician. Do not attempt to defeat this safety feature by modifying the plug in any way.

WARNING: Improper use of the power cord may result in electric shock. Consult a qualified electrician if necessary.

WARNING

To reduce the risk of fire:

- Do not operate while unattended.
- Do not use with food that has been spread with butter, jelly, frosting, etc.
- Do not use with rice cakes, fried foods, frozen prepared foods, or nonbread items.
- Do not use with toaster pastries. Always cook toaster pastries in a toaster oven.
- Do not cover or use near curtains, walls, cabinets, paper or plastic products, cloth towels, etc.
- Do not use in or near an appliance garage.
- Closely supervise when used by or near children.
- Clean crumb tray daily.
- Always unplug toaster when not in use.

 
Failure to follow these instructions can result in fire.

WARNING: This is an electronic appliance, not a toy!

To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it. Not appropriate for use by children 12 years of age and younger.

Before Your First Use

Carefully unpack the Toaster and remove all packaging materials. To remove any dust that may have accumulated during packaging, simply wipe the Toaster exterior with a clean, damp cloth. Dry thoroughly. Do not use abrasive cleansers. Do not immerse the Toaster, cord or plug in water or any other liquid.

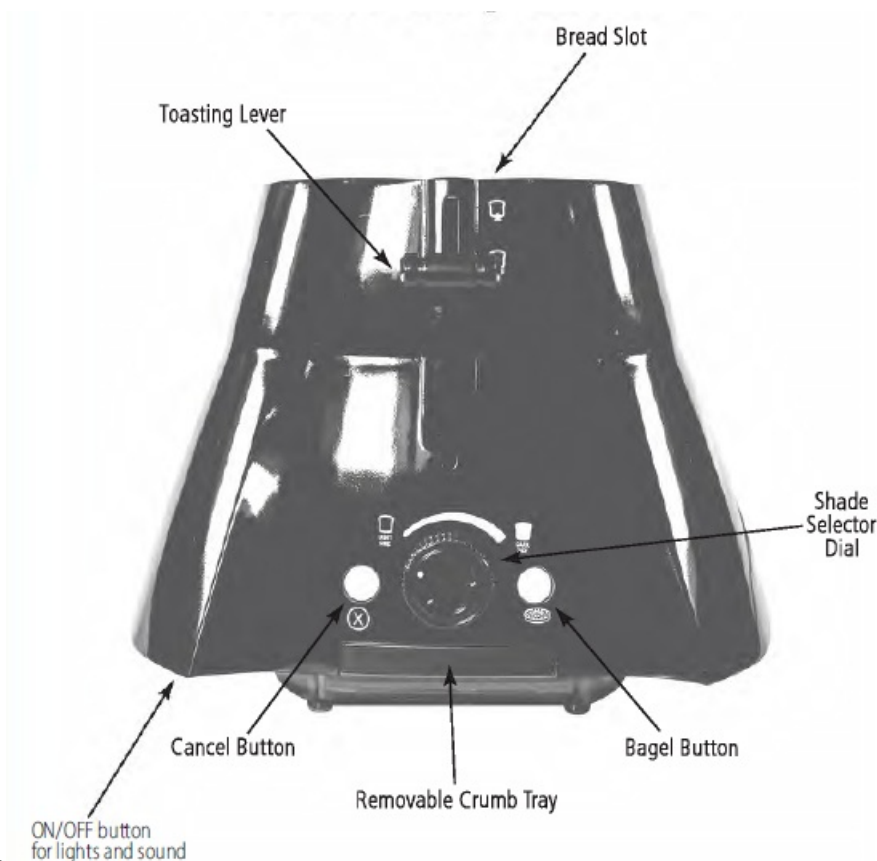


Main Components

Operation

Selecting Toast Color

 1. The Shade Selector Dial is located at the back of your Toaster. Simply turn the Dial to the desired toast color; turn dial to the left for light toasting, or to the right for dark toasting.
2. For your first toasting, it is best to position the Shade Selector Dial in the middle(vertical), and then adjust each


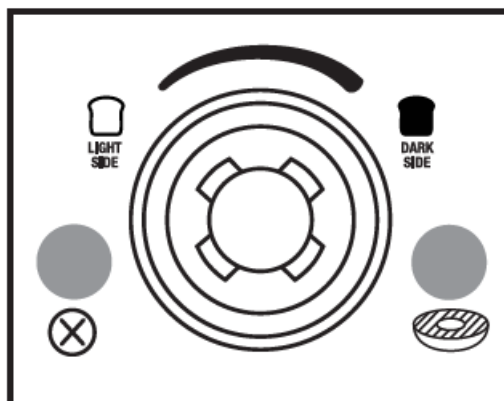


subsequent toasting to your preference.

Toasting

1. Place your Toaster on a flat, dry, level surface. Plug into a working outlet.
2. Insert one slice of bread into each slot.
3. Press the Toasting Lever downward until it locks into place. This will lower the bread into position and automatically begin toasting. The toast will pop up when it has reached the selected color. (For best results, allow toaster to cool for one or two minutes between toasting cycles.)

  NOTE: The Toasting Lever will not lock into place if toaster is unplugged. Lights and sound will engage for the

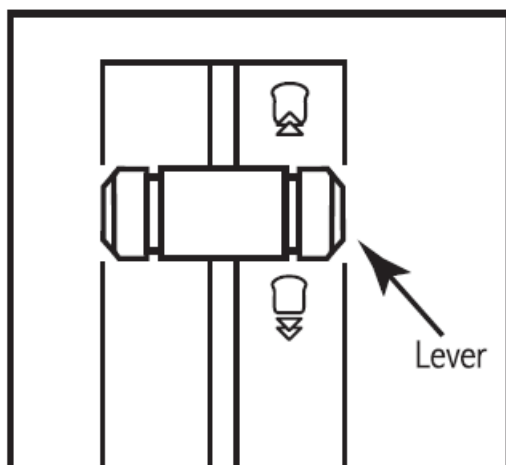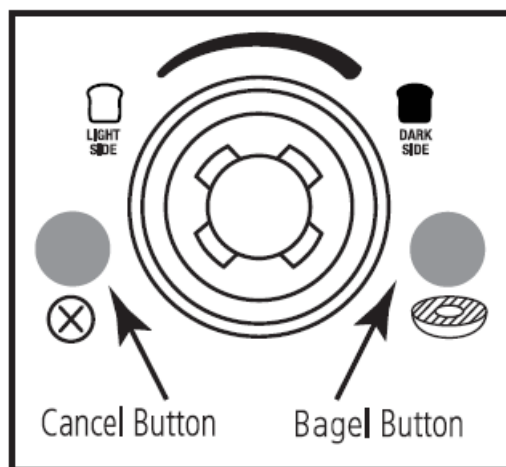

first 10 seconds and the last

4. The bagel button is used to toast items such as bagels or English muffins. Bagels and English muffins are thicker and take longer than regular bread to toast. When this feature is selected, the toaster will adjust the

toasting time.

5. Should you desire to stop the toasting before reaching the selected color, press the Cancel button, and the toast will pop up.
6. When you press the Toasting Lever down at the start of the toasting cycle, or when you use the Cancel Button to raise the toast, you may notice a small flash of light in the toast slot at the end opposite the toasting control. This flash of light, caused when the power switch opens and closes, is normal with any high-wattage appliance.
7. Push the toasting lever up to remove smaller slices of bread.
8. Unplug toaster when not in use.

WARNING: Do not place pastry items with runny-type frosting or open filling in toaster. To protect against risk of fire, do not put rice cakes in this Toaster



Cleaning and Care

- Be sure the Toaster is unplugged and completely cooled before cleaning. Wipe the Toaster exterior with a clean, damp cloth. Dry thoroughly. Do not use abrasive cleansers. Do not immerse Toaster, cord, or plug in water or any other liquid.
- The Removable Crumb Tray is located on the bottom of your Toaster. Pull out the Crumb Tray (see illustration). We recommend emptying crumbs over a sink or waste bin as crumbs will fall when the Crumb Tray is released.
- When replacing the Crumb Tray, make sure it is correctly aligned before sliding it back into place.

NOTE: Empty the Crumb Tray after every use to prevent the hazard of fire.

WARNING: Never operate the Toaster without the Crumb Tray properly in place.

Removing Lodged Toast

If a piece of toast becomes lodged in the Toaster, unplug the Toaster and allow to cool. Turn the Toaster upside down, and gently shake the toast loose.

WARNING: Never use a fork or sharp-edged utensil to remove toast as it may damage the heating element or cause injury.

350 Sentry Parkway Building 670, Suite 120 Blue Bell, PA 19422

online@uncannybrands.com

www.uncannybrands.com

Documents / Resources



[STAR WARS TSTE-SRW-VAD1 Darth Vader Toaster](#) [pdf] User Manual
TSTE-SRW-VAD1 Darth Vader Toaster, TSTE-SRW-VAD1, Darth Vader Toaster, Vader Toaster, Toaster

References

- [👁️ Uncanny Brands](#)

[Manuals+](#),

- [home](#)
- [privacy](#)