

Starfrit
Starfrit
024771 Mini
Waffle Maker
Snowflake



Starfrit 024771 Mini Waffle Maker Snowflake Instruction Manual

[Home](#) » [Starfrit](#) » Starfrit 024771 Mini Waffle Maker Snowflake Instruction Manual 

Contents

- 1 [Starfrit 024771 Mini Waffle Maker Snowflake](#)
- 2 [Product Information](#)
- 3 [Usage Instructions](#)
- 4 [OPERATING AND SAFETY INSTRUCTIONS](#)
- 5 [IMPORTANT SAFEGUARDS](#)
- 6 [DESCRIPTION](#)
- 7 [BEFORE INITIAL USE](#)
- 8 [HOW TO USE](#)
- 9 [CARE AND MAINTENANCE](#)
- 10 [WARRANTY](#)
- 11 [Documents / Resources](#)
 - 11.1 [References](#)
- 12 [Related Posts](#)

Starfrit

Starfrit 024771 Mini Waffle Maker Snowflake



Specifications

- Item no.: 024771
- Voltage (V): 120
- Wattage (W): 350
- Frequency (Hz): 60

Product Information

The product is a cooking appliance with the following components:

1. Indicator light (RED)
2. Cool-touch handle
3. Upper enclosure
4. Lower enclosure
5. Non-stick cooking plates
6. Cord wrap (underneath the unit)

Usage Instructions

Important Safety Guidelines

Before using the product, carefully read and adhere to the following safety instructions:

1. Do not touch hot surfaces. Use protective oven mitts or gloves.
2. Avoid immersing the power cord or plug in water.
3. Keep the product away from children and pets.
4. Unplug before cleaning or when not in use.

5. Do not operate if damaged and do not attempt repairs yourself.
6. Do not leave the product unattended while in use.
7. Prevent burns, fire, or damage by using in a well-ventilated area away from flammable materials.
8. Avoid plugging or unplugging with wet hands.
9. Use only recommended attachments and do not use outdoors.
10. Avoid leaving power cords hanging or touching hot surfaces.
11. Avoid placing the product near hot burners or ovens.

Initial Preparation

1. Remove all parts and accessories from packaging.
2. Wipe the cooking plates with a damp sponge or cloth before first use.

FAQ

- **Q: Can I use this product outdoors?**
 - A: No, this product is intended for indoor, non-commercial use only.
- **Q: How should I clean the product?**
 - A: Unplug the appliance before cleaning and use a damp cloth to wipe the cooking plates. Do not immerse in water.
- **Q: What should I do if the power cord is damaged?**
 - A: Do not operate the product and contact customer service for assistance.

OPERATING AND SAFETY INSTRUCTIONS

Item no.	Voltage (V)	Wattage (W)	Frequency (Hz)
024771	120	350	60

IMPORTANT SAFEGUARDS

READ THE INSTRUCTIONS BELOW BEFORE USE

WARNING: To reduce the risk of fire, electrical shock, serious personal injury and/or property damage:

- DO NOT touch hot surfaces. Always use the handle while it is in use.
Use protective oven mitts or gloves to avoid burns or serious personal injuries.
- To protect against electrical shock, do not immerse the power cord, plug or product in water or expose to other liquids.
- Keep the product out of the reach of children and pets. This product is not intended for use by children. Close adult supervision is necessary when any appliance is used near children.
- Unplug appliance from electrical outlet before cleaning and when not in use. Allow to cool down completely before assembling, disassembling, relocating, or cleaning the appliance.
- DO NOT operate the product if it has a damaged power cord or plug, or after the appliance malfunctions or has

been damaged in any manner. DO NOT attempt to examine or repair this product yourself. For further assistance, please contact customer service to the following address: www.starfrit.com/en/contact-us

- DO NOT leave the product unattended while it is in use. Always unplug the product from the electrical outlet when not in use.
- To disconnect, remove plug from the outlet. Pull directly on the plug –DO NOT pull on the power cord.
- Take proper precautions to prevent burns, fire, or personal or property damage as this appliance generates heat and steam during use.
- DO NOT plug or unplug the product into/from the electrical outlet if hands are wet or moist.
- Use the product in a well-ventilated area.
- Keep the product away from curtains, clothing, dishtowels, or other flammable materials.
- DO NOT use attachments not recommended or sold by the product manufacturer.
- This product is intended for indoor, non-commercial use in cooking or heating food items for human consumption. DO NOT use outdoors or for any other purpose.
- DO NOT allow the power cord to hang (e.g., over the edge of a table or counter) or touch hot surfaces.
- DO NOT place the product on or near a hot gas or electric burner, or in a heated oven or microwave oven.
- Always place the product on a flat, level, stable surface – it is not recommended to use the appliance on temperature sensitive surfaces.
- Connect the power plug to an easily accessible outlet so that the appliance can be unplugged immediately in the event of an emergency.
- DO NOT use appliance for anything other than its intended use.

SAVE THESE INSTRUCTIONS

FOR FUTURE REFERENCE

POLARIZED PLUG: This appliance is equipped with a polarized plug (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. DO NOT attempt to defeat this feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm, DO NOT use that outlet.

SPECIAL INSTRUCTIONS: A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord.

AN EXTENSION CORD MAY BE USED IF CARE IS EXERCISED IN THEIR USE:

- Minimize the risk of overheating by using the shortest UL or ETL listed cord possible.
- The marked electrical rating must be at least as great as that of the product.
- Never use a single extension cord to operate more than one appliance.
- Arrange the longer cord so that it will not drape over a countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

DO NOT alter the plug. DO NOT attempt to defeat the safety purpose of the polarized plug.

DESCRIPTION

1. Indicator light (RED)

2. Cool-touch handle
3. Upper enclosure
4. Lower enclosure
5. Non-stick cooking plates
6. Cord wrap (underneath the unit)



BEFORE INITIAL USE

1. Remove all parts & accessories. Dispose of packaging.
2. Wipe the cooking plates with a damp sponge or cloth.

WARNING: DO NOT run water directly onto the cooking surface. DO NOT immerse the appliance or power cord in water or any other liquids or place in the dishwasher.

3. Dry thoroughly.
4. Wipe the cover with a damp cloth and dry thoroughly.
5. Lightly grease the baking surfaces before the unit is used for the first time. Use the appliance for about 10 minutes with the cover closed. Then wipe it down with a damp cloth.

DO NOT eat the first mini waffles you make with the Mini Waffle Maker.

HOW TO USE

READ THE INSTRUCTIONS BEFORE USE

WARNING: DO NOT touch hot surfaces. Always use the handle of the product. Use protective oven mitts or gloves to avoid burns or serious personal injuries.

NOTE: Never use metal utensils such as forks, knives with this product to avoid scratches on the non-stick surface. Only use plastic, rubber, wooden, or silicone cooking utensils

- Place the product on a flat, stable, heat-resistant surface.
- Plug the power cord into a standard 120-volt AC electrical outlet. INDICATOR light (RED) will illuminate, indicating the product is heating.
- The INDICATOR light (RED) will turn OFF, indicating the appliance is ready for cooking. NOTE: The INDICATOR light (RED) cycles on and off indicating the unit is preheating.
- Open the cover and pour approximately ¼ cup (60 ml) waffle batter onto the bottom plate and close the cover. For best results, pour batter in a circle around the outer edge. NOTE: Batter will expand rapidly inside the appliance. DO NOT over-fill as the batter will seep out over the edge.
NOTE: DO NOT open the cover while steam is escaping. Cooking time may vary depending on the type of batter used and the desired level of browning.
- When steam has stopped escaping, it is an indication that the mini waffle is cooked.
You may cook for a longer period of time to achieve the desired crispiness.
When mini waffle is done use silicone utensils to remove from the grids.
NOTE: The INDICATOR light (RED) may cycle on and off during cooking. This is normal and it indicates that the thermostat is maintaining the unit at the proper cooking temperature.
- Close the cover and wait for INDICATOR light (RED) to turn OFF again before preparing another batch of mini waffles.
- Unplug appliance from electrical outlet after cooking is done. Allow it to cool down before cleaning.

CARE AND MAINTENANCE

WARNING: Ensure the appliance is unplugged from the electrical outlet and allow it to completely cool down before handling or cleaning.

WARNING: DO NOT pour cold water on the product, as the sudden temperature change may damage the product or create a burn hazard.

1. Wipe the cooking plates with a damp sponge or cloth.

WARNING: DO NOT run water directly onto the cooking surface. DO NOT immerse the appliance or power cord in water or any other liquids or place in the dishwasher.

2. Wipe the cover and the outside surface with a soft, damp cloth and dry thoroughly.

NOTE: DO NOT use bleach or abrasive cleansers/scouring pads to clean the plates, as it may damage the non-stick finish and/or exterior surfaces.

3. Close the cover and store the unit.

RECOMMENDATIONS

- DO NOT overmix waffle batter.
- Don't open the cover while steam is escaping from the appliance. This is an indication that the waffle is not thoroughly cooked.
- Always preheat the appliance before cooking.
- Close the cover and let the appliance heat before cooking another batch of mini waffles.

- Make sure the INDICATOR light (RED) is OFF before pouring batter on the plate.

WARRANTY

1-YEAR LIMITED WARRANTY.

This warranty covers any defects in materials and workmanship for a period of one (1) year from the date of the original purchase. Please retain your original receipt as a proof of the purchase date. Any complaints must be registered within the warranty period. The product will be repaired, replaced (parts or entire appliance) or refunded at our sole discretion. Shipping charges may apply.

This warranty does not cover normal wear of parts or damage resulting from any of the following:

- Negligent use or misuse of the product including failure to clean the product regularly, use for commercial purposes, accident, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than a STARFRIT authorized service agent.
- Stains, discoloration and minor scratches on the inside and outside of the utensil constitute normal use, do not affect performance, and are not covered by this warranty.

Decisions as to the cause of damage are the responsibility of STARFRIT. All decisions will be final.

RECIPES

CHOCOLATE CHIP WAFFLES

INGREDIENTS:

- 1 cup (250 ml) flour
- ½ tsp (2.5 ml) baking powder
- ¼ tsp (1.25 ml) salt
- ¼ cup (60 ml) brown sugar
- 2 eggs
- ¼ cup (60 ml) oil
- 1 cup (250 ml) buttermilk
- 1 tsp (5 ml) vanilla extract
- ½ cup (125 ml) chocolate chips



DIRECTIONS:

1. In a large mixing bowl, combine flour, baking powder, salt and set aside.
2. In another mixing bowl, whisk together the eggs and brown sugar for about 2-3 minutes.
3. Add vanilla extract and incorporate oil gradually.
4. Using a spatula, add the dry ingredients to the mixture. Alternate with buttermilk.
5. Add the chocolate chips and let the batter rest for about 8-10 minutes.
6. Meanwhile, preheat the Waffle Maker.
7. Pour enough waffle batter (about $\frac{1}{4}$ cup or 60 ml) onto the bottom plate to cover the cavities and close the cover.
8. Repeat with the remaining batter.

BLUEBERRY WAFFLES**INGREDIENTS:**

- 1 cup (250 ml) flour
- $\frac{1}{2}$ tsp (2.5 ml) baking powder
- $\frac{1}{4}$ tsp (1.25 ml) salt
- $\frac{1}{4}$ cup (60 ml) brown sugar
- 2 eggs
- $\frac{1}{4}$ cup (60 ml) oil
- 1 cup (250 ml) buttermilk
- 1 tsp (5 ml) vanilla extract
- $\frac{1}{2}$ cup (125 ml) blueberries

**DIRECTIONS:**

1. In a large mixing bowl, combine flour, baking powder, salt and set aside.
2. In another mixing bowl, whisk together the eggs and brown sugar for about 2-3 minutes.
3. Add vanilla extract and incorporate oil gradually.
4. Using a spatula, add the dry ingredients to the mixture. Alternate with buttermilk.
5. Add the blueberries and let the batter rest for about 8-10 minutes.
6. Meanwhile, preheat the Waffle Maker.

7. Pour enough waffle batter (about ¼ cup or 60 ml) onto the bottom plate to cover the cavities and close the cover.
8. Repeat with the remaining batter.

www.Starfrit.com


SUBSCRIBE TO THE NEWSLETTER
TO LEARN MORE ABOUT OUR PROMOTIONS






www.facebook.com/starfrit

FOR HOUSEHOLD USE ONLY
POUR UN USAGE DOMESTIQUE SEULEMENT

Documents / Resources

	<p>Starfrit 024771 Mini Waffle Maker Snowflake [pdf] Instruction Manual</p> <p>024771 Mini Waffle Maker Snowflake, 024771, Mini Waffle Maker Snowflake, Waffle Maker Snowflake, Maker Snowflake, Snowflake</p>
--	--

References

-  [Contact Us](#)
-  [Contactez-nous](#)
-  [Contact Us](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.