


STARLINK Performance Pipe Adapter

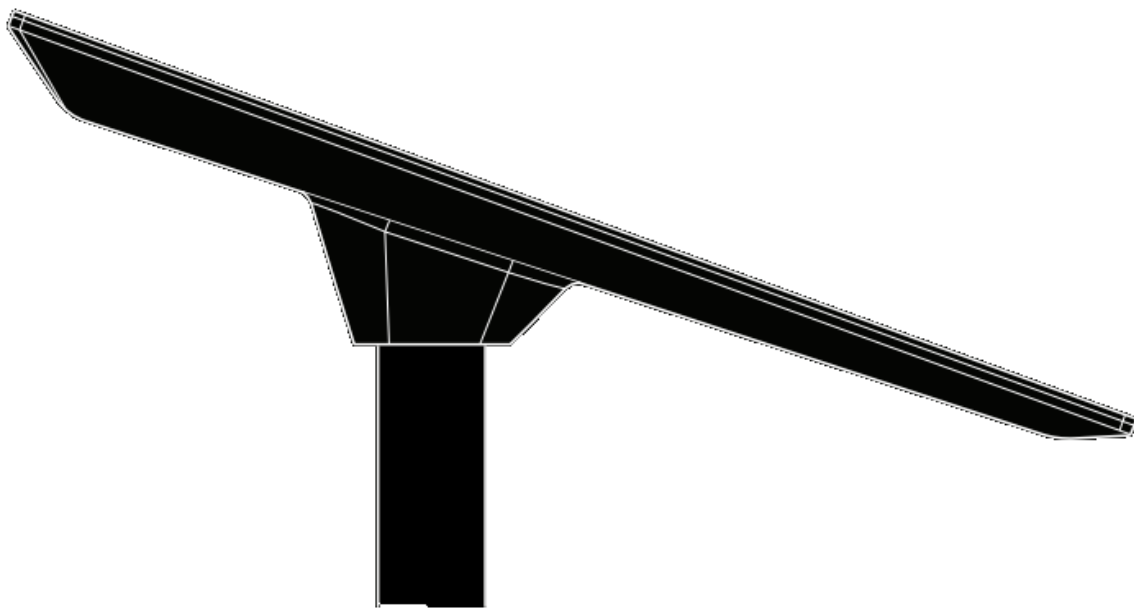


Contents [[hide](#)]


- [1 What's In The Box](#)
- [2 Dimensions](#)
- [3 Installation Instruction](#)
- [4 Customer Support](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)

What's In The Box

- Pipe Adapter Mount

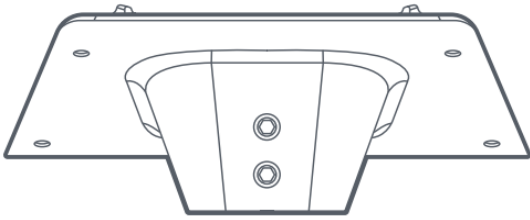


- M6 Button Head Screws (4x)

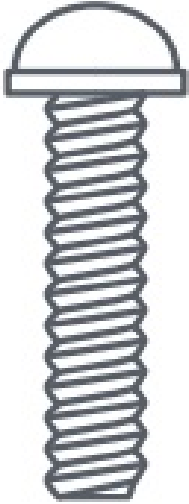

- Hex Key (2x)



Dimensions

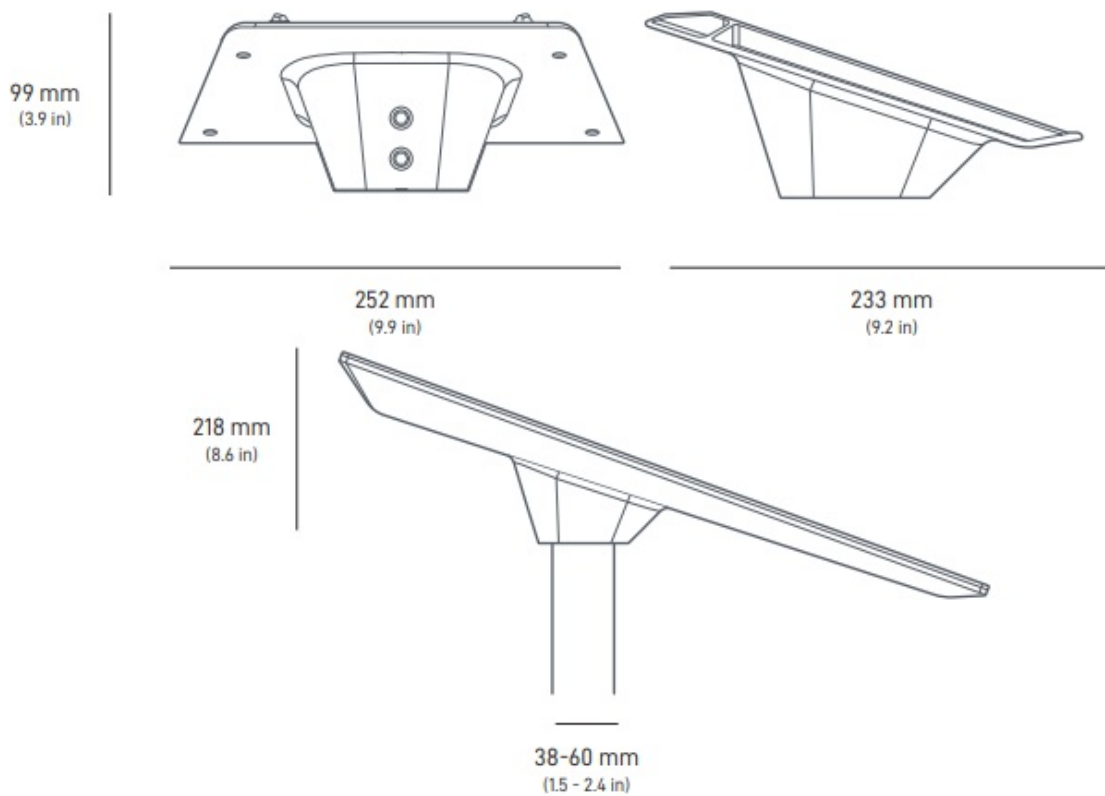

Installation Instruction

1. Download the Starlink App


Scan the QR code to download the Starlink App.



2. Plug in Starlink Cable

Align the Performance connector end of the Starlink cable indicated by the red notch and plug into your Starlink by holding the end of the plug and firmly inserting into the dish.


If the Starlink cable needs to be removed, rotate the collar counterclockwise and pull to disconnect from your Starlink.

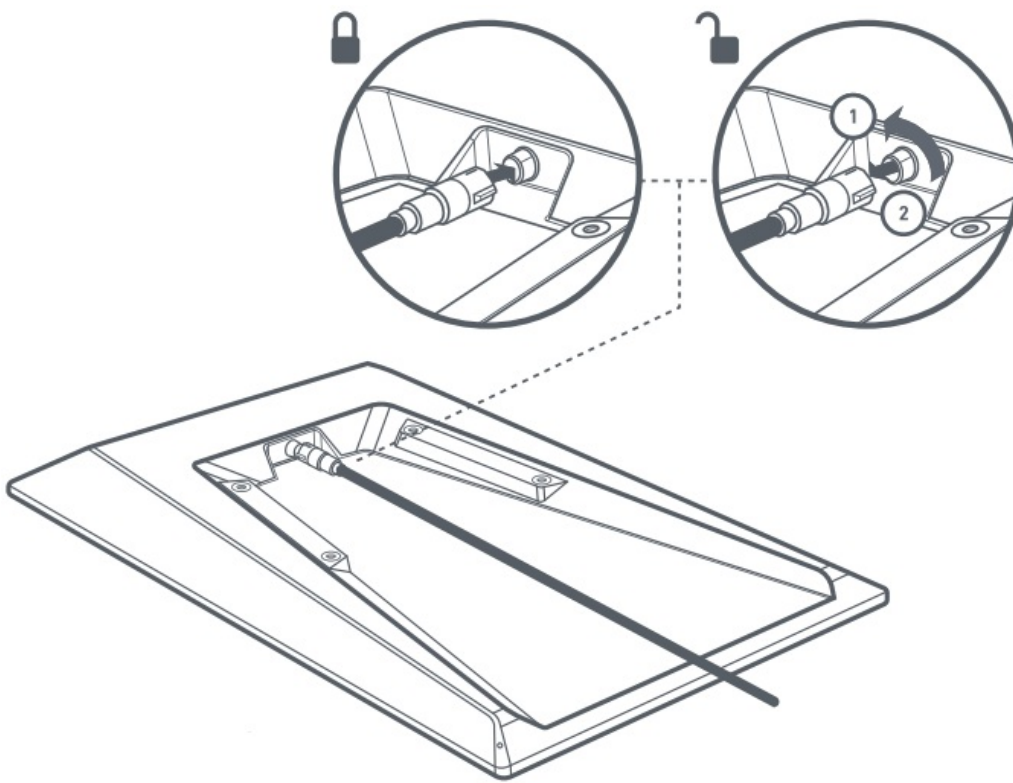

3. Install Pipe Adapter Onto Starlink


Install the provided machine screws through the pipe adapter into the back of the Starlink and tighten the four screws using the hex key.

Tighten screws in all 4 corners until bolts reach 7 N-m (5.2 lb-ft). Ensure the mount is firmly attached to the Starlink.

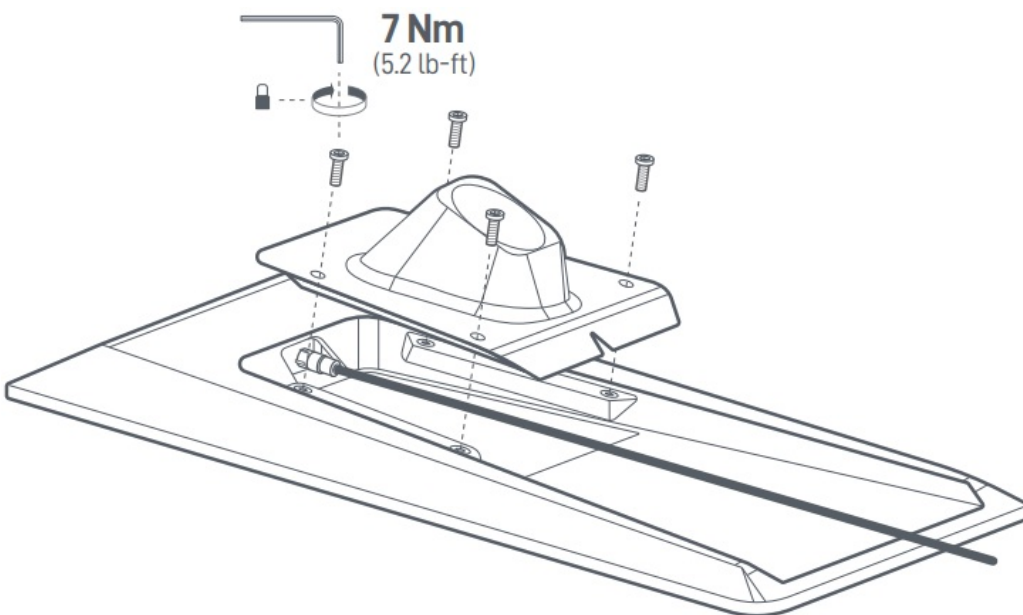

4. Loosen Attachment Screws

Using the hex key, loosen the attachment screws in the Pipe Adapter until the opening is large enough to fit your mounting pipe.

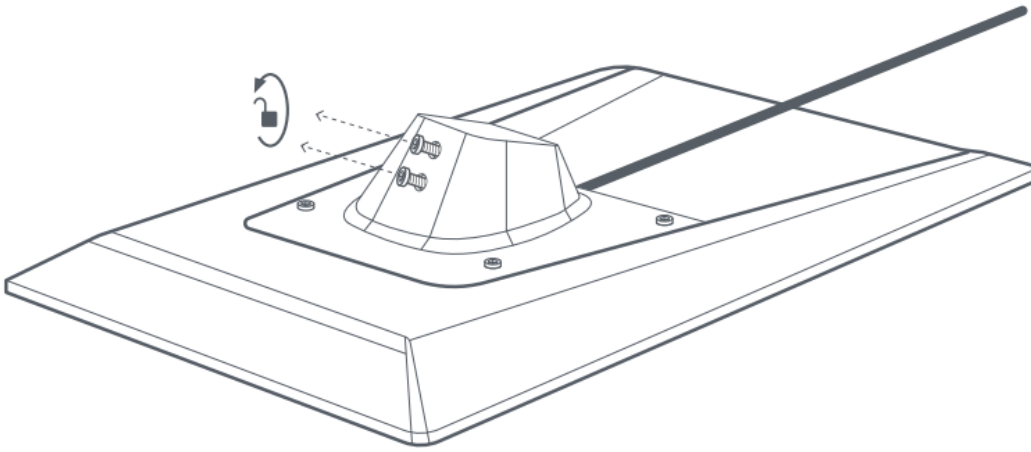


5. Mount Starlink to Pipe

Slide the Pipe Adapter onto your mounting pipe.

Temporarily tighten the attachment screws to stabilize Starlink onto pipe.


Connect the other end of the Starlink cable to the power supply and plug it into power outlet.

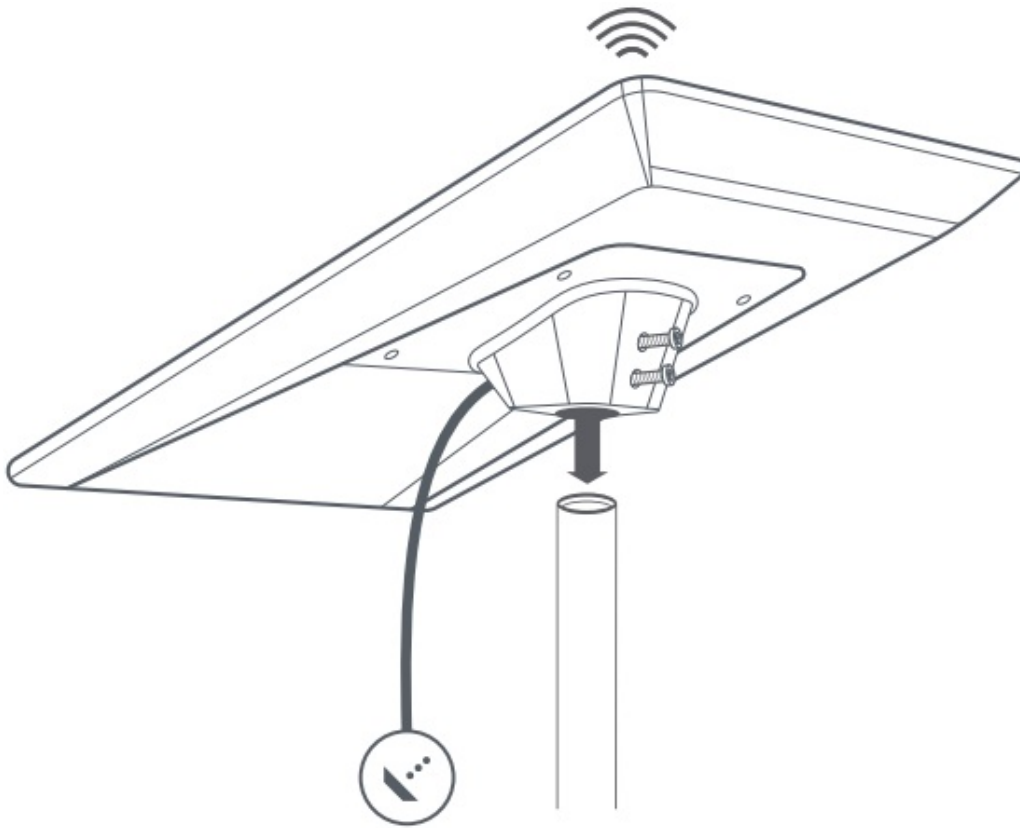

6. Align Your Starlink

An alert on the App will show if you need to rotate Starlink to be properly aligned.



Click the alert to use the alignment tool.

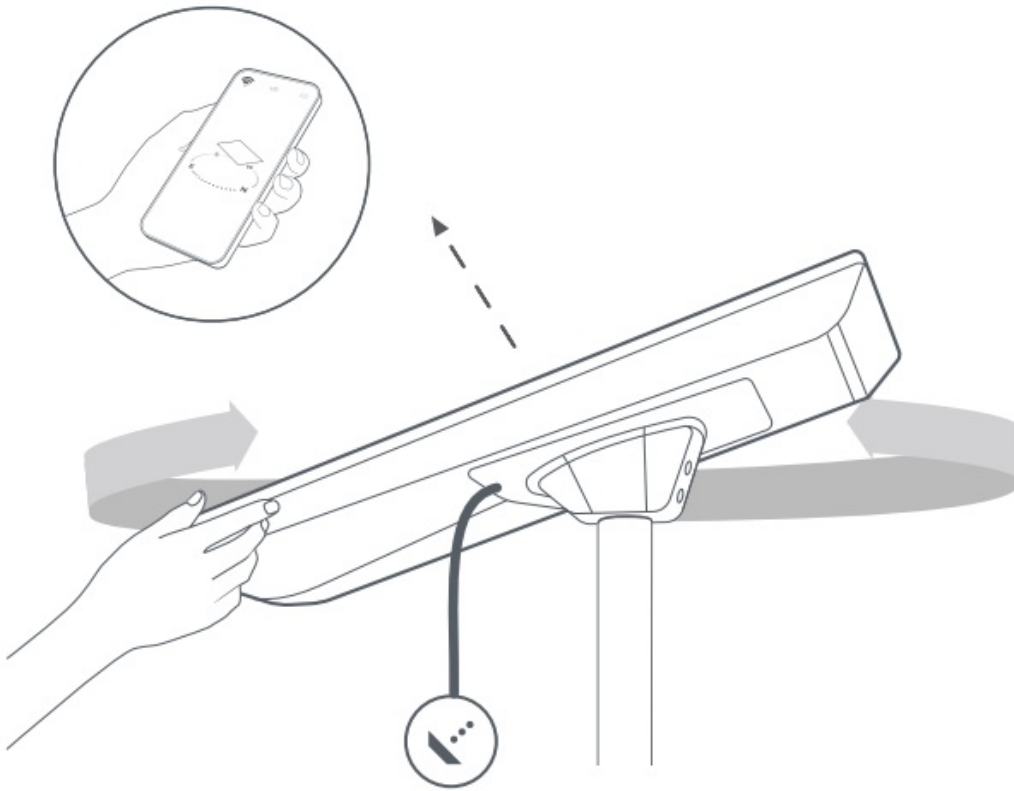

7. Lock Alignment

Using the hex key, tighten the attachment screws on the Pipe Adapter to lock your Starlink in place.

Ensure your Starlink is firmly attached.

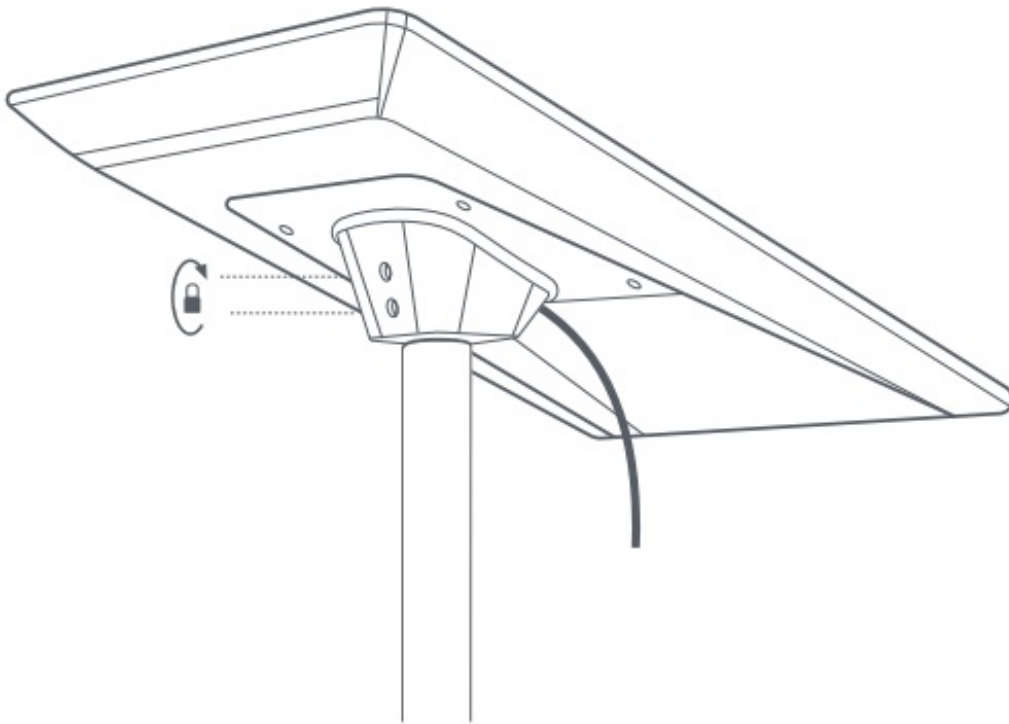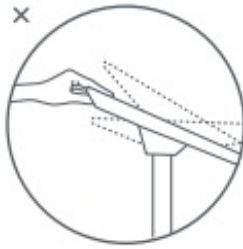

Customer Support

starlink.com/support

STARLINK

Documents / Resources



[STARLINK Performance Pipe Adapter \[pdf\]](#) User Guide

Performance Pipe Adapter, Pipe Adapter

References

- [User Manual](#)

◆ Performance Pipe Adapter, Pipe Adapter,

■ Starlink Starlink

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos

are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.