



STARMATRIX Clever-Pool Pump Inverter Instruction Manual

[Home](#) » [STARMATRIX](#) » STARMATRIX Clever-Pool Pump Inverter Instruction Manual 

Contents

- 1 STARMATRIX Clever-Pool Pump Inverter
- 2 Product Information
- 3 Product Usage Instructions
- 4 Installation, Operation & Maintenance Instructions
- 5 SAFTY AND CAUTION
- 6 DIMENSION AND PARAMETERS
- 7 Dimension
- 8 INSTALLATION AND FUNCTION EXPLANATION
- 9 RUNNING AND OPERATION
- 10 BUTTON AND FUCNTION EXPLANATION
- 11 PROTECTION AND TROUBLESHOOTING
- 12 Documents / Resources
 - 12.1 References
- 13 Related Posts

starmatrix

STARMATRIX Clever-Pool Pump Inverter



Product Information

Clever-Pool Energy Saver

The Clever-Pool Energy Saver is a highly precise electronic device designed by STARMATRIX GROUP INC. It is compliant with the EN61800-5-1:2007 safety standard and is intended for use in swimming pool maintenance. The device uses vector frequency technology to save energy and ensure efficient pool operation. It is suitable for both indoor and outdoor use and has an IP65 rating. It should be installed in an environment with an ambient temperature of -10°C to +40°C, away from direct sunlight, corrosive fluids, radioactive or flammable substances, dust, and metal scraps.

Product Usage Instructions

1. Before installation, read the instruction manual carefully and follow all safety and caution guidelines.
2. Check the product for any damage caused during transportation before connecting it to the power supply.
3. Ensure that the correct power supply is used and that the control panel is closed before connecting the power to avoid electric shock or explosion
4. Do not confuse the input and output terminals.
5. If the Clever-Pool has been in stock for over 2 years, use a voltage adjuster to increase the voltage gradually when connecting the power.
6. Do not touch the wire terminals when power is connected to avoid electric shock.
7. Wait for at least 10 minutes after cutting off the power when all indication lights are off before performing maintenance.
8. Do not use wet hands for operation.
9. If you need to change any parts, ask for professional help and do not leave any metal objects inside the Clever-Pool.

Note: Only professionals should perform installation and maintenance. Do not touch the terminals or CMOS

elements, disconnect the wire connection when power is connected, or perform a voltage duration test on the Clever-Pool.

Installation, Operation & Maintenance Instructions

Please leave this instruction booklet with the owner as it contains important maintenance and safety information. Read this manual carefully before commencing installation

SAFETY AND CAUTION

READING BEFORE INSTALLATION

Clever-Pool uses vector frequency technology and is a highly precious electronic device, to ensure for personal and property safety, please read carefully this instruction before using.

There are marks DANGER or CAUTION in this book please strictly obey when moving, installing, using or checking the product.

DANGER

1. Please make sure to use the correct power supply.
2. Please make sure to close the control panel before power connection to avoid electricity shock or explosion
3. Please make sure not to confuse the input and output terminals.
4. If our Clever-Pool is stocked over 2 years, please use a voltage adjuster to increase the voltage gradually when power connection.
5. Please DO NOT touch the wire terminals when power is connected.
6. Please wait after 10 minutes after the power is cut off when all the indication lights are off for further maintenance.
7. Please DO NOT use wet hands for operation.
8. Please ask for professional help if you need to change any parts, strictly forbidden to leave any metal things inside our Clever-Pool.

CAUTION

1. Installation based on local safety rules.
2. Only professionals for installation and maintenance.
3. Power connection is required after control panel closed, electricity shock will occur if against this rule.
4. Do not touch the terminals, electricity shock will occur if against this rule.
5. Do not disconnect the wire connection if power is connected, serious personal damage will occur if against this rule.
6. Do not touch CMOS elements.
7. No voltage duration test allowed for our Clever-Pool, it will get semiconductor elements damaged.
8. Make sure air ventilation when in summer or high ambient temperature use, this will avoid condensate water formed and electrical faulty.
9. Please stock our Clever-Pool in a dry, ventilated and cool place.

PRODUCT CHECK BEFORE INSTALLATION

Each Clever-Pool is 100% tested before factory delivery, you need to check by yourself below:

1. If our Clever-Pool is the right model you ordered.
2. Any damage caused by transportation, if yes please do not connect to power supply.

ENVIROMENT CAUTION

The correct enviroment for our Clever-Pool determines its right function and life. So the installation must obey below:


- IP65 for both outdoor and Indoor use
- No direct sunshine
- No corrosive fluid
- Away from radioactive or flammable substances
- Ambient temperature:-10°C +40°C
- No oil or salt
- No dust or metal scraps
- No electromagnetic interference

DIMENSION AND PARAMETERS

DIMENSION AND TECHNICAL PARAMETERS


PARAMETER SHEET			
Model Item	Clever- Pool/220V	Clever-Pool M/220V	Clever-Pool/380V
Input power	Single-phase AC	Single-phase AC	Three-phase AC
Input voltage	220V±15%	220V±15%	380V±15%
Input frequency	50/60Hz	50/60Hz	50/60Hz
Output voltage	1 220V	3 220V	3 380V
PUMP TYPE	SINGLE-PHASE	THREE-PHASE	THREE-PHASE
Max.Power	MAX 2HP	MAX 3HP	MAX 5HP
Max current	12A	10A	10A
Mode option	Manual or Auto		
Cooling	By air		
Motor speed range	50Hz:1200 3000rpm		
	60Hz:1200 3600rpm		

Dimension

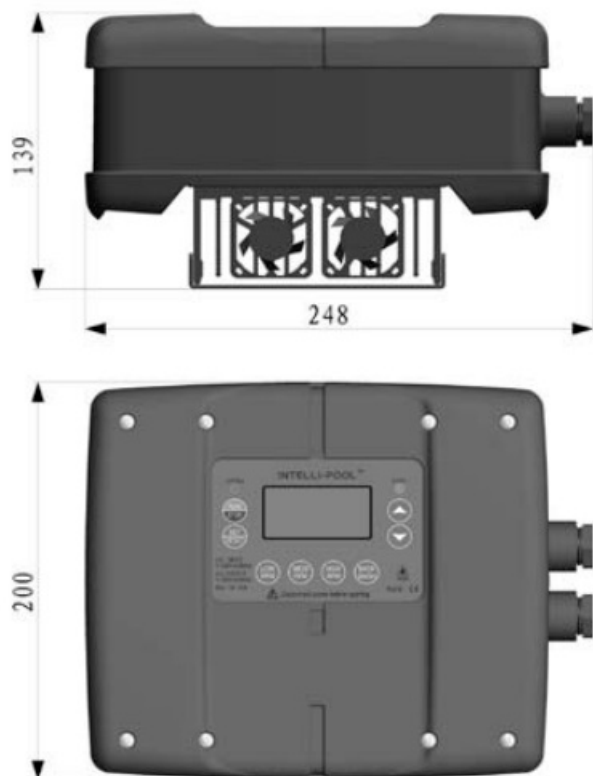

INSTALLATION AND FUNCTION EXPLANATION

INSTALLATION SKETCH AND DESCRIPTION

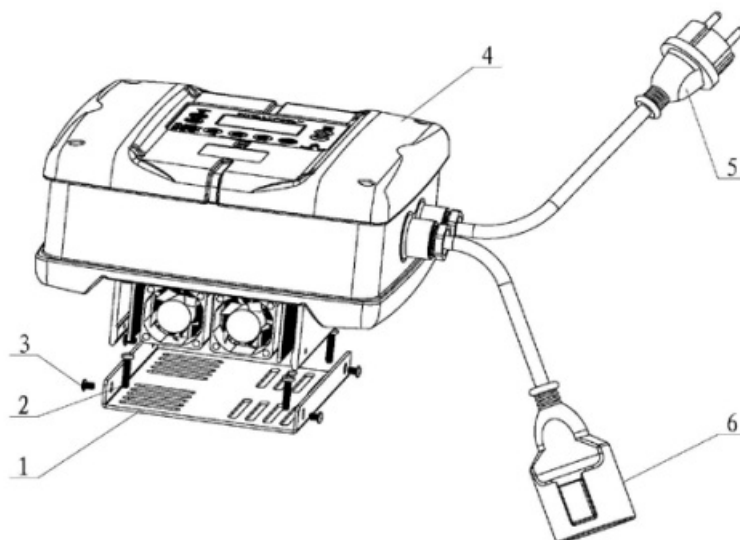


Procedure and instruction

1. Use a cross screwdriver to take off the screws as shown 3 and plate 1
2. Put plate 1 in your installation place and use screws as shown 2 to fix plate 1.
3. Put the control box 4 on plate 1 and fix with screws as shown 3
4. Connect the plug from pump to the part as shown 6.
5. Connect plug 5 as shown to the correct power supply socket.
6. Strictly follow the operation steps as indicated in this manual.

WIRE CONNECTION

- Wires has been preconnected before factory delivery as per request, if you need to re-connect the wires, please pay attention as below:
- WIRE CONNECTION AND DESCRIPTION FOR 2HP AC220V SINGLE PHASE IN – SINGLE PHASE OUT

WIRE CONNECTION SKETCH

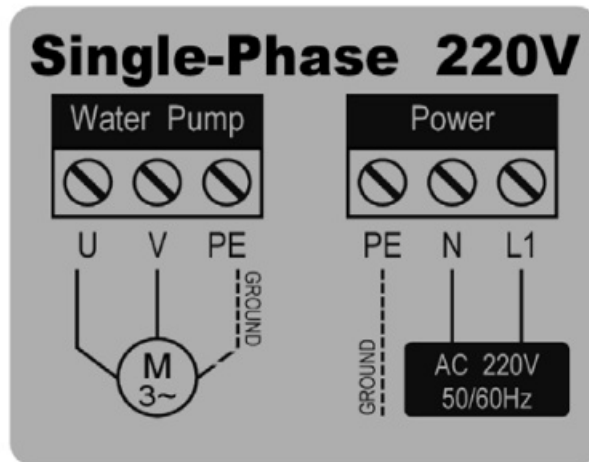


Procedure and instruction

1. Disconnect power before opening the control panel.
2. Make sure no connection between PE,N,L1 termials and U,V terminals.
3. Wire connection operated only when power disconnected.
4. Check if the input voltage from the power supply is compliance with clever-pool.
5. No voltage duration test
6. Screw torque for terminal screws more than 1.7N.m
7. Ground link must be connected before operation.
8. Must use the copper wires over 3G1.5mm2
9. Power supply connected only after the control panel is fixed,

WIRE CONNECTION AND DESCRIPTION FOR 3HP AC220V SINGLE PHASE IN – THREE PHASE OUT

WIRE CONNECTION SKETCH

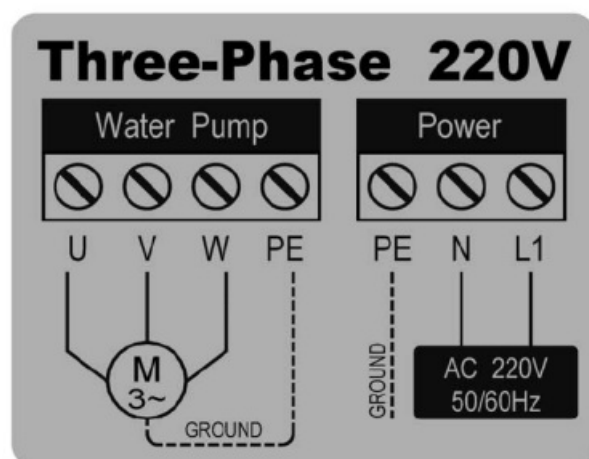


Procedure and instruction

1. Disconnect power before opening the control panel.
2. Make sure no connection between PE,N,L1 termials and U,V,W terminals.
3. Wire connection operated only when power disconnected.
4. Check if the input voltage from the power supply is compliance with clever-pool.
5. No voltage duration test
6. Screw torque for terminal screws more than 1.7N.m
7. Ground link must be connected before operation.
8. Must use the copper wires over 3G2.0mm2
9. Power supply connected only after the control panel is fixed,

WIRE CONNECTION AND DESCRIPTION FOR 5HP AC380V THREE PHASE IN – THREE PHASE OUT

WIRE CONNECTION SKETCH

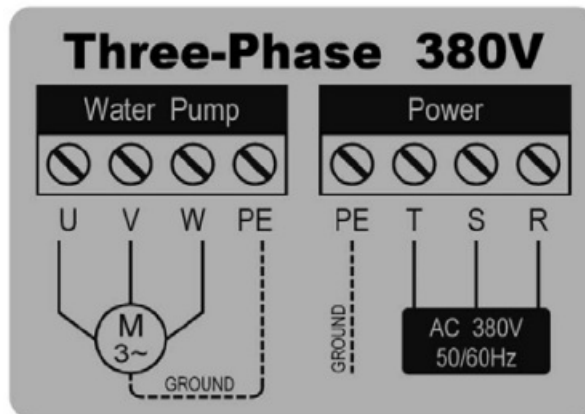

Procedure and instruction

1. Disconnect power before opening the control panel.
2. Make sure no connection between PE,T,S,R termials and U,V W terminals.
3. Wire connection operated only when power disconnected.
4. Check if the input voltage from the power supply is compliance with clever-pool.
5. No voltage duration test
6. Screw torque for terminal screws more than 1.7N.m
7. Ground link must be connected before operation.
8. Must use the copper wires over 4G2.0mm2
9. Power supply connected only after the control panel is fixed,

RUNNING AND OPERATION


BEFORE RUNNING AND OPERATION

1. Check if installation and wire connection is 100% correct.
2. Check if any metal substances left in the product.
3. Check if wire terminals are well tightened.

4. Check if there are naked wires on the terminals touching other terminals.
5. Check if the control panel is well closed.
6. A GFCI device must be used in the system.
7. Check if the power supply frequency is the same as CLEVER-POOL.
8. If all connection is correct, run with no load. If it is a three-phase pump. Please check the motor rotation direction, you can choose the wire connection between UV, WV or WU.

PROGRAMMING GUIDE

1. The Clever-Pool has two running modes Manual mode and Auto mode.
 - Manual mode is used when you are connecting to a pool chlorinator or timer. The system time settings are not required to run in this mode.
 - Auto mode is used when there is no chlorinator or timer and includes up to 4 separate timers with individual speed options. This is ideal for when you want to run your pool pump at different times and speeds to take advantage of the different electrical consumption.
 - In stop and manual mode press the SET/RESET button once to switch to Auto Mode. In stop and Auto mode press the RUN/STOP button to switch to Manual Mode.
2. Manual mode
 - In stop mode the display will now show MANUAL, LOW RPM and the speed in rpm.

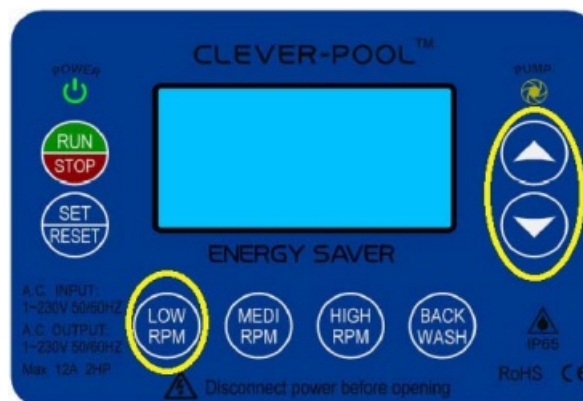

- Press the up or down buttons to select the speed. Alternatively press one of the systems, preset speed buttons LOW RPM, MEDI RPM, HIGH RPM.




- Press the RUN/STOP button to put it into run mode, this will start the pump. When the chlorinator timer turns off, the CLEVER-POOL will store the speed and resume at that speed when switched on again.
- To stop the pump simply press the RUN/STOP button again.




3. Back Wash mode


- In stop mode press the SET/RESET button once. The display will now show MANUAL, LOW RPM and the speed in rpm.

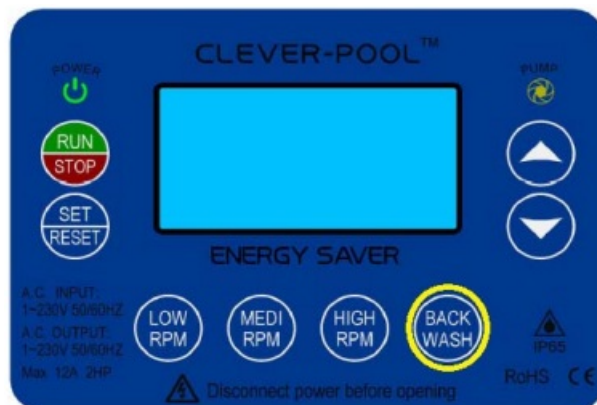

- Press the BACKWASH button. The display will now show backwash and the rpm.

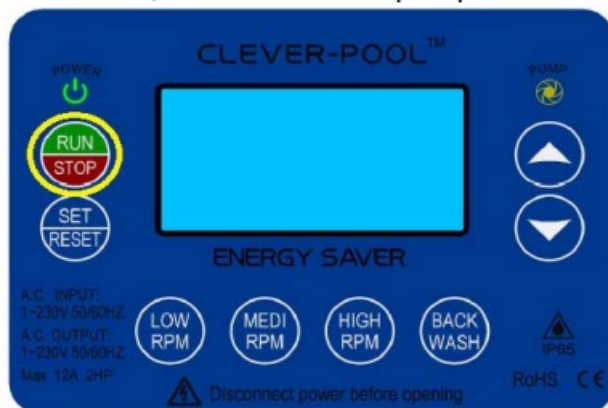


- Press the RUN/STOP button to put it into on mode, this will start the pump.

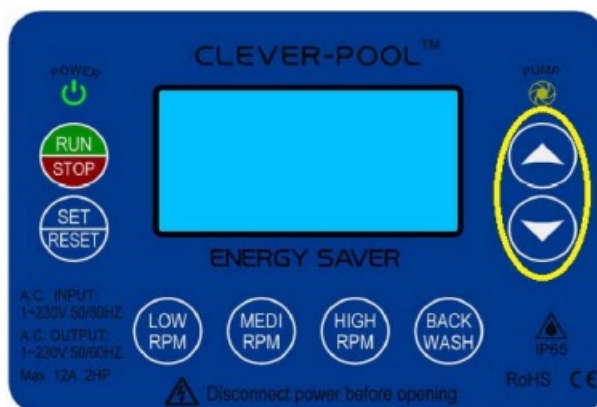


- Press the RUN/STOP button to stop the pump

4. Time setting

- Current time
- In stop and Auto Mode, Press UP and Down button to set Current time,

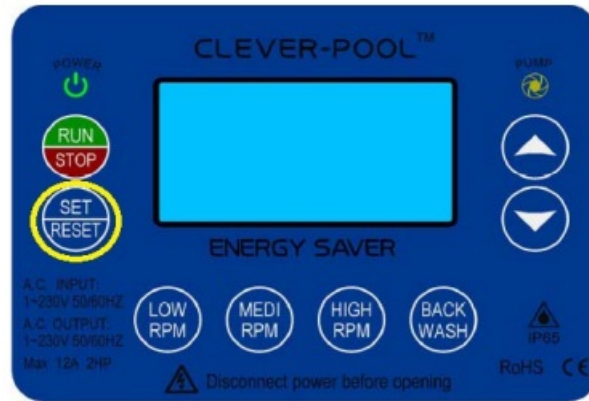


- Press the SET/RESET button to step over from hours to minutes. The display will then flash the minutes digits.

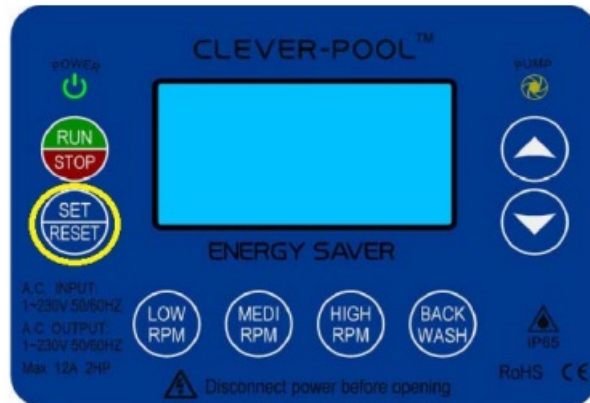


Press the SET/RESET button to store the time. The display will now show the current time with flashing cursor and the word shown at the top.

5. Auto Mode timer and Speed setting


- In stop mode press the SET/RESET button, The display should show CURRENT TIME, START TIME, STOP TIME and the stored

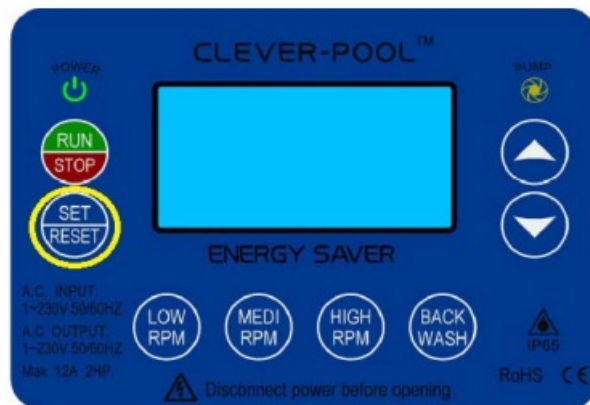


- Press the up or down button to select the hours.

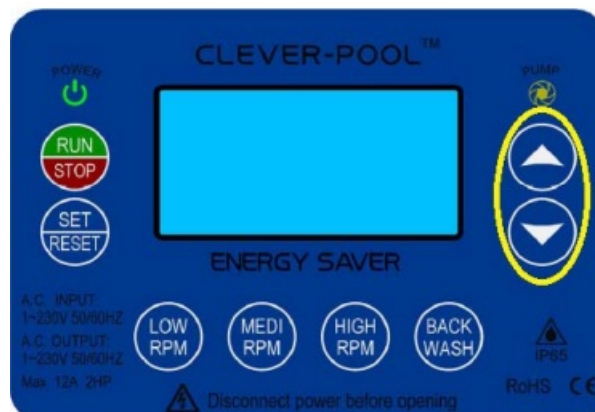

- Press the SET/RESET button to step over from hours to minutes and from Start Time to Stop time

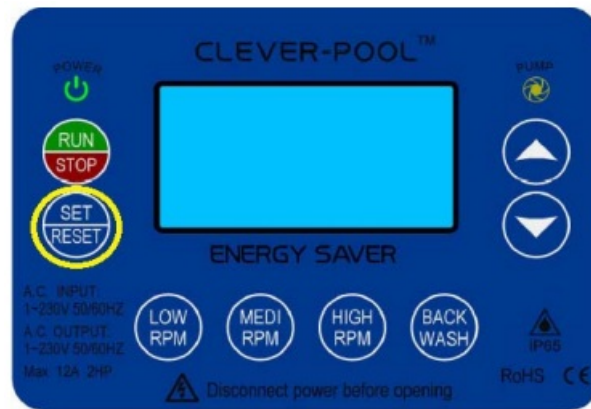

- Press the SET/RESET button to step to SPEED setting. The display will now show the flashing four digits for speed, which is the speed for AUTO MODE 1. Press the up or down button to change motor speed. Alternatively press one of the systems preset speed buttons LOW RPM, MEDI RPM, HIGH RPM.

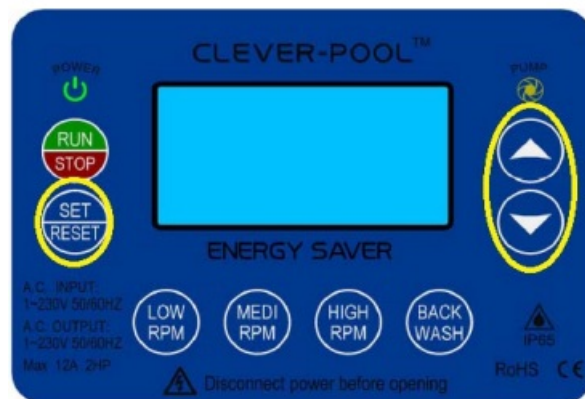

- Press the SET/RESET button to store the speed and step over to AUTO MODE 2. The display should show CURRENT TIME, START TIME, STOP TIME and the stored time with hours digits flashing. This is the start time for AUTO MODE 2.
- Repeat steps above to set speed, start and stop times for AUTO MODE 2 3 and 4. Pressing the SET/RESET button after selecting the speed for Auto mode 4 will finalize the timer settings.
- The display will go blank and return to stop mode with the current set time displayed.
- Alternatively if you only require one time period per day press the SET/RESET button to cycle through time a speed settings of the remaining TIMERS ensuring all start and stop times are set to zero's or to the same time period. Please note all settings for AUTO MODE 1 to 4 will be retained in the event of power loss.
- After all timers have been set. The CLEVER-POOL will then start and stop the pump at set times and speeds.

BUTTON AND FUNCTION EXPLANATION




Number	Name	Explanation
1	Power light	Power supply connected or disconnected
2	Pump light	Pump on or off
3	Increase	Increase the parameter
4	Decrease	Decrease the parameter
5	Full RPM	Pump motor RPM setting
6	High RPM	Pump motor RPM setting
7	Medium RPM	Pump motor RPM setting
8	Low RPM	Pump motor RPM setting
9	LCD screen	Showing all parameters
10	Setting	Parameter setting or re-set system
11	Run/Stop	Manually control pump run or stop

PROTECTION AND TROUBLESHOOTING

ERROR CODE LIST AND EXPLANATION

	PROTECTION	CODE	EXPLANATION
1	Too Low voltage	LU	When the voltage is below 160V it shows LU on the screen when the voltage comes normal from the grid, the error code disappears automatically.
2	Over voltage	OU	When the voltage is over 285V it shows OU on the screen, when the voltage comes normal from the grid, the error code disappears automatically.
3	Over temperature	OC	When the temperature in the casing is over 80°C, it shows OC on the screen till the temperature drops down to 55°C, the error code disappears automatically.
4	Over load	OLD	When the output ampere is 1.6 times higher than the rated ampere and working for 15 seconds, it shows OLD on the screen, it needs to cut off the power supply and eliminate the problem, then re-plug the power for normal work.
5	Short circuit	OLP	When the output of the inverter is short-circuit, it shows OLP on the screen, it needs to cut off the power supply and eliminate the problem, then re-plug the power for normal work.
6	Lack phase (For 380V version)	OP	When there is a phase wire missing connection at the input, it shows OP on the screen and it needs to cut off the power supply and eliminate the problem, then re-plug the power for normal work.

Documents / Resources

	STARMATRIX Clever-Pool Pump Inverter [pdf] Instruction Manual Clever-Pool Pump Inverter, Clever-Pool Inverter, Pump Inverter, Inverter
---	---

References

-  [STARMATRIX GROUP INC.](#)

[Manuals+](#), [home](#) [privacy](#)