

StarTech Com 1U 4-Post Adjustable Server Rack Mount Shelf User Guide

Contents

- [1 StarTech Com 1U 4-Post Adjustable Server Rack Mount Shelf](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

StarTech Com 1U 4-Post Adjustable Server Rack Mount Shelf

Product Information


The 1U 4-Post Adjustable Mounting Depth Heavy Duty Shelf is designed to provide a stable platform for equipment in a rack or cabinet. The shelf has a depth of 27.5in/700mm and comes in four different models: ADJSHELFHD, ADJSHELFHD2, ADJSHELFHDV, and ADJSHELFHDV2. The product can support different weights depending on the model and revision. The maximum weight capacity ranges from 175lbs/80kg to 330lbs/150kg. The shelf features ventilation holes and front and rear mounting brackets that can be adjusted for depth.

Product Usage Instructions

1. Read the entire Quick-Start Guide and ensure the instructions are fully understood before assembling and using this product.
2. Locate a suitable location in the rack or cabinet to mount the Shelf. The Shelf requires 1U of Space.
3. Determine the Depth of the Mounting Posts on the rack. The Adjustable Mounting Depth of the Shelf is from 19.5 in (495 mm) to 38.3in (974 mm).
4. Use a Phillips Head Screwdriver to Loosen the Panel Screws of the Front and Rear Mounting Brackets so they can slide freely. Each Mounting Bracket uses Two Panel Screws.
5. (Optional) Remove all the Panel Screws (x 8) of the Front and Rear Mounting Brackets if the adjustment requires different DepthAdjustment Holes on the sides of the Shelf.
6. Adjust the Front and Rear Mounting Brackets to achieve the same Mounting Depth as the Mounting Posts of the rack. Next, secure the Panel Screws (x 8) of the Front and Rear Mounting Brackets with a Phillips Head Screwdriver.
7. (Optional) Install the M6 Cage Nuts (x 8) into the appropriate Cage Nut Holes (x 8) on the chosen U Height Number on the Mounting Posts of the rack.
8. Before adding equipment to this product, ensure this product has been properly mounted.

9. Never operate this product if parts are missing or damaged.
10. Ensure the weight of the equipment does not exceed the weight capacity of this product. If the weight capacity is exceeded, personal injury or damage to the equipment is possible.
11. Arrange your equipment in the rack in descending order of weight. The lightest equipment is installed at the top of the rack, and the heaviest is on the bottom.
12. To view manuals, FAQs, videos, drivers, downloads, technical drawings, and more, visit www.startech.com/support.

Documents / Resources

	StarTech Com 1U 4-Post Adjustable Server Rack Mount Shelf [pdf] User Guide ADJSHELFHD, ADJSHELFHDV, ADJSHELFHD2, ADJSHELFHDV2, 1U 4-Post Adjustable Server Rack Mount Shelf, 1U Adjustable Server Rack Mount Shelf, 4-Post Adjustable Server Rack Mount Shelf, Adjustable Server Rack Mount Shelf, Adjustable Rack Mount Shelf, Server Rack Mount Shelf, Rack Mount Shelf, Rack Shelf, Mount Shelf, Server Rack Shelf, Shelf, Rack, Server Rack, Server Shelf
---	--

References

- [StarTech.com | IT Pro's Trusted Source for Connectivity Accessories](#)
- [1U Adjustable Depth Rack Mount Shelf - Rack Shelves | Server Rack Accessories | StarTech.com](#)
- [1U Adjustable Depth Rack Mount Shelf - Rack Shelves | Server Rack Accessories | StarTech.com](#)
- [1U Adjustable Vented Rack Mount Shelf - Rack Shelves | Server Rack Accessories | StarTech.com](#)
- [1U Adjustable Vented Rack Mount Shelf - Rack Shelves | Server Rack Accessories | StarTech.com](#)
- [StarTech.com Support](#)
- [StarTech.com Warranty Policy](#)