



StarTech com ST4000PEXPSE 4 Port PCI Express Gigabit Ethernet PoE PSE Network Card Instruction Manual

[Home](#) » [StarTech.com](#) » StarTech com ST4000PEXPSE 4 Port PCI Express Gigabit Ethernet PoE PSE Network Card Instruction Manual 

Contents

- [1 StarTech com ST4000PEXPSE 4 Port PCI Express Gigabit Ethernet PoE PSE Network Card](#)
- [2 FCC Statement](#)
- [3 Packaging Contents](#)
- [4 Product Diagram](#)
- [5 Installation
 - \[5.1 Hardware Installation\]\(#\)](#)
- [6 Technical Support](#)
- [7 Warranty Information](#)
- [8 CONTACT](#)
- [9 Documents / Resources
 - \[9.1 References\]\(#\)](#)
- [10 Related Posts](#)



StarTech com ST4000PEXPSE 4 Port PCI Express Gigabit Ethernet PoE PSE Network Card



FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions

1. This device may not cause harmful interference.
2. this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by StarTech.com could void the user's authority to operate the equipment.

Industry Canada Statement

This Class B digital apparatus complies with Canadian ICES-003.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions

1. This device may not cause interference.

2. This device must accept any interference, including interference that may cause undesired operation of the device.

Use of Trademarks, Registered Trademarks, and other Protected Names and Symbols

This manual may make reference to trademarks, registered trademarks, and other protected names and/or symbols of third-party companies not related in any way to StarTech.com. Where they occur these references are for illustrative purposes only and do not represent an endorsement of a product or service by StarTech.com, or an endorsement of the product(s) to which this manual applies by the third-party company in question. Regardless of any direct acknowledgement elsewhere in the body of this document, StarTech.com hereby acknowledges that all trademarks, registered trademarks, service marks, and other protected names and/or symbols contained in this manual and related documents are the property of their respective holders.

Packaging Contents


- 1x PCI Express Network Card
- 1x Instruction Manual

System Requirements

- PCI Express enabled computer system with available PCI Express slot
- Available SATA power or LP4 Molex connector from the computer power supply

Product Diagram

Front View

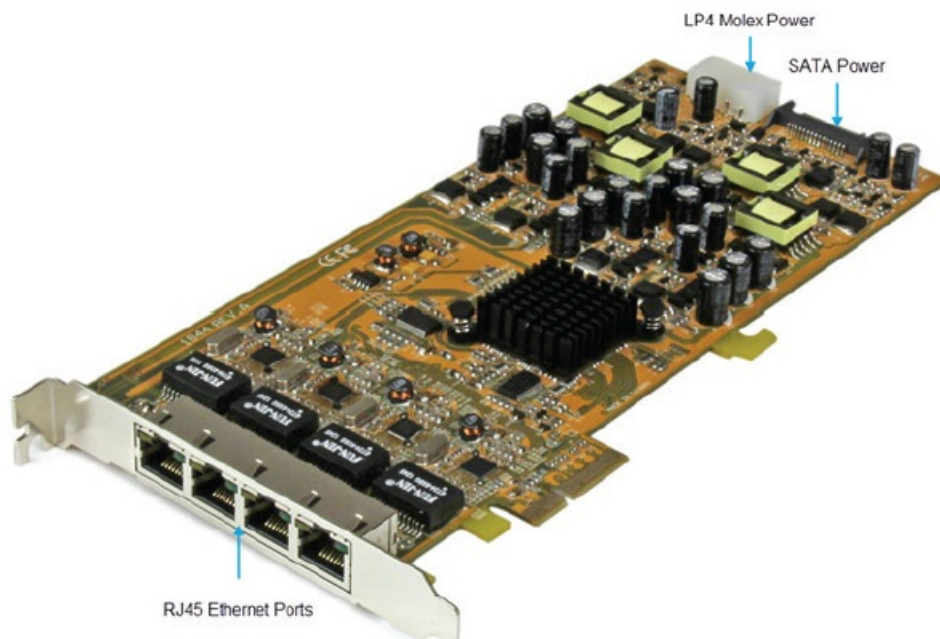

LED Indicators



LED	Color	Status
Link/Activity	Green	Solid On: Link detected Flashing: Data transmission Off: No link detected
PoE Enabled	Yellow	Solid On: PoE enabled (Powered Device detected) Off: PoE disabled (Powered Device not detected)

Installation

Hardware Installation

WARNING: PCI Express cards, like all computer equipment, can be severely damaged by static electricity. Be sure that you are properly grounded before opening your computer case or touching your PCI Express card. StarTech.com recommends that you wear an anti-static strap when installing any computer component. If an anti-static strap is unavailable, discharge yourself of any static electricity build-up by touching a large grounded metal surface (such as the computer case) for several seconds. Also be careful to handle the PCI Express card by its edges and not the gold connectors.

Hardware Installation

1. Turn your computer off and any peripherals connected to the computer (i.e. Printers, external hard drives, etc.).
Unplug the power cable from the rear of the power supply on the back of the computer and disconnect all peripheral devices.
2. Remove the cover from the computer case. See documentation for your computer system for details.
3. Locate an open PCI Express slot and remove the metal cover plate on the rear of the computer case (Refer to documentation for your computer system for details.). Note that this card will work in PCI Express slots of

additional lanes (i.e. x4, x8 or x16 slots).

4. Connect either an LP4 Molex or SATA Power connector from the computer power supply to the appropriate connector on the card.
5. Gently insert the card into the open PCI Express slot and fasten the bracket to the rear of the case.
6. Place the cover back onto the computer case.
7. Insert the power cable into the socket on the power supply and reconnect all other connectors removed in Step 1.

Driver Installation

- If the Network Adapter Card is installed on a computer with Windows 8 or higher/ Windows Server 2012 or higher, your computer will automatically detect the Network Adapter Card and install all the required drivers.
- If you're running a different Operating System, or the drivers do not automatically install:

1. Navigate to www.StarTech.com/ST4000PEXPSE and click the Drivers/Downloads tab.
2. Under Driver(s), download the Driver Package for your operating system, and follow the steps outlined in the Installation guide, that's included in the Driver Package.

Confirm Installation

To confirm installation on a computer running a version of Windows, complete the following

1. On your computer, navigate to Device Manager.
2. Under Network adapters, confirm that the number of Realtek adapters corresponding to the number of RJ45 ports on the card are listed.

In some cases, an exclamation mark appears next to devices that aren't installed correctly. If the driver wasn't installed correctly, try installing the driver again.

Technical Support

StarTech.com's lifetime technical support is an integral part of our commitment to provide industry-leading solutions. If you ever need help with your product, visit www.startech.com/support and access our comprehensive selection of online tools, documentation, and downloads. For the latest drivers/software, please visit www.startech.com/downloads

Warranty Information

This product is backed by a two year warranty. In addition, StarTech.com warrants its products against defects in materials and workmanship for the periods noted, following the initial date of purchase. During this period, the products may be returned for repair, or replacement with equivalent products at our discretion. The warranty covers parts and labor costs only. StarTech.com does not warrant its products from defects or damages arising from misuse, abuse, alteration, or normal wear and tear.

Limitation of Liability

In no event shall the liability of StarTech.com Ltd. and StarTech.com USA LLP (or their officers, directors, employees or agents) for any damages (whether direct or indirect, special, punitive, incidental, consequential, or

otherwise), loss of profits, loss of business, or any pecuniary loss, arising out of or related to the use of the product exceed the actual price paid for the product. Some states do not allow the exclusion or limitation of incidental or consequential damages. If such laws apply, the limitations or exclusions contained in this statement may not apply to you.

CONTACT

StarTech.com Ltd.

- 45 Artisans Cres London, Ontario N5V 5E9 Canada

StarTech.com LLP

- 4490 South Hamilton Road Groveport, Ohio 43125 U.S.A.

StarTech.com Ltd.

- Unit B, Pinnacle 15 Gowerton Rd, Brackmills Northampton NN4 7BW United Kingdom

StarTech.com Ltd.


- Siriusdreef 17-27 2132 WT Hoofddorp The Netherlands

Hard-to-find made easy. At StarTech.com, that isn't a slogan. It's a promise. StarTech.com is your one-stop source for every connectivity part you need. From the latest technology to legacy products — and all the parts that bridge the old and new we can help you find the parts that connect your solutions. We make it easy to locate the parts, and we quickly deliver them wherever they need to go. Just talk to one of our tech advisors or visit our website. You'll be connected to the products you need in no time.

Visit www.startech.com for complete information on all StarTech.com products and to access exclusive resources and time-saving tools.

StarTech.com is an ISO 9001 Registered manufacturer of connectivity and technology parts. StarTech.com was founded in 1985 and has operations in the United States, Canada, the United Kingdom and Taiwan servicing a worldwide market.

Documents / Resources

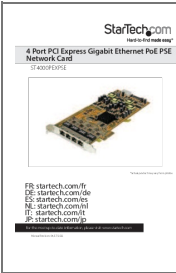	<p>StarTech.com ST4000PEXPSE 4 Port PCI Express Gigabit Ethernet PoE PSE Network Card [pdf] Instruction Manual</p> <p>ST4000PEXPSE 4 Port PCI Express Gigabit Ethernet PoE PSE Network Card, ST4000PEXPSE, 4 Port PCI Express Gigabit Ethernet PoE PSE Network Card, 4 Port PCI Express Gigabit PSE Network Card, Gigabit Ethernet PoE PSE Network Card, PSE Network Card, PSE Card, Network Card, Card</p>
---	---

References

- [StarTech.com | IT Pro's Trusted Source for Connectivity Accessories](#)

- [IT & A / V](#) |
- [StarTech.com | IT Pro's Trusted Source for Connectivity Accessories](#)
- [Drivers & Downloads | StarTech.com Support](#)
- [4 Port Gigabit PoE PCIe Network Card - Network Adapter Cards | StarTech.com](#)
- [StarTech.com Support](#)

Manuals+.