



Static Control How to Disable Automatic Firmware Updates in Select HP Printers User Guide

[Home](#) » [Static Control](#) » Static Control How to Disable Automatic Firmware Updates in Select HP Printers User Guide 



How to Disable Automatic Firmware Updates in Select HP Printers User Guide

Contents

- [1 How to Disable Automatic Firmware Updates in Select HP Printers](#)
- [2 Documents / Resources](#)
- [3 Related Posts](#)


How to Disable Automatic Firmware Updates in Select HP Printers

In the HP LaserJet M255, M282/M283 MFP, and related printer models:


On printer screen, select the **Setup** option, then select **Service**:




Select **Service**:

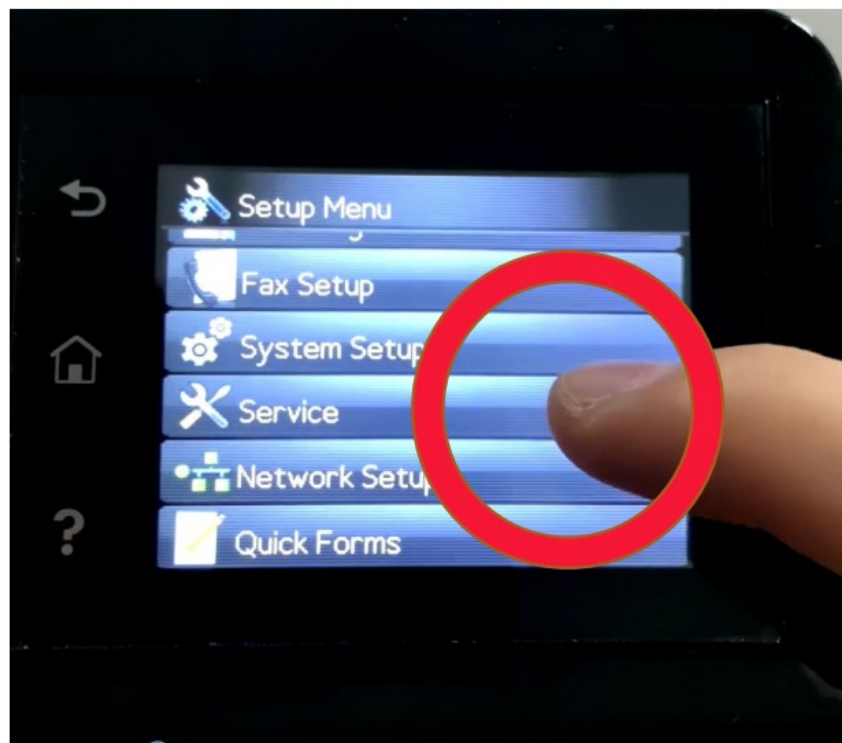


Select **LaserJet Update**:

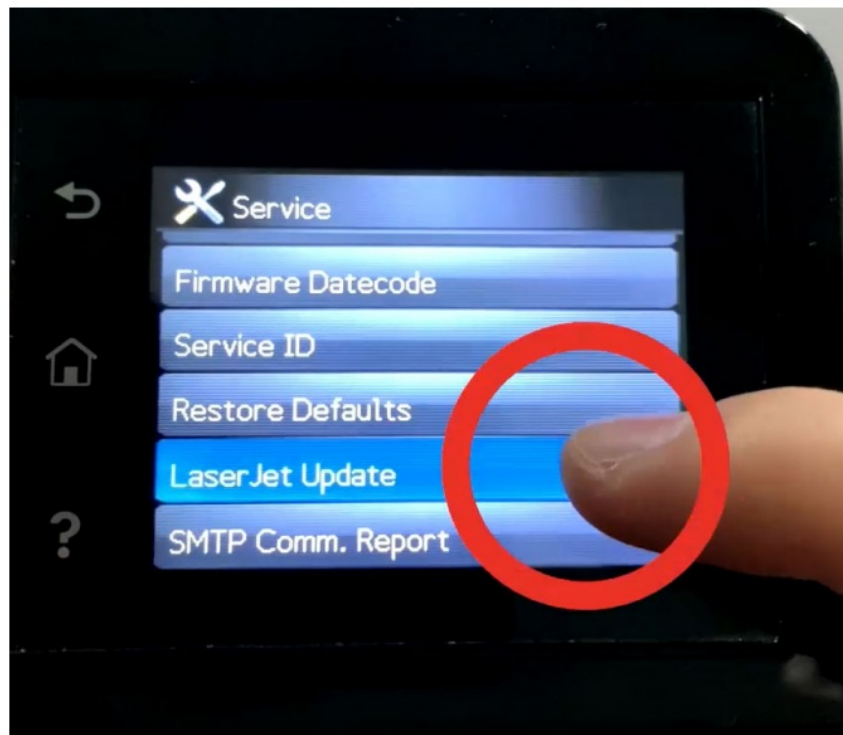

An information paragraph may appear. **Click Next:**

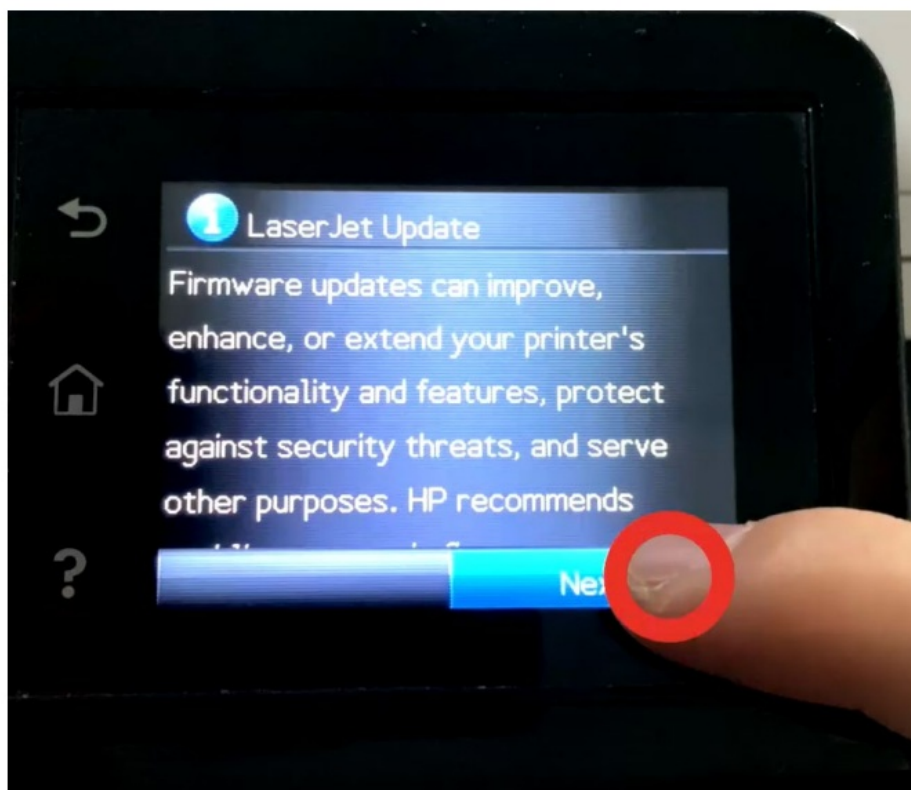


Click **Manage Update:**

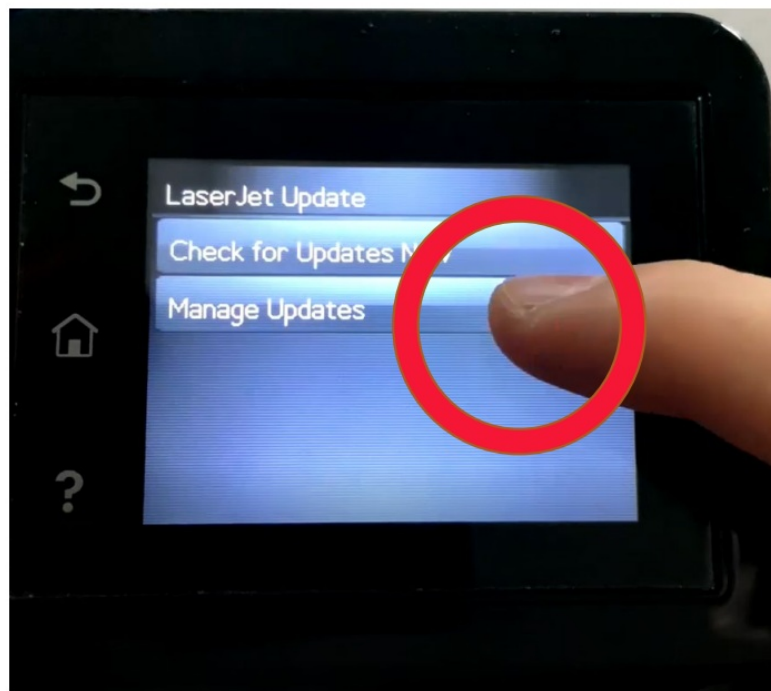


Click **Allow Updates**:




Click **No**:

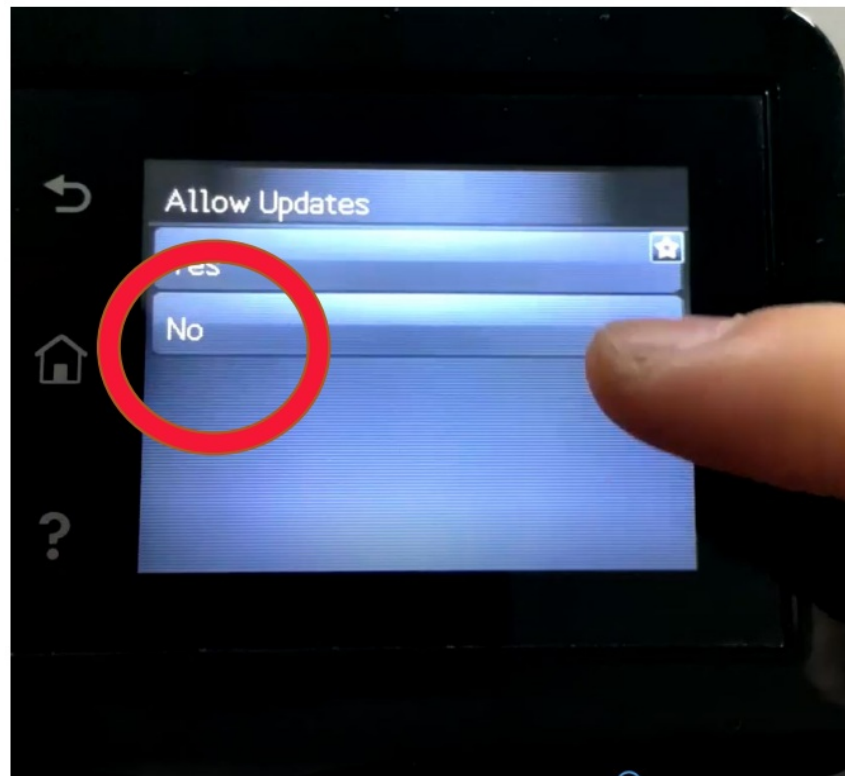


This will return you to the "Manage Update" screen. Now select "**Prompt Before Install**"

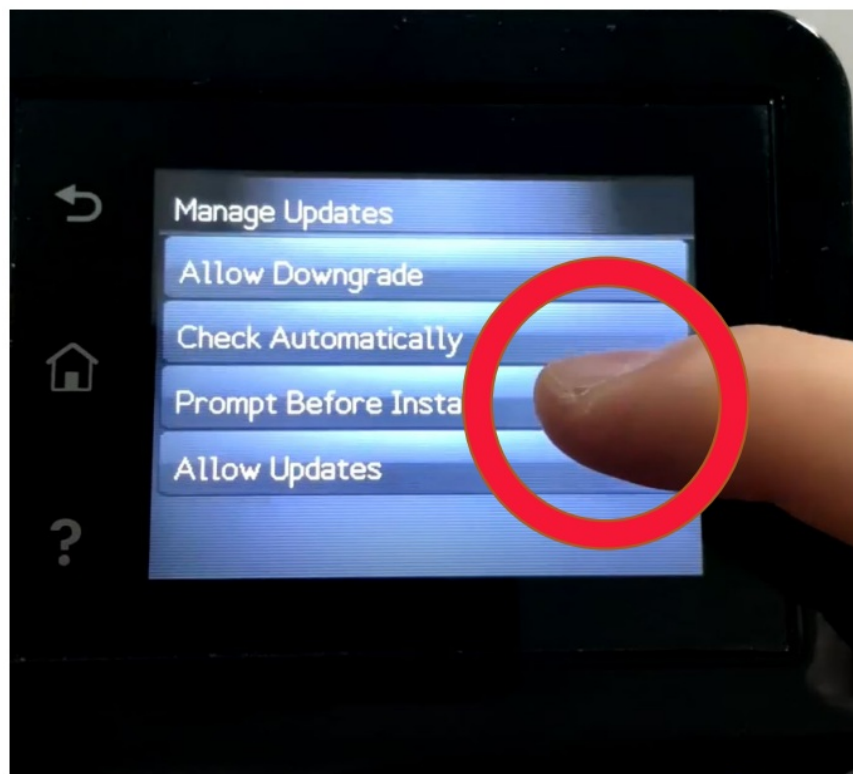


Click **Always Prompt**:

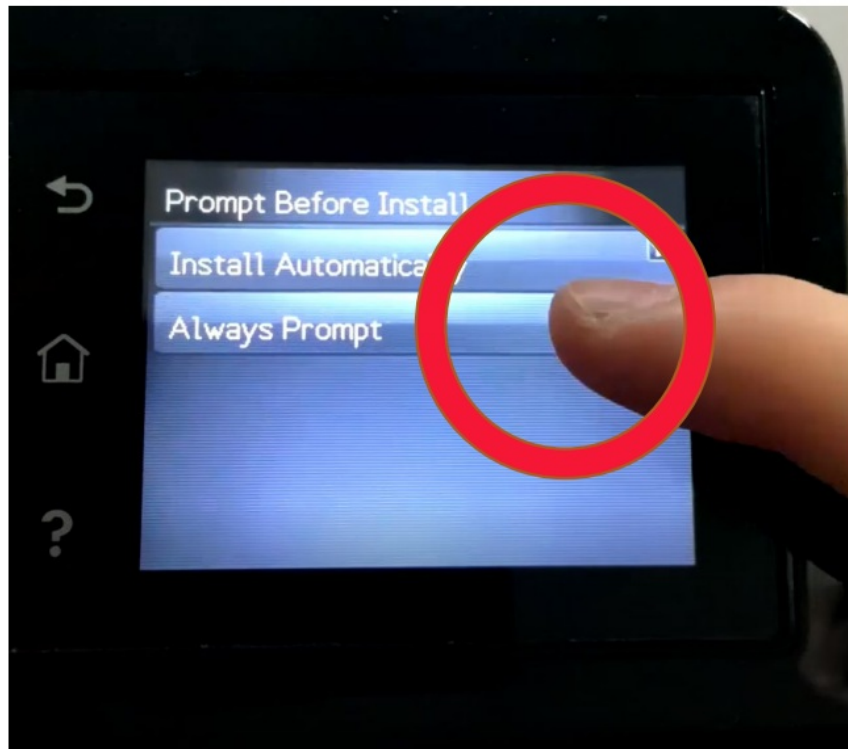

This will return you to the Manage Updates page. **Click Check Automatically:**

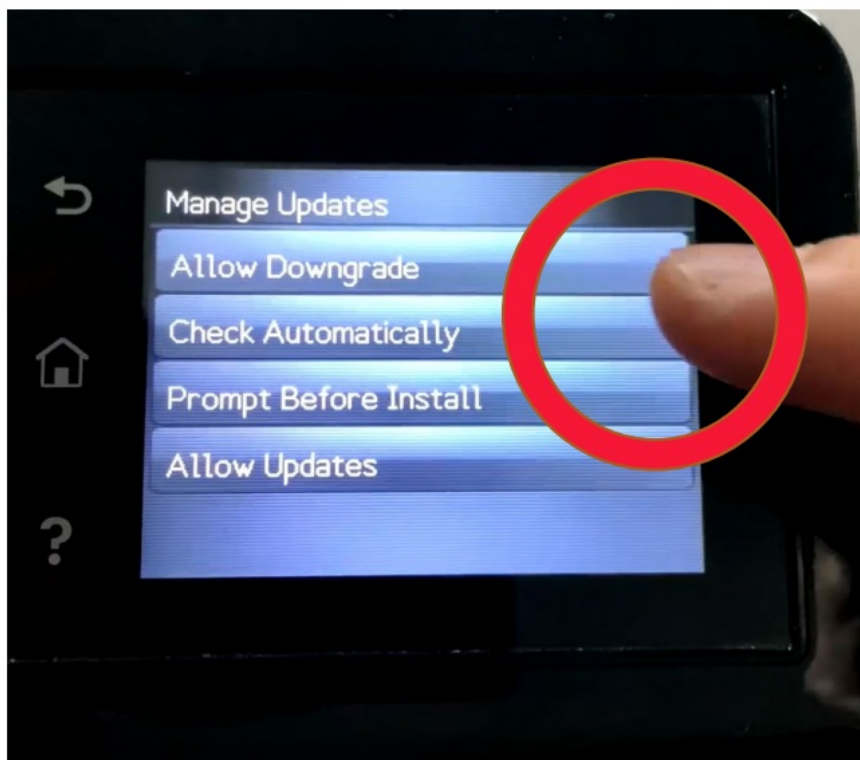

Select **Off**:

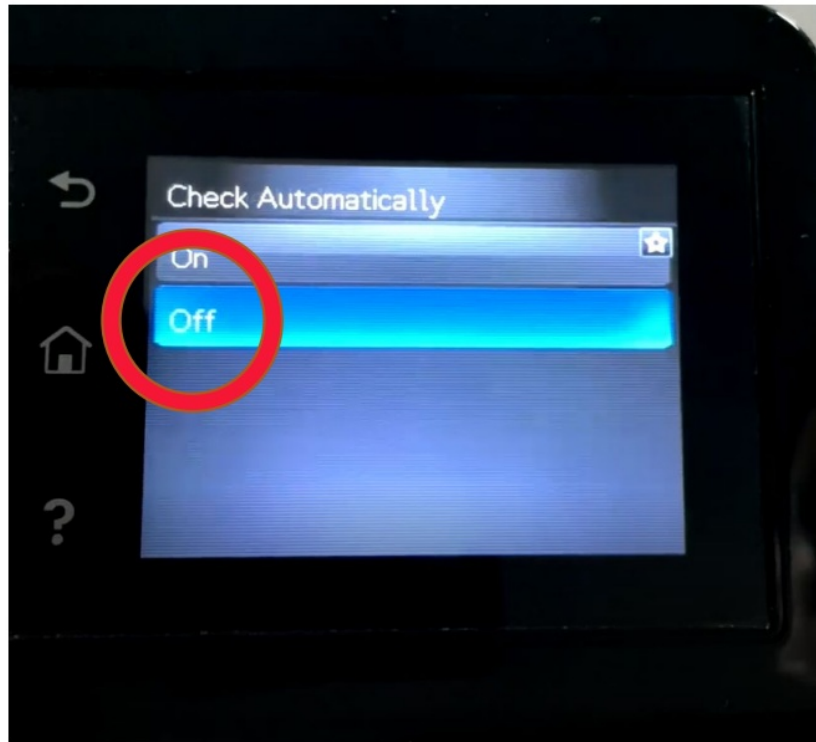

You have now disabled automatic firmware updates in this printer.

Note that printer interfaces can vary between different models, so prompts may be in a different order but the instructions are generally the same across models. For more information, reach out directly to your sales representative.

www.scc-inc.com

Static Control Components, Inc.

US/Canada: 800 488 2426 •

International: +1 919 774 3808 •

Email: info@scc-inc.com

3010 Lee Avenue •

PO Box 152 •

Sanford, NC 27331 •

United States

Documents / Resources

	Static Control How to Disable Automatic Firmware Updates in Select HP Printers [pdf] User Guide How to Disable Automatic Firmware Updates in Select HP Printers, Disable Automatic Firmware Updates in Select HP Printers
---	---