 


STAUB Edge System with 2-Channel PR55UX Sidemount Speakers Installation Guide

Home » staub







Contents

- **1 PRODUCT OVERVIEW**
- 2 ADDITIONAL HARDWARE
- **3 BEFORE INSTALLATION**
- 4 Documents / Resources
 - 4.1 References

PRODUCT OVERVIEW

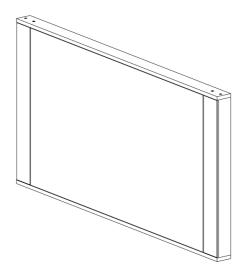

ADDITIONAL HARDWARE

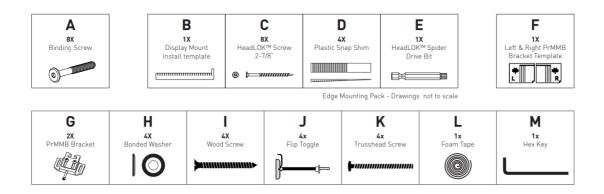

BEFORE INSTALLATION

Choose an installation location free of physical obstructions behind or within the wall.

Working near electrical equipment and wires poses an electrocution hazard. Turn off nearby electrical circuits from the breaker. Use a non-contact voltage tester to confirm that the installation location is free of live electrical wires and equipment prior to cutting or drilling into the wall. Contact a qualified electrician before making any modifications to electrical wiring.

Determine the potential hazards of working with hand or power tools and take the appropriate safetyprecautions. Use personal protective equipment (PPE) as appropriate, including, but not limited to: vision, hearing, and respiratory protection.

Consult local building and/or electrical codes prior to installation of speakers, cabling, or electrical equipment.

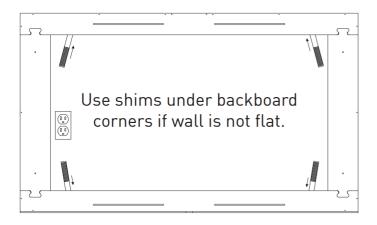


Fig. 1 Screw Backboard to Wal

Assemble and screw backboard to wall with 8 2-7/8" headlocks C provided as part of edge mounting pack. Use shim pack D as needed if wall is not flat.

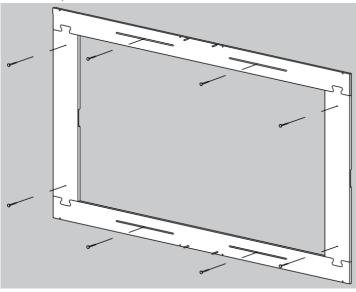


Fig. 2 Install PrMMB

Align and level the PrMMB templates F with top and side of the backboard.

NOTE: Do not align template with top of TV

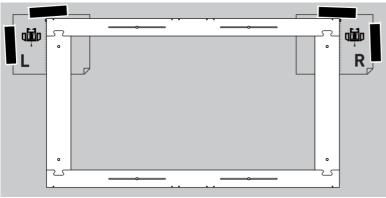


Fig. 3 PrMMB Template

Align the PrMMB bracket G level with the templates F and mark pilot holes.

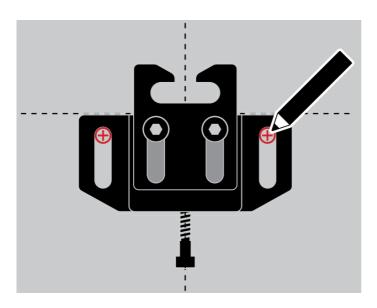


Fig. 4 Drill Pilot Holes

- 3/32" bit for wood screws into stud
- 1/2" bit for flip toggles into dry wall

Remove brackets G and drill pilot holes at mark locations for wood screws or flip toggles.

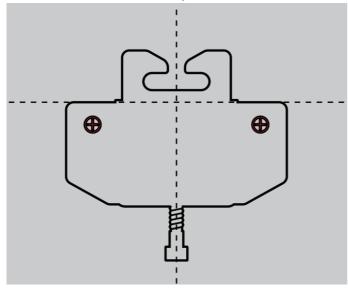


Fig. 5 Attach Bracket to Wall

If mounting into a stud use 2 wood screws I and 2 bonded washers ${\bf H}$ on each bracket ${\bf G}$

If mounting into drywall, use 2 flip toggles ${\bf J}$ for each bracket G (see flip toggle instructions below in fig. 6). Then, fasten brackets ${\bf G}$ to wall by screwing trusshead screws ${\bf K}$ with bonded washers H into flip toggles ${\bf J}$.

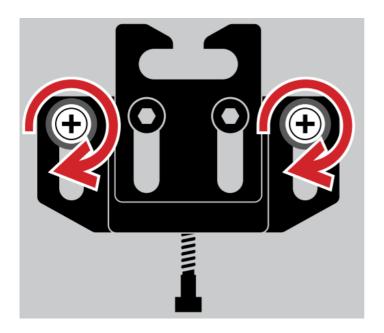


Fig. 6 Flip Toggle Instructions

Follow instructions here to insert flip toggles $\, {f J} \, .$

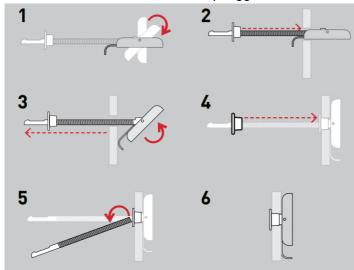


Fig. 7 Setting Speaker Depth

Adjust the pre-installed mounting bolts and T-bars on the back of speakers so speakers are approximately 1/8" off wall.

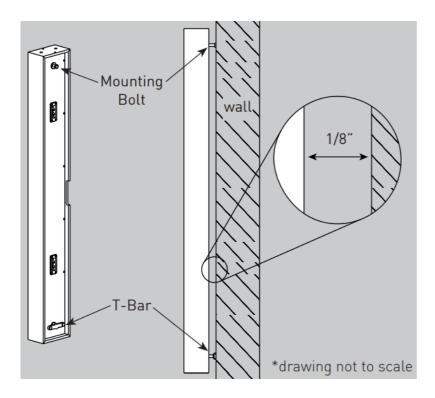


Fig. 8 Install Speakers

Mount the speakers to the wall by setting the mounting bolts on the back of your speakers into the top notch of the PrMMB brackets.

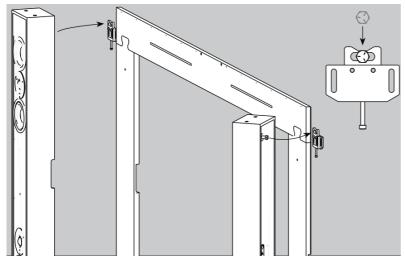


Fig. 9 Attach TV Uprights

Lay the TV face down on a clean, padded surface. Attach TV mount with uprights (included with TV mount) to your TV's VESA mounting holes. Follow the TV mount manufacturer's instructions and use the hardware supplied with the mount.

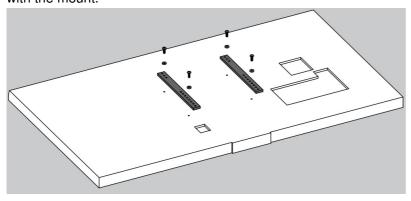


Fig. 10

Mark the Template

Latch the TV mount wall plate to the TV mount uprights as if it were hung on the wall. Position the display mount installation template **B** with the lipheld tightly against the top edge of the TV. Mark a line on the template at the top edge of the TV mount wall plate. Set the template aside.

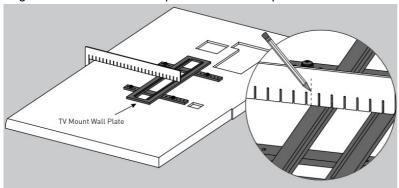


Fig. 11 Position the Wall Plate

Hold the display mount installation template **B** with the top edge flush with the top edge of the back board. The line marked on the template (from fig.10) indicates where the top edge of the TV mount wall plate should fall when installed. Place a mark on the wall at this location.

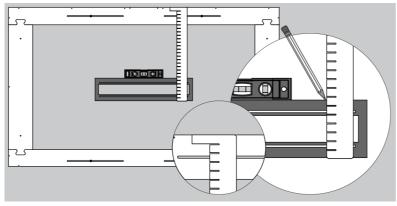


Fig. 12 Install TV Mount Wall Plate

Install the TV mount wall plate to the wall with the top edge aligned with the mark from Fig. 11. Follow all TV mount manufacturer's installation instructions, using the mounting hardware provided with the TV mount.

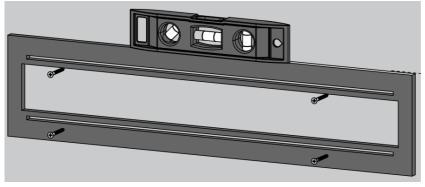


Fig. 13 Install Display Mount

Following manufacturer's specifications, insall your display mount to the TV mount wall plate.

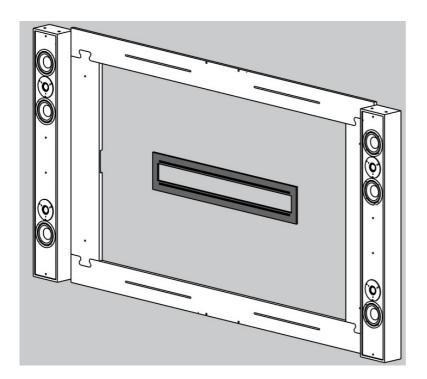


Fig. 14 Attach Display to Mount

Attach the display to the mount. Ensure that the display is center with the backboard.

Speakers may need to be removed from PrMMB brackets **G** in order to hang the display.

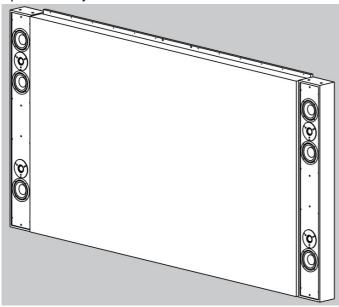


Fig. 15 Align the Trim

Align the binding posts on the top and bottom trim pieces with the corresponding holes in the backboard. Embedded magnets in the tops and bottoms of the speakers will register with the embedded magnets in the trim pieces.

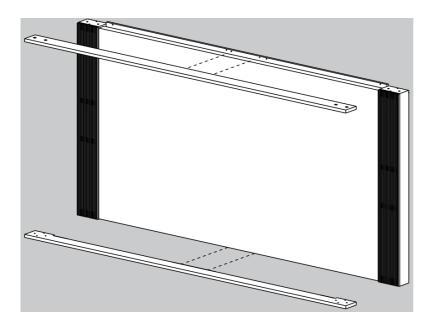


Fig. 16 Make Trim Connection

For typical trim connections install the 8 binding screws A into the speakers as shown.


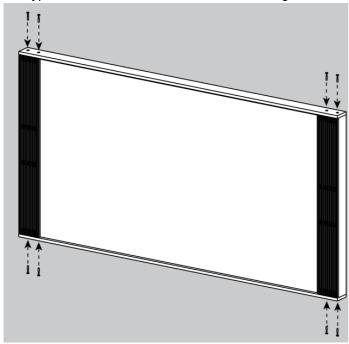


Fig. 17 Install Grilles

Magnetically attach the grilles to the speakers.

NOTE: versions with linear bar grilles come with the linear bar grilles preinstalled.

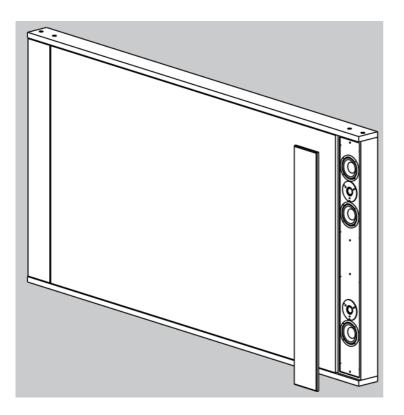

Costumer Support

For assistance call (888) 213-5015 or visit www.leonspeakers.com

Documents / Resources



<u>STAUB Edge System with 2-Channel PR55UX Sidemount Speakers</u> [pdf] Installation Guide Edge System with 2-Channel PR55UX Sidemount Speakers, Edge System, 2-Channel PR55UX Sidemount Speakers, Sidemount Speakers, Speakers

References

• Leon Speakers | Picture Perfect Sound®

Manuals+,