

STEALTH PS4 Setup User Guide

Home » STEALTH » STEALTH PS4 Setup User Guide 🖫

Contents

- 1 STEALTH PS4 Setup
- 2 PS4TM SETUP
- 3 ADJUST THE HEADSET AUDIO LEVELS
- **4 NINTENDO SWITCHTH SETUP**
- **5 PC/ MOBILE & TABLET**
- **6 CONTROL**
- **7 XBOX SETUP**
- **8 Legal information**
- 9 Warranty
- 10 Precautions
- 11 important Safeguards & Precautions
- **12 HAVING TROUBLE SETTING UP?**
- 13 Documents / Resources
 - 13.1 References
- **14 Related Posts**




STEALTH PS4 Setup



PS4TM SETUP

PS5 SETUP - VISIT STEALTHGAMING.NET AND CLICK ON THE SUPPORT ARTICLES TAB

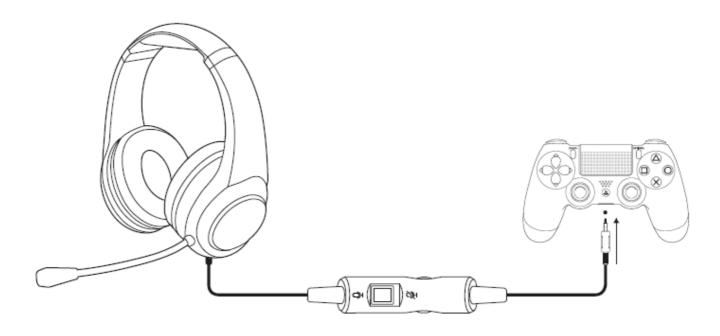

In order to near the in-game audio through the neadset, you must make sure that your ps4" system is set-up as follows


Settings > Devices > Audio Devices > Output to headphones > All audio

ADJUST THE HEADSET AUDIO LEVELS

the volume level of the headset and microphone can be adjusted within the ps4" system menu as follows:


HEADSET VOLUME: Settings> Devices > Audio devices > Volume control (headphones) **MICROPHONE LEVEL:** Settings > Devices Audio devices > Adjust microphone level (Adjust the microphone level until the indicator shows good)

NINTENDO SWITCHTH SETUP

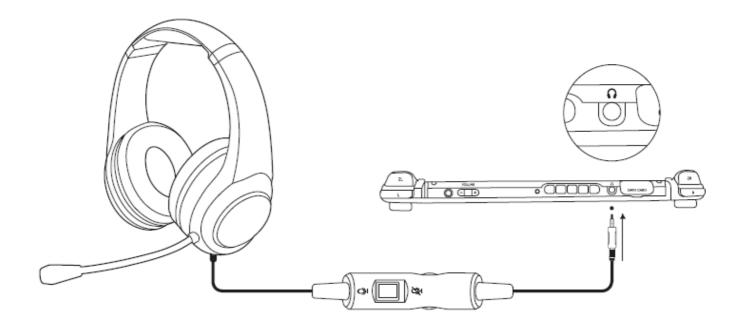


insert the headsets 5.5mm jack plug into your Nintendo Switch" Console. Ihe Headset should work upon connection. Chat available for games that support chat.

PC/ MOBILE & TABLET

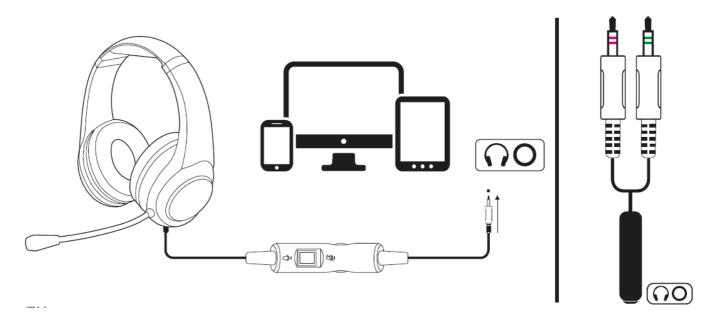

Most new WP pcs have a single .5mm jack pples connection. when connecting to a the mobile 5.5mm or tablet. jack from the headset directly into the port on yourru. The s If your PC uses separate Green/Pink connectors you will need a PC Splitter Cable (Sold Separately)


CONTROL

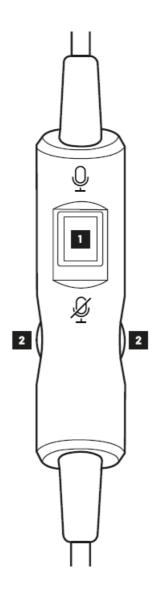

- 1. MICROPHONE SWITCH
 - MICROPHONE IS ACTIVE/ON
 - MICROPHONE IS MUTED
- 2. MASTER VOLUME-GAME & CHAT

NOTE: PLEASE MAKE SURE THE VOLUME IS TURNED UP AND THE MIC IS SWITCHED ON

XBOX SETUP

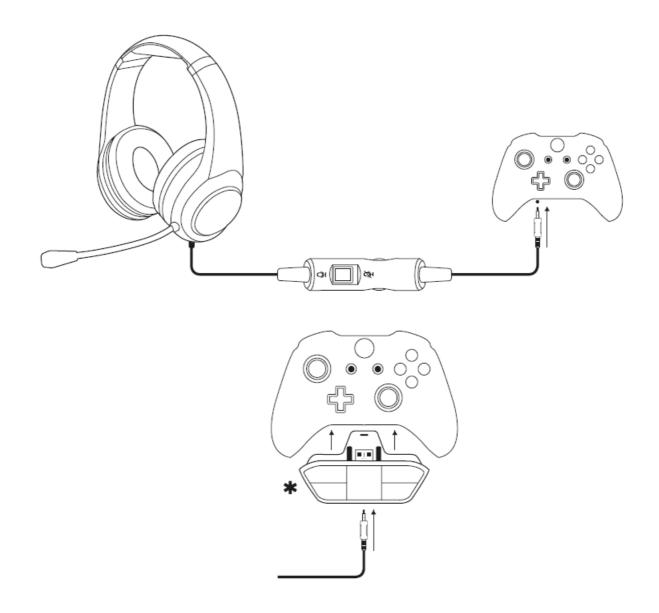

NOTE: IF YOU ARE USING AN ORIGINAL XBOX ONETH CONTROLLER YOU WILL REQUIRE THE *XBOX ONE STEREO HEADSET ADAPTER (SOLD SEPARATELY)

HEADSET CHAT MIXER

- 1. Press the XBOX button on your controller
- 2. Go to the System tab
- 3. Select Audio
- 4. Ensure the headset Mic is turned on
- 5. Set the Headset Volume to maximum
- 6. Set the Headset Chat Mixer to the middle
- 7. Set the Mic Monitoring to your desired level

SURROUND SOUND

- 1. Press the XBOX button on your controller
- 2. Go to the System tab
- 3. Select Settings> Display & Sound> Audio Output
- 4. Select headset to Windows Sonic for Headphones

Legal information

Please keep this instruction manual for future reference. If you require any help or assistance please contact the Helpline or VISIT STEALTHGAMING.NET/SUPPORT

Warranty

This product is guaranteed for a period of one year from the date of purchase. During this period if there is a defect due to taulty materials, or workmanship the retailer from whom you purchased it will replace it with the same or a similar model on production of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. Ihis does not affect your statutory rights.

Precautions

- Ensure that the volume control is set to the minimum level before connecting the headset to your system
- Before wearing the neadset, set the volume control to its minimum level tnen siowly increase until you reacn your desired volume level
- Listening to your headset at its maximum level may cause damage to both the headset and your ears
- Long term exposure to loud music or other sounds in a headset may cause hearing damage. It is best to avoid very high volume levels when using a headset, especially for extended periods

important Safeguards & Precautions

- Never expose to direct sunlight or wet weather conditions
- Do not expose the unit to splashing, dripping, rain or moisture. Do not immerse in liquid
- Do not expose to dust, high humidity, high temperatures or mechanical shock
- · Avoid any unnecessary strain of the cable maged
- Do not disassemble; there are no serviceable parts inside
- For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the cabinet finish and leak inside

Where you see this symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in the EU or Turkey. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve standards of environmental protection in treatment and disposal of electrical waste.

HAVING TROUBLE SETTING UP?

WE CAN HELP! TECHNICAL SUPPORT. QUESTIONS/ SET UP/ NOT WORKING?

ONLINE: STEALTHGAMING.NET/SUPPORT

EMAIL: HELP@ABPTECH.CO.UK

LIVE CHAT: Speak to our Support Team by clicking the Chat With Us box over at stealthganming.net

MONDAY-THURSDAY 9AM to 5PM FRIDAY 9AM to 4PM

Documents / Resources



References

• <u>Stealth Gaming Headset Online | Stealth Gaming Accessories | Stealthgaming.net</u>

Manuals+,