

STEALTH SP-C60 V Charging Station Instruction Manual

Home » STEALTH » STEALTH SP-C60 V Charging Station Instruction Manual

Contents

- 1 STEALTH SP-C60 V Charging Station Instruction Manual
 - 1.1 WARRANTY
 - 1.2 INSTALLATION AND USE CHARGING DOCK (CHARGE TO PLAY)
 - 1.3 CHARGING LED INDICATORS
 - 1.4 SOLID RED LED CHARGING SOLID BLUE LED FULLY CHARGED / POWER ON
 - 1.5 INSTALLATION AND USE PREMIUM BRAIDED PLAY & CHARGE CABLE (PLAY & CHARGE)
 - 1.6 IMPORTANT SAFEGUARDS & PRECAUTIONS
 - 1.7 RECYCLING
 - 1.8 MADE IN CHINA
- 2 Documents / Resources
- **3 Related Posts**

STEALTH SP-C60 V Charging Station Instruction Manual










STEALTHGAMING.NET/SUPPORT

F: STEALTHGAMING.NET / T: @STEALTHGAMENET / I: STEALTHGAMING_NET

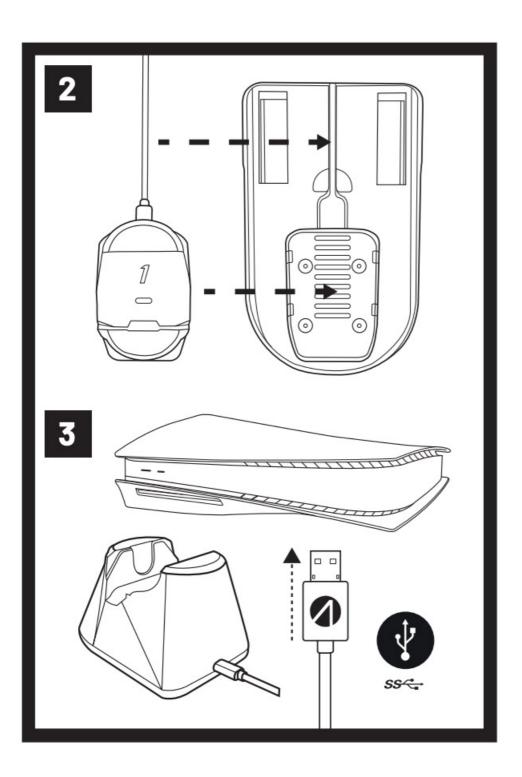

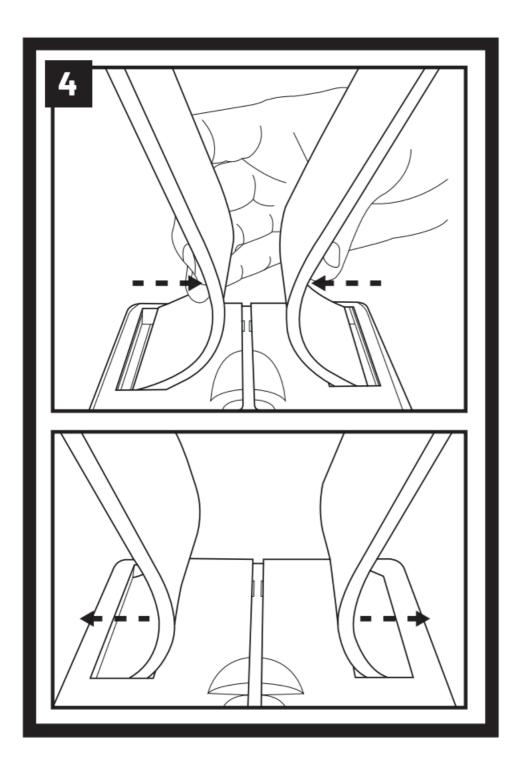

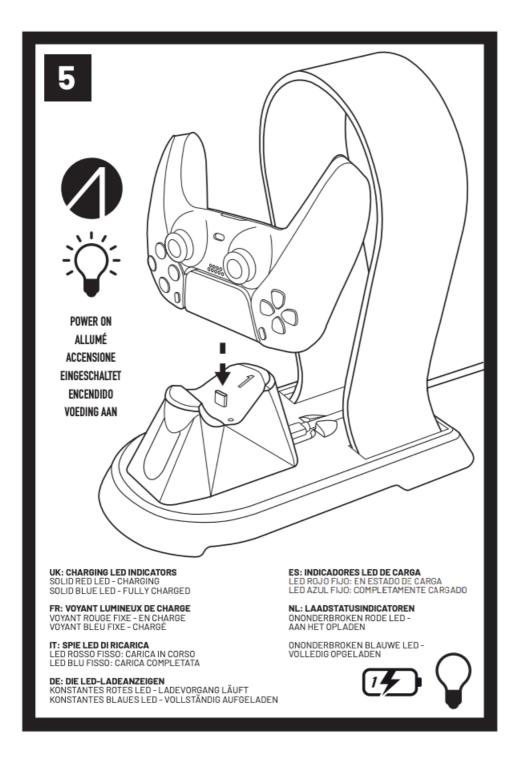

Please keep this instruction manual for future reference. If you require any help or assistance please contact the Helpline.

WARRANTY

This product is guaranteed for a period of one year from the date of purchase. During this period if there is a defect due to faulty materials, or workmanship the retailer from whom you purchased it will replace it with the same or a similar model on production of your purchase receipt or proof of purchase. This guarantee does not cover defects arising from accidental damage, misuse or wear and tear, and is available only to the original purchaser of the product. This does not affect your statutory rights.

INSTALLATION AND USE - CHARGING DOCK (CHARGE TO PLAY)

1. Using the USB Premium Braided Play & Charge Cable, insert the smaller end into the USB C slot on the back of the Charging Dock and the other end into a free USB port on your console

- 2. Position your controller onto the charging dock using the USB C on your DualSense™ wireless controller to begin charging (SEE IMAGES OVERLEAF)
- 3. Switch on your console

CHARGING LED INDICATORS

The LED indicators will show the current state of charging for your DualSense™ wireless controller as follows:

SOLID RED LED – CHARGING SOLID BLUE LED – FULLY CHARGED / POWER ON

NOTE: Once your controller is fully charged remove them from the Charging Dock.

INSTALLATION AND USE - PREMIUM BRAIDED PLAY & CHARGE CABLE (PLAY & CHARGE)

if you have forgotten to charge your controllers on the Charging Dock, an alternative charging solution can be to use the Premium Braided Play & Charge Cable for instant Play & Charge. Follow the steps below:

- Using the USB Premium Braided Play & Charge Cable, insert the smaller end into the USB C slot on your DualSense™ wireless controller and the other end into a free USB port on your console
- 2. Switch on your console. Your DualSense™ wireless controller will now begin charging

NOTE: Refer to your PlayStation®5 system and DualSense™ wireless controller instruction manuals for further information on charging times.

IMPORTANT SAFEGUARDS & PRECAUTIONS

- Children should always be supervised when using this product
- This unit is for indoor use only, do not expose to dust, direct sunlight, wet weather conditions, high humidity, high temperatures or mechanical shock
- Do not expose to splashing, dripping, rain or moisture. Do not immerse in liquid
- Do not position any cables where they would be subjected to extreme heat or flames
- · Keep all cables away from oil or sharp objects
- Avoid any unnecessary strain of cables
- · Never carry the unit by its cables
- Do not use if the equipment is damaged
- Damaged Power Supplies must be discarded and replaced
- To reduce the risk of fire, electric shock or personal injury, do not use the USB Premium Braided Play & Charge Cable supplied with any other attachment, unit or equipment
- Do not attempt to use the equipment with any mains adapter that has a USB attachment built in
- The charging terminals are not to be short-circuited
- Do not disassemble; there are no serviceable parts inside
- For external cleaning, use a soft, clean, damp cloth only. Use of detergents may damage the cabinet finish and leak inside

RECYCLING



Where you see this symbol on any of our electrical products, batteries or packaging, it indicates that the relevant electrical product or battery should not be disposed of as general household waste in the EU or Turkey. To ensure the correct waste treatment of the product and battery, please dispose of them in accordance with any applicable local laws or requirements for disposal of electrical equipment/batteries. In so doing, you will help to conserve natural resources and improve

standards of environmental protection in treatment and disposal of electrical waste. The recycling and processing of Waste Electrical and Electronic Equipment will make a significant contribution towards helping protect the environment by reducing landfill waste.

MADE IN CHINA















Not recommended for children under 6 years of age. Please retain this Instruction Manual for future reference.

Due to the company's policy of constant improvement and technical refinement, the company reserve the right to alter the specification. This product is not sponsored, endorsed or approved by Sony PlayStation.

PS5™, is a registered trademark of Sony Interactive Entertainment Inc.

Manufactured by ABP Technology Ltd. Bolton, BL2 1BX. MADE IN CHINA.

Documents / Resources



STEALTH SP-C60 V Chrging Station [pdf] Instruction Manual SP-C60 V, Chrging Station

Manuals+.