



Stilo WL-KEY Wireless Helmet Key Instructions

[Home](#) » [Stilo](#) » Stilo WL-KEY Wireless Helmet Key Instructions 

Contents

- [1 Stilo WL-KEY Wireless Helmet Key](#)
- [2 PRODUCT INFORMATION](#)
- [3 Quick Instructions](#)
- [4 EVOLVED FUNCTIONS](#)
- [5 ROAD MODE ONLY](#)
- [6 Documents / Resources](#)



Stilo WL-KEY Wireless Helmet Key



PRODUCT INFORMATION

 
MODEL NAME: Stilo WL-KEY Wireless Helmet Key

Quick Instructions

BASIC COMMAND

Commands:

1. Turn on. PTT function (road mode)
2. Volume down button
3. Volume up button

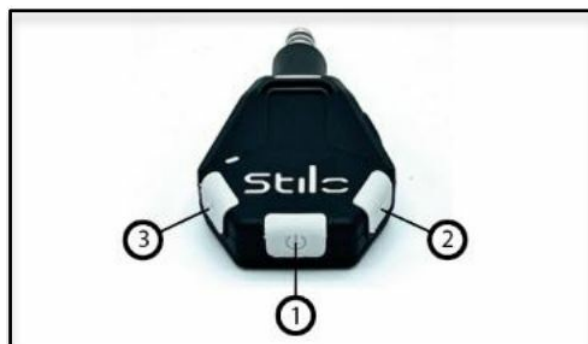

Turn ON

- Press the central button for about 2 seconds (until the two LEDS turn on) to turn ON the device



Volume Regulation:

- Shortly press the key “+” or the key “-” to increase or decrease the volume of one step. At each short pressure, the volume will move of one step.



Turn OFF

- Press the central button and the “-” button for about 2 seconds to turn OFF the device.
- If the device stays On without connection with the intercom it will turn Off automatically after 10 minutes.



Pairing:

Carry out the operation on one helmet at a time

- Turn the device off.
- Press the central button for 8 seconds , two LEDS (blue and red) will start flashing.
- Wait for the pairing with the other device
- ON THE DG: press for 8 sec. the related button «helmet»



Main unit connection:

If disconnected, press any key to reconnect to the control unit once back within its range of action (10 meters)



Volume Regulation:

 
After pairing, shortly press the key "+" or the key "-" to increase or decrease the volume of one step. At each short pressure, the volume will move of one step. The volume will automatically sincronize with the DG



EVOLVED FUNCTIONS

Function MUTE:

- Press and hold the "-" button for 2 seconds to disable the helmet's microphone and audio. By pressing any key, the function is deactivated and communication is restored.

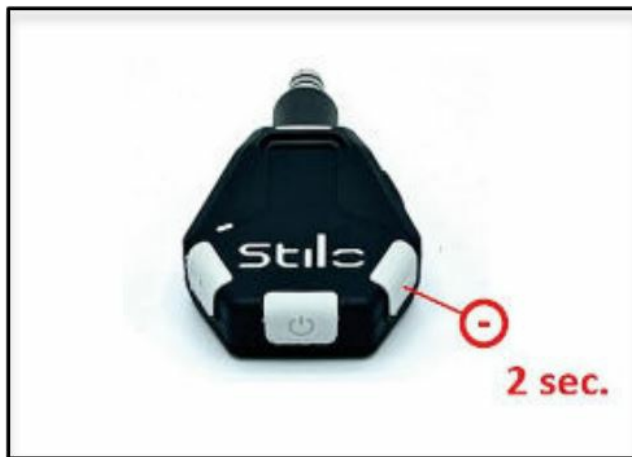

It is also possible to reactivate the communication by pressing one of the Vol keys on the control unit. Mute function doesn't work during a phone call

Side tone regulation:

- Keep the "+" key pressed for 6 sec to activate the function.
- You can adjust the volume of your return voice using the "+" and "-" volume keys



The setting is automatically saved after 6 seconds of inactivity.

ROAD MODE ONLY

 
PTT (radio connection only)

- Press and hold the center button to activate Push To Talk. A tone confirms pressing the key, the radio transmission will be active after 1 second and will remain active until released. The red confirmation LED will light up on the control unit.



Incoming call :

- Press the key “+” or the key “-” to accept incoming calls

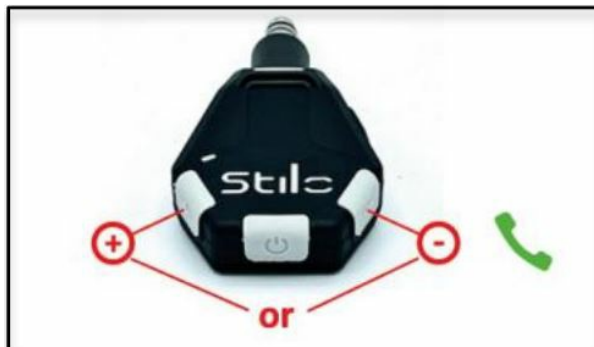

Reject or end a call:

- Press and hold the key “+” or the key “-” for 2 sec. to reject incoming calls.
- During a call press and hold the key “+” or the key “-” for 2 sec. to end the call



Callback last number:

- Press the key “+” and the key “-” for 2 sec to call back the last number.

 


Battery specs:

- Charge duration in continuous use: 4 h
- Charging time (from low battery): 1,30 h

Always recharge before use to ensure optimal battery life

WARNING!!! Please, be aware that some substances (like brake fluids based on polyglycols) may be aggressive on paints and plastics and may damage them.

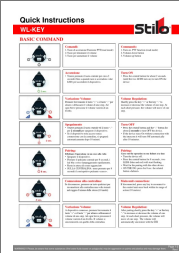

Quick Instructions
Stilo

Basic Commands

Icon	Command	Description
[Icon]	Power On/Off	Press the power button to turn the device on or off.
[Icon]	Volume Up/Down	Press the volume buttons to adjust the volume.
[Icon]	Channel Selection	Press the channel selection button to change the channel.
[Icon]	Frequency Selection	Press the frequency selection button to change the frequency.
[Icon]	Mode Selection	Press the mode selection button to change the mode.
[Icon]	Emergency Call	Press the emergency call button to initiate an emergency call.
[Icon]	Intercom	Press the intercom button to initiate an intercom call.
[Icon]	Call Transfer	Press the call transfer button to transfer a call.
[Icon]	Call Forward	Press the call forward button to forward a call.
[Icon]	Call Hold	Press the call hold button to hold a call.
[Icon]	Call End	Press the call end button to end a call.

[Stilo WL-KEY Wireless Helmet Key \[pdf\] Instructions](#)

WL-KEY Wireless Helmet Key, WL-KEY, Wireless Helmet Key, Helmet Key, Key