



# STIRLING TC936 10-In-1 Multi Function Thermo Cooker User Guide

[Home](#) » [STIRLING](#) » STIRLING TC936 10-In-1 Multi Function Thermo Cooker User Guide 

## Contents

- [1 STIRLING TC936 10-In-1 Multi-Function Thermo Cooker](#)
- [2 The Thermo cooker and accessories](#)
- [3 Give us a call](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

# STIRLING

## STIRLING TC936 10-In-1 Multi-Function Thermo Cooker



### The Thermo cooker and accessories

A large number of parts and accessories allow you to use your new thermo cooker for a wide variety of food preparation tasks.



1. The jug is removable and used for all processes.
2. The jug lid, fitted with an airproof sealing ring, must always cover the jug.
3. A small measuring cup also serves as a lid closure.
4. The jug gets hot when heating food, so only hold it by the handle.
5. Electronic scales on top of the main appliance ensure you add the correct quantities.
6. The LCD at the front displays set programs, times and processes.
7. Operation is easy with push buttons for selecting processes and a dial for setting times and temperatures.
8. The removable blade fits into the bottom of the jug.
9. When the appliance is not used, you can cover the blade with a protective jacket.
10. A blade locking mechanism at the underside of the jug ensures safe operation.
11. Always use the spatula to remove food from the jug, never your hands.
12. The spatula has a small hook you can use to lift the small steamer basket safely out of the hot jug.
13. The butterfly stirring attachment helps you achieve best results when whisking.
14. The large steamer bowl fits on top of the jug lid.
15. For steaming larger quantities of food in two layers, add the steamer tray.

16. Always cover the steamer attachment with the matching lid.



### 17. Automatic Programs

Ten automatic programs make some of the most common food preparation tasks even easier: just select the program and leave the rest to the machine. To select an automatic program, press and hold the WEIGHT button for 2 seconds, turn the adjustment knob to the program number, then press the knob to confirm. The program will start immediately, and the display will show the program speed, temperature (or the room temperature, if no heating is included) and time, counting down.

#### Control panel

18. The LCD at the front of the machine displays:

1. Temperature [37°C – 120°C]
2. Speed [1 to 10, -1 to -3] or number of auto program
3. Timer [sec:min]
4. Weight [g]

19. Press the required push button to select a function, then turn the adjustment knob to set the desired temperature, speed or cooking/processing time.

20. Press the PULSE button and hold for a few seconds for an extra burst of power. (Do NOT use this button when heating the food to more than 60°C.) Press the WEIGHT/AUTO button, then place the food to be weighed on the scales (max. 5kg). Press and hold this button for 2 seconds, then use the adjustment knob to select an automatic program.


21. Press and hold the RESET button for 3 seconds to clear all former setting data. Push in the adjustment knob to start or pause the mixing/cooking process.



## Give us a call

What? You mean this Quick Start Guide didn't have ALL the answers? The manual has more comprehensive instructions, or speak to us. Call our After Sales Support on 1300 112 534. Well done, you made it! Now sit back and relax ... your new thermo cooker is automatically covered by a 3 year warranty.

## Documents / Resources

	<p><b><a href="#">STIRLING TC936 10-In-1 Multi Function Thermo Cooker</a></b> [pdf] User Guide TC936, 10-In-1 Multi Function Thermo Cooker</p>
---	--