



Home » StreamLight » STREAMLIGHT PolyTac Flashlight with Lithium Batteries Instruction

Manual 75



POLYTAC®

Operating Instructions

Contents [hide]

- 1 PolyTac Flashlight with Lithium Batteries
- 2 LED SAFETY
- 3 BATTERY SAFETY
- 4 BATTERY INSTALLATION/REMOVAL
- **5 GENERAL OPERATION**
- **6 MAINTENANCE**
- 7 PRODUCT USE
- **8 SERVICE OPTIONS**
- 9 Documents / Resources
 - 9.1 References

PolyTac Flashlight with Lithium Batteries

Caution: LED Radiation (RG-2) -

Do not stare into beam.

May be harmful to eyes.

Thank you for selecting the PolyTac® flashlight. As with any fine tool, reasonable care and maintenance of this product will provide years of dependable service. Please read this manual before using your PolyTac® .

SAVE THESE INSTRUCTIONS.

This guide contains important safety and operating instructions for your PolyTac®.

LED SAFETY

⚠ CAUTION

LED RADIATION (RG-2). DO NOT STARE INTO BEAM. MAY BE HARMFUL TO EYES. PER IEC 62471 Ed 1.0:2006-07.

△ CAUTION

STROBE MODE MAY CAUSE SEIZURES IN PERSONS WITH PHOTOSENSITIVE EPILEPSY.

BATTERY SAFETY

⚠ CAUTION

EXPLOSION RISK, BURN, AND FIRE HAZARD. DO NOT DISASSEMBLE, CRUSH, SHORT CIRCUIT, HEAT ABOVE 140°F (60°C), OR DISCARD IN FIRE. DO NOT USE SL-B9® BATTERIES IN FIREFIGHTING APPARATUS OR FIRE SITUATIONS. DO NOT MIX CR123A BATTERIES OF DIFFERENT BRANDS OR OLD WITH NEW BATTERIES. DO NOT RECHARGE CR123A. ONLY USE STREAMLIGHT, PANASONIC, OR SANYO SIZE CR123A; DURACELL 123A, OR ENERGIZER 123. KEEP AWAY FROM CHILDREN. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

NOTICE

This product is not designed to use rechargeable CR123A batteries.

BATTERY INSTALLATION/REMOVAL

Uses two CR123A batteries. Unscrew the tail cap and remove depleted batteries, insert fresh batteries positive end first, replace and tighten tail cap.

GENERAL OPERATION

The PolyTac® features a programmable switch with momentary operation (light press or tap) and constant on operation (press until click).

- High: Tap and hold; click to lock on; click again for off.
- Strobe: Fast double-tap (within 0.4 seconds) and hold; click to lock on; click again for

off.

 Low: Fast triple-tap (within 0.4 seconds per tap) and hold; click to lock on; click again for off.

Accessing Other Programs

The PolyTac® features a TEN-TAP® programmable switch allowing the user to select one of three different programs. To change to the next program, starting from the "Off" position, tap the switch rapidly 9 times (within 0.4 seconds per tap) and hold it down the 10th time. Continue holding the switch until the light turns off (approximately 1 second), then release the switch.

Available programs are High-Strobe-Low (Factory Default), High only, or Low-Medium-High.

MAINTENANCE

It is important to keep the O-ring on the tail cap lubricated.

PRODUCT USE

Streamlight flashlights are intended for use as high intensity, heavy duty, and portable light sources. Use of Streamlight flashlights for any purpose other than as light sources is specifically discouraged by the manufacturer. Streamlight specifically disclaims liability for other than recommended use.

NOTICE

Be sure to use only genuine Streamlight replacement parts to ensure product safety. Substitution may invalidate the product approval. Do not try to repair the unit yourself. Send to a qualified service facility or return it to the factory.

Streamlight Limited Lifetime Warranty

Streamlight warrants this product to be free of defects for a lifetime of use except for batteries and bulbs, abuse, and normal wear. We will repair, replace, or refund the purchase price of this product should we determine it to be defective. This limited lifetime warranty also excludes rechargeable batteries, chargers, switches, and electronics which have a 2-year warranty with proof of purchase. THIS IS THE ONLY WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OF

MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES ARE EXPRESSLY DISCLAIMED EXCEPT WHERE SUCH LIMITATION IS PROHIBITED BY LAW. You may have other specific legal rights which vary by jurisdiction.

Go to <u>streamlight.com/support</u> for a complete copy of the warranty.

To register your product, go to <u>streamlight.com</u> (Online Product Registration). Retain your receipt or any proof of purchase.

SERVICE OPTIONS

The PolyTac® contains few or no user-serviceable parts.

For Service options, go to <u>streamlight.com/support/service</u> and complete the Online Service Request for factory service or to find the location of an authorized Streamlight repair center near you.

Or contact:

Customer Service

© Streamlight, Inc.

30 Eagleville Road

Suite 100

Eagleville, PA 19403-3996, USA

Phone: 800-523-7488 Toll-Free / +1 610-631-0600

Fax: 800-220-7007 / +1 610-631-0712

Email: cs@streamlight.com



Documents / Resources



STREAMLIGHT PolyTac Flashlight with Lithium Batteries [pdf] Instruction

Manual

PolyTac Flashlight with Lithium Batteries, Flashlight with Lithium Batteries, with Lithium Batteries, Lithium Batteries

References

- User Manual
- StreamLight

Search:

e.g. whirlpool wrf535swhz

▶ Batteries, Flashlight with Lithium Batteries, Lithium Batteries, PolyTac Flashlight with Lithium Batteries, STREAMLIGHT, with Lithium Batteries

Leave a comment

Your email address will not be published. Required fields are marked * Comment * Name Email Website Save my name, email, and website in this browser for the next time I comment. **Post Comment**

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.