



## STREAMLINE 600GPD-F Filter Direct Flow RO System Instruction Manual

[Home](#) » [Streamline](#) » **STREAMLINE 600GPD-F Filter Direct Flow RO System Instruction Manual** 

### Contents

- [1 STREAMLINE 600GPD-F Filter Direct Flow RO System](#)
- [2 Kit Includes](#)
- [3 Installation Instructions](#)
- [4 Maintenance](#)
- [5 Optional Extras](#)
- [6 STREAMLINE®? Warranty](#)
- [7 Why STREAMLINE®?](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)



**STREAMLINE 600GPD-F Filter Direct Flow RO System**



**Codes:**  
600GPD-F

### **Kit Includes**

- 1 x 600GPD Filtration System
- 1 x Filter Spanner

### **Thank you for purchasing a STREAMLINE® Water Filtration System**

The 600GPD filtration system is very efficient at purifying water and is simple to install and maintain. It is the installer's responsibility to ensure that this appliance is plumbed in accordance with the local authority's by-law regulations.

Your water filtration system has been assembled and tested to ensure that there are no leaks.

### **Installation Instructions**


#### **Set-Up**

- Unscrew the three vertical filter bowls and remove the wrapping from the cartridges and reassemble. A filter spanner is included in the kit for loosening the filter bowls.
- Do not over-tighten the filter bowls when reassembling.
- Connect a water supply hose to the fitting marked 'Mains inlet connection' (see fig. 1).
- A hose lock type connection kit can be purchased to simplify the hose connection. (Part no. KIT01300 Brass fittings kit or KIT01301 Nylon fittings kit.)
- Cut and connect a suitable length of 1/4" tube to the wastewater connection which is marked 'DRAIN' (see fig. 2).
- This tube is the wastewater tube and must discharge into the nearest drain.

- Cut and connect a suitable length of ¼" tube and attach the connection marked 'FAUCET' (see fig. 2). This will discharge pure water into the storage tank.
- Identify the small R.O. Plug which is packaged in the R.O. Membrane bag.
- Lubricate the two O Rings and insert this plug into the notched side of the centre white tube of the membrane (see fig. 3).



- Remove the cap on the left hand side of the front R.O. Housing and insert the blue R.O. membrane with the large black rubber seal towards the open end of the housing
- Screw the end cap of the membrane housing in place and refit the inlet tube.
- Remove the cap on the left hand side of the front R.O. Housing and insert the blue R.O. membrane with the large black rubber seal towards the open end of the housing
- Screw the end cap of the membrane housing in place and refit the inlet tube.
- Remove the right hand cap of the second R.O. Housing and repeat the process.
- Temporarily remove the tube on the inlet connection of the R.O. Filter housing (see fig. 2), and turn the water supply on, allowing the water to flush through the first three vertical filters for 2-3 minutes, until all visible impurities have disappeared.
- Turn the water supply off and reconnect the tube.
- Open the flushing valve by turning the grip parallel to the tube (see fig. 4).
- Turn the water supply on, and test the system for leaks.
- Allow the system to run for 5 minutes before closing the flusing valve. The TDS reading will improve over 24-48 hours.

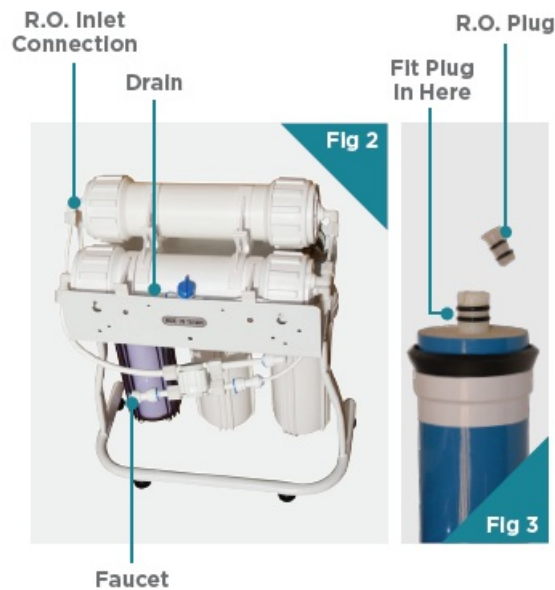

## Maintenance

- Open the flushing valve and allow the water to flush the membrane and run to drain for 10 minutes once a week. Once complete, close the valve completely. (Turn the grip 90° to the tube.)
- Replace the three vertical pre-filters every 3 months, or more frequently in very hard water areas (300ppm+).

## Optional Extras

- Pre R.O. Softening filter, for use in hard water areas to bring TDS readings down and enhance R.O. Membrane life. (Part no. FH1K plus fittings.)
- Male Hose lock type fittings kit. Part no. KIT01600 Brass fittings kit or KIT01601 Nylon fittings kit.)
- Post R.O. resin filter to produce 000ppm from the 600GPD system. (Part no. FH1D plus fittings.)

## STREAMLINE® Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from the RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS,

CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If STREAMLINE® receives notice of such defects during the warranty period, STREAMLINE® will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by STREAMLINE®.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by STREAMLINE®.

The customer is responsible for the cost of return of the defective part. If warranty is approved, STREAMLINE® will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of STREAMLINE®:

Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by STREAMLINE®, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to STREAMLINE®.

This warranty constitutes the exclusive remedy of any purchaser of a STREAMLINE® unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and STREAMLINE® shall have no other obligation or liability.

Important

Unfortunately these rights cannot be transferred to a third party.

## **Why STREAMLINE®?**

### **Flexibility**

- STREAMLINE® systems can be built according to customers' exact requirements
- For non-standard systems, the user's needs or specifications are listened to and turned into reality.

### **Quality**

- Whilst price is important, quality is remembered long after price is forgotten
- We insist on sourcing brand name products from around the world, only of a reputable quality, and bring them together under the STREAMLINE® name
- All STREAMLINE® products carry a full one year's warranty, according to the manufacturers' standard terms and conditions of sale.

### **Service**

- We have an in-house technical helpline able to answer most of your questions relating to the capabilities and functionalities of all STREAMLINE® products
- If we get it wrong, we will put it right. If you are sent a wrong item, we will immediately attend to sending you


the correct item and arrange a collection of the wrong item without any quibbles

- STREAMLINE® is backed by a comprehensive range with massive stocks providing you with a 'one stop shop' for all your requirements.

MANUFACTURED IN THE  
UNITED KINGDOM

W: [www.streamline.systems](http://www.streamline.systems) E: [sales@streamline.systems](mailto:sales@streamline.systems) T: +44 (0)1626 830 830

## Documents / Resources

|   |  |
|---|--|
|  | <p><a href="#">STREAMLINE 600GPD-F Filter Direct Flow RO System</a> [pdf] Instruction Manual<br/>600GPD-F Filter Direct Flow RO System, 600GPD-F, Filter Direct Flow RO System</p> |
|---|--|

**Manuals+.**