



Streamline SFC16 Digital Variable Controller Instruction Manual

[Home](#) » [Streamline](#) » Streamline SFC16 Digital Variable Controller Instruction Manual 

Streamline SFC16 Digital Variable Controller
Instruction Manual



INSTRUCTION MANUAL

STREAMLINE®

Codes:
SFC16

English


INSTR-SFC16



Contents

- 1 Wiring
- 2 Operating Warnings
- 3 Set Up Auto Calibrate
- 4 Operation
- 5 Controller Messages
- 6 Why STREAMLINE®?
- 7 STREAMLINE®
Warranty
- 8 Notes
- 9 Documents / Resources
- 10 Related Posts

Wiring

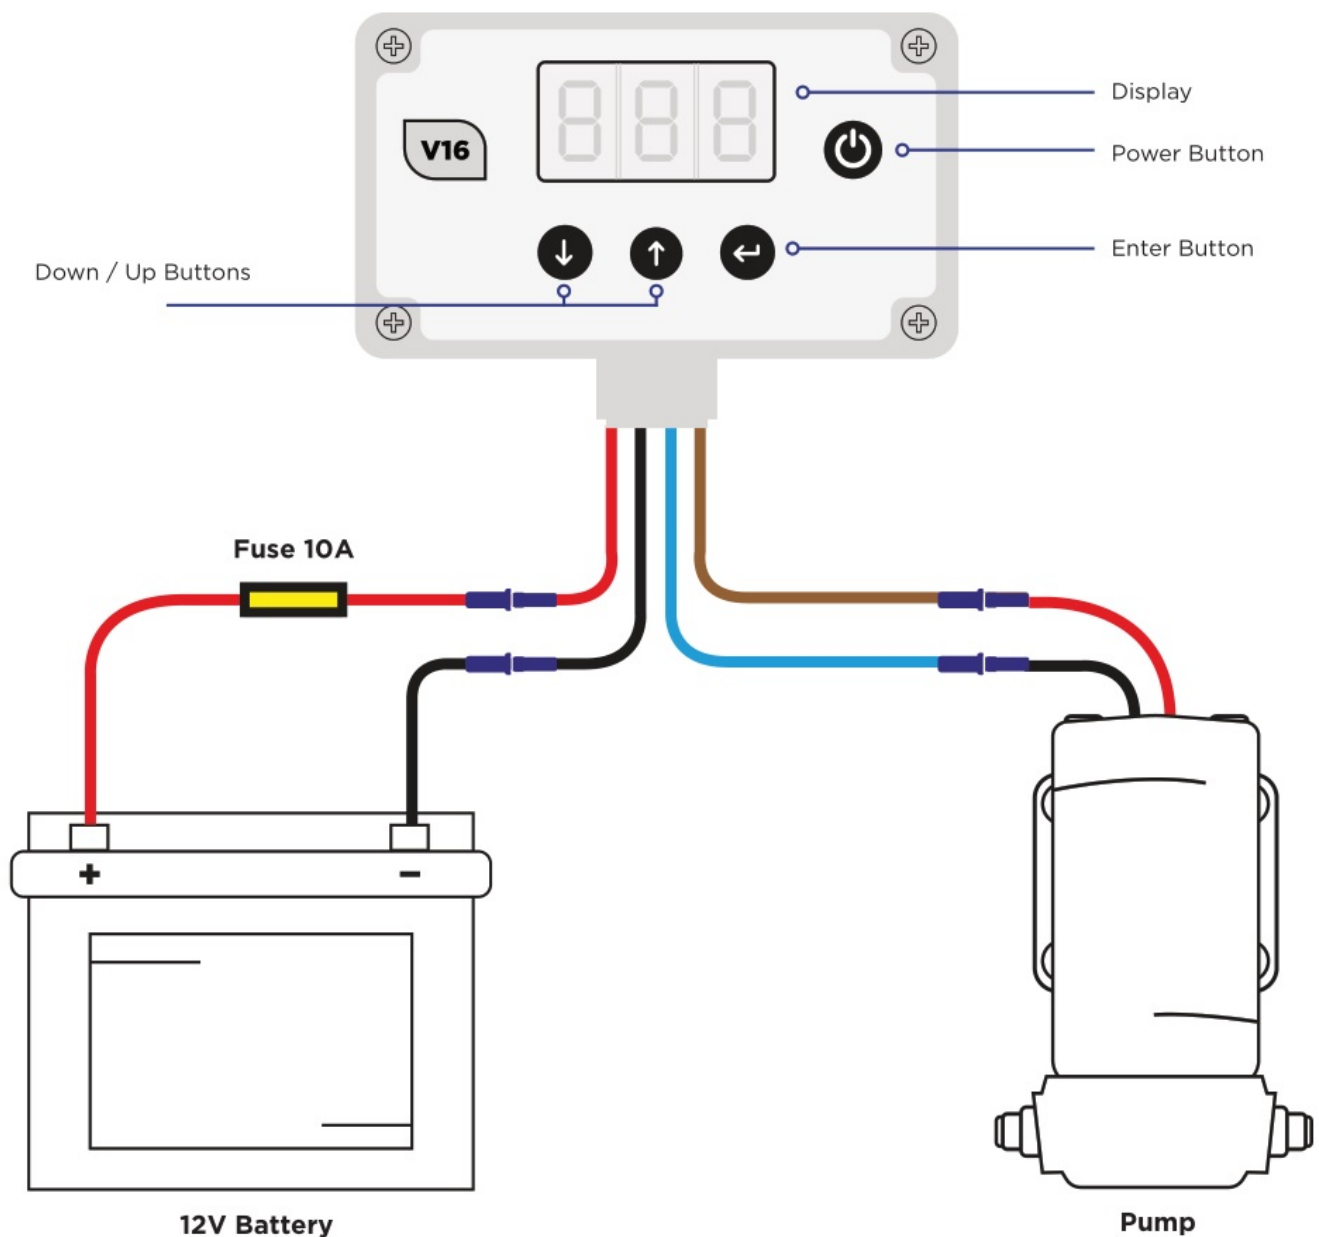

Connect the pump controller in accordance with this diagram.
NOTE: only fit the fuse once all connections are made



Important

The Fuse for this unit is a 10A Fuse. Make sure correct fuse is fitted in-line, close to the battery end of the RED (positive) wire. Failure to do so will result in damage to the unit.

Operating Warnings

Adjust the flow settings carefully. Repeated false dead-end detection indicates that the Cal value should be increased (less sensitive).

For safety wire through the pump pressure switch. (The pressure switch can be bypassed if absolutely necessary – the unit will protect itself under normal conditions.)

This is a WATER PUMP controller: it will not work with air in the system. Always prime the system before starting work. If air in the system causes false dead-end detection, increase Cal value until air is removed.

Do not set the Cal value too high. Setting it higher than necessary places extra strain on both the pump and the controller in a dead end situation. This can result in damage to both the pump and your controller.

Specification	Value
Supply Voltage	11 - 15 VDC
Maximum Current	15A
Typical Drive Current	8A
Voltmeter Accuracy	+ - 100mV
Enclosure Material	ABS
Water Resistance	IP65
Dimensions	115 x 65 x 40 (mm)
Working Temperature	0 - 40 Deg C



Important

Your battery is at risk of permanent damage if you disable low battery cut-off and continue to use your controller for long periods when the battery voltage has fallen below +10.5V.

Set Up Auto Calibrate

Button**Display**

Connect your hose and pole + brush to the pump.
Turn on the controller by pressing the power button.



Press up until the display shows 30.



Press and hold the up and enter buttons to calibrate. CAL will be displayed.



To select Auto Cal continue to press the down button until AUt is displayed. Press the enter button to start. Auto Cal starts from C99.



After several moments the calculated CAL value (e.g. C50) will be displayed and the controller is ready to use. Press enter to exit calibration.



Button

Display

The CAL value can be adjusted manually by following the same steps and adjusting the CAL value by pressing the up or down button instead of using AUT.



To enable or disable the low battery cut-off* (that stops your pump when the battery voltage is below 10.5V) press and hold the down and enter buttons.

Then use the up or down button to select ON or OFF. Press enter to save.



NOTE: 'ON' keeps your battery protected.

Operation

Button

Display


To select Auto Cal continue to press the down button until AUt is displayed. Press the enter button to start. Auto Cal starts from C99.



Press enter to display the current battery voltage.





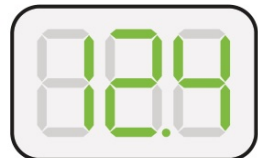


Press enter again to return to the current flow rate.



To turn the controller off, press the power button.



Controller Messages

Message	Description
	An error has occurred while using AutoCal. This will happen when the motor is not connected or the enter button has been pressed to cancel it.
	Pressure switch activated or pump disconnected
	A dead end has been detected. If this is not the case, try increasing the calibration value.
	This message will start to flash when the battery is low (<11.0V). If the battery is below 10.5V the pump will be disabled to protect the battery (unless low battery cut-off is disabled)
	An over current has been detected, the controller has shut down the pump to protect itself. Lower the flow rate and check the hose for blockages.

Why STREAMLINE®?

Flexibility

- **STREAMLINE®** systems can be built according to customers' exact requirements
- For non-standard systems, the user's needs or specifications are listened to and turned into reality.

Quality

- Whilst price is important, quality is remembered long after price is forgotten
- We insist on sourcing brand name products from around the world, only of a reputable quality, and bring them together under the **STREAMLINE®** name
- All **STREAMLINE®** products carry a full one year's warranty, according to the manufacturers' standard terms and conditions of sale.

Service

- We have an in-house technical helpline able to answer most of your questions relating to the capabilities and functionalities of all **STREAMLINE®** products
- If we get it wrong, we will put it right. If you are sent a wrong item, we will immediately attend to sending you the correct item and arrange a collection of the wrong item without any quibbles
- **STREAMLINE®** is backed by a comprehensive range with massive stocks providing you with a 'one stop shop' for all your requirements.



MANUFACTURED
IN THE
UNITED KINGDOM

STREAMLINE®
SAFELY CLEANING AT HEIGHT

CHECKED AND
TESTED BY
QUALITY CONTROL

STREAMLINE® Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS, CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If **STREAMLINE®** receives notice of such defects during the warranty period, **STREAMLINE®** will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by **STREAMLINE®**.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by **STREAMLINE®**.

The customer is responsible for the cost of return of the defective part. If warranty is approved, **STREAMLINE®** will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of **STREAMLINE®**

Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by **STREAMLINE®**, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to **STREAMLINE®**.

This warranty constitutes the exclusive remedy of any purchaser of a **STREAMLINE®** unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and **STREAMLINE®** shall have no other obligation or liability.

Important

Unfortunately these rights cannot be transferred to a third party.



Notes





Hamilton House, 8 Fairfax Road,

Heathfield Industrial Estate,
Newton Abbot
Devon, TQ12 6UD
United Kingdom

Telephone: +44 (0) 1626 830 830
Email: sales@streamline.systems
Visit www.streamline.systems

INSTR-SFC16

Documents / Resources

	<p>Streamline SFC16 Digital Variable Controller [pdf] Instruction Manual SFC16, Digital Variable Controller, SFC16 Digital Variable Controller</p>
	<p>Streamline SFC16 Digital Variable Controller [pdf] Instruction Manual SFC16, Digital Variable Controller</p>