



STRICH MODULAR 11 Mode Modulation Pedal User Manual

Home » STRICH » STRICH MODULAR 11 Mode Modulation Pedal User Manual

Contents

- 1 STRICH MODULAR 11 Mode Modulation
- **Pedal**
- **2 Product Information**
- **3 Product Usage Instructions**
- **4 OVERVIEW**
- **5 Precautions When Connecting**
- **6 Specifications**
- 7 Documents / Resources
 - 7.1 References



STRICH MODULAR 11 Mode Modulation Pedal



Product Information

Specifications:

• Input Impedance: Min. 100k Ohm; Max. 350k Ohm

• Output Impedance: 300 Ohm

• Recommended Load Impedance: 10 kohm

• Equivalent Input Noise: -90 dBu or less

• Power Supply: 9V AC adapter

• Current Draw: 10mA

• **Dimensions:** 115mm (length) x 73mm (width) x 48mm (thickness)

• Weight: 270g

• Accessory: Owner's Manual

Product Usage Instructions

1. Speed Adjustment:

Use the SPEED knob to adjust the speed of the modulation effect to your preference.

2. Level Output Adjustment:

Adjust the output level using the LEVEL knob to control the volume of the effect signal.

3. Output Connection:

Connect your amplifier using the 1/4 mono signal output to hear the processed sound.

4. Switch Control:

Use the switch to turn the pedal on/off for activating or deactivating the effects.

5. Depth Adjustment:

Modify the depth of the effects using the DEPTH knob for a more pronounced or subtle effect.

6. Modulation Effects Selection:

Switch between the 11 modulation effects using the MODE switch to choose from options like chorus, flanger,

tremolo, vibrato, phaser, and more.

7. Power Input:

Use a 9V AC adapter with a negative tip to power the pedal for optimal performance.

Power On/Off Sequence:

When powering up, turn on the power to your guitar amp last. When powering down, turn off the power to your guitar amp first to avoid any issues.

Frequently Asked Questions (FAQ):

• Q: Why is the sound level extremely low or impossible to hear?


A: Ensure that all connections are secure and that the pedal is powered correctly with the appropriate adapter. Adjust the LEVEL knob to increase the output volume.

· Q: What should I do if the pedal malfunctions?

A: Check the power source, connections, and settings. If issues persist, refer to the troubleshooting section in the owner's manual or contact customer support for assistance.

Congratulations on your ownership of this effect pedal. Before using the pedal, please carefully read the manual, which offers important information concerning how to properly operate the unit.

OVERVIEW

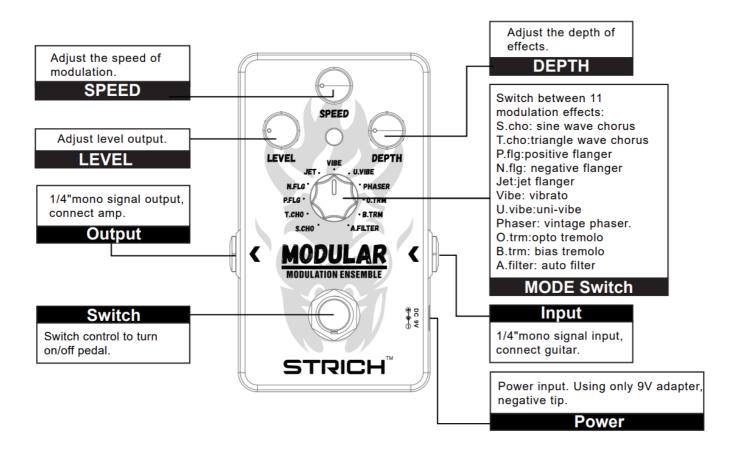

Precautions When Connecting

• To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.

- Some connection cables contain resistors. Do not use cables that incorporate resistors for connecting to this
 pedal. The use of such cables can cause the sound level to be extremely low, or impossible to hear. For
 information on cable specifications, contact the manufacturer of the cable.
- Raise the amp volume only after turning on the power to all connected devices.
- Once the connections have been completed, turn on the power to your various devices in the order specified.
 By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices. When powering up: Turn on the power to your guitar amp last. When powering down: Turn off the power to your guitar amp first.

Specifications

• Input Impedance: Min. 100k Ohm; Max. 350k Ohm

• Output Impedance: 300 Ohm

Recommended Load Impedance: 10 kohm
 Equivalent Input Noise: -90 dBu or less

• Power Supply: 9V AC adapter

• Current Draw: 10mA

• **Dimension:** 115 mm (length) x73mm (width) x48mm (thickness)

• Weight: 270g

· Accessory: Owner's Manual

Documents / Resources



STRICH MODULAR 11 Mode Modulation Pedal [pdf] User Manual

MODULAR 11 Mode Modulation Pedal, MODULAR 11, Mode Modulation Pedal, Modulation Pedal, Pedal

References

User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.