



StrikeMaster Lithium 24v Auger User Guide

[Home](#) » [StrikeMaster](#) » StrikeMaster Lithium 24v Auger User Guide 

Contents

- [1 StrikeMaster Lithium 24v Auger](#)
- [2 ASSEMBLY](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)



StrikeMaster Lithium 24v Auger



ASSEMBLY



1. Remove all Lithium 24v contents from the carton: Powerhead (A), Battery Charging Base (B), Battery (C) and Lite-Flite LazerTM drill unit (D), (Image 1).
2. Connect Powerhead to Lite-Flite LazerTM drill unit, using collar bolt and hex wrench.
 1. a. Collar bolt is located inside collar bolt threads at top of the spiral (Image 2).
 2. b. Two Hex wrenches are included: One is stored on the bottom of the Powerhead. The other is taped to the mid-point of the spiral. Remove hex wrench from spiral before operating.
3. Plug in Battery Charging Base then slide Battery onto it using the channels on both sides as a guide. Press down until you hear it click in place. Leave Battery on Battery Charging Base until fully charged (Image 3).

NOTE: Battery is not fully charged when first removed from box.
4. When Battery Charging Base indicator shows solid green, your Battery is fully charged (Image 4).



5. Once Battery is fully charged remove from Battery Charging Base. Slide battery onto Powerhead using the channels on both sides as a guide, pressing down until you hear it click in place (Image 5).
6. Remove blade cover from bottom of Lite-Flite LazerTM drill unit and stow in a safe place (Image 6).



Your StrikeMaster Lithium 24v is ready for use.

FORWARD/ REVERSE

Your new StrikeMaster Lithium 24v has a forward and reverse capability. The Forward/ Reverse position needs to be selected when the powerhead is at rest. If switched during use, the powerhead drill unit will maintain its current direction until it comes to a complete stop.

Example: While drilling a hole in the forward position if switch is accidentally engaged into reverse during drill cycle, the spiral will continue in forward until the power buttons are released and the spiral comes to a complete stop

REGISTER YOUR PRODUCT ONLINE TO ACTIVATE YOUR WARRANTY

www.strikemaster.com/warranty

CAUTION: Check all fasteners before each use. Cutting blades are extremely sharp, keep away from body. Do not expose auger to extreme rain or wet conditions.

MANUFACTURERS WARNING

24v power head is meant to be used with the 6" & 8" Lite-Flite Lazer™ drill units only. Use with any other drill unit is prohibited and will void the manufacturers warranty.

EXTREME COLD WEATHER OPERATION

The Lithium-Ion Battery can be used in temperatures down to (-4°F/ -20°C). If your Battery is not performing correctly, put the Battery on the Powerhead, free spin auger out and above ice for 30 to 90 seconds depending on how cold the unit is (the colder the unit, the more time to warm up). After this sequence the Battery will warm up and begin operating normally.

NOTE: Always store Battery in a warm location.

Documents / Resources



[StrikeMaster Lithium 24v Auger](#) [pdf] User Guide

Lithium 24v, Auger, Lithium 24v Auger