



Strobos STBS HSP Generator User Manual


[Home](#) » [Strobos](#) » Strobos STBS HSP Generator User Manual 

Contents

- [1 Strobos STBS HSP Generator](#)
- [2 List of items included in the set:](#)
- [3 Installation instructions](#)
 - [3.1 Connection diagram of the amplifier](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



Strobos STBS HSP Generator

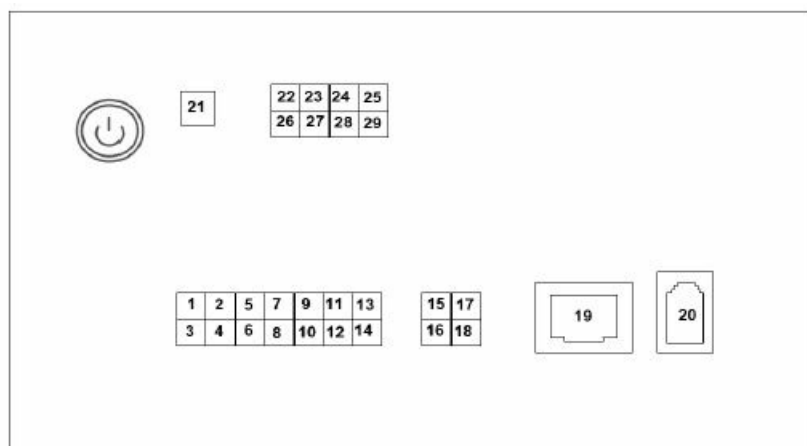

- 1.2. Power supply
- 3.4. Ground
- 5.6. First Speaker
- 7.8. Second Speaker
- 9.10. Clacson
- 11.12. AUX
- 13.14. Dusk sensor
- 15.(+) signal for change daytime running lamps to dipped beam
- 16. unused
- 17.18. Second additional button (HORN - 1sec press) (3s press- turn on lights and sound)
- 19. Switch control
- 20. Additional button
- 21. (+) power supply
- 22. Main blue light channel
- 23. Additional blue light channel
- 24. Red light channel
- 25. Second light channel (for dual-color lamps)
- 26. First additional lights channel
- 27. Second additional lights channel
- 28. Third additional lights channel
- 29. Day/night mode (only for class 2 lamps)

1. Siren HSP has 5 high-current outputs.

The high-current outputs should be connected with warning lamps and additional lighting. For proper installation, connect the red (+) cable from the lightbar (external warning light) to the siren, while the black (-) cable from the lightbar should be connected to the battery or vehicle installation.

2. Only 12V can be connected to the 12V device. Only 24V lighting should be connected to the device at 24V.

Connecting devices with incorrect working voltage can lead to damage to the device or electrical installation in the vehicle.

3. The speaker should be connected to two brown wires coming out of the cube (there is no plus and minus in the speaker, you only need to close the circuit).

4. Manipulator – The remote control should be mounted on the vehicle in a place easily accessible to the driver and passenger. The remote control holder should be screwed to the upholstery. It must not be exposed to moisture or water.


5. White cables (2 pcs) please connect to horn in vehicle.

Remote control manual

The function of quick activation of the signaling:

1. First press – sound signal + lights
2. Second press – blue lights only

3. Disabling privileged signaling

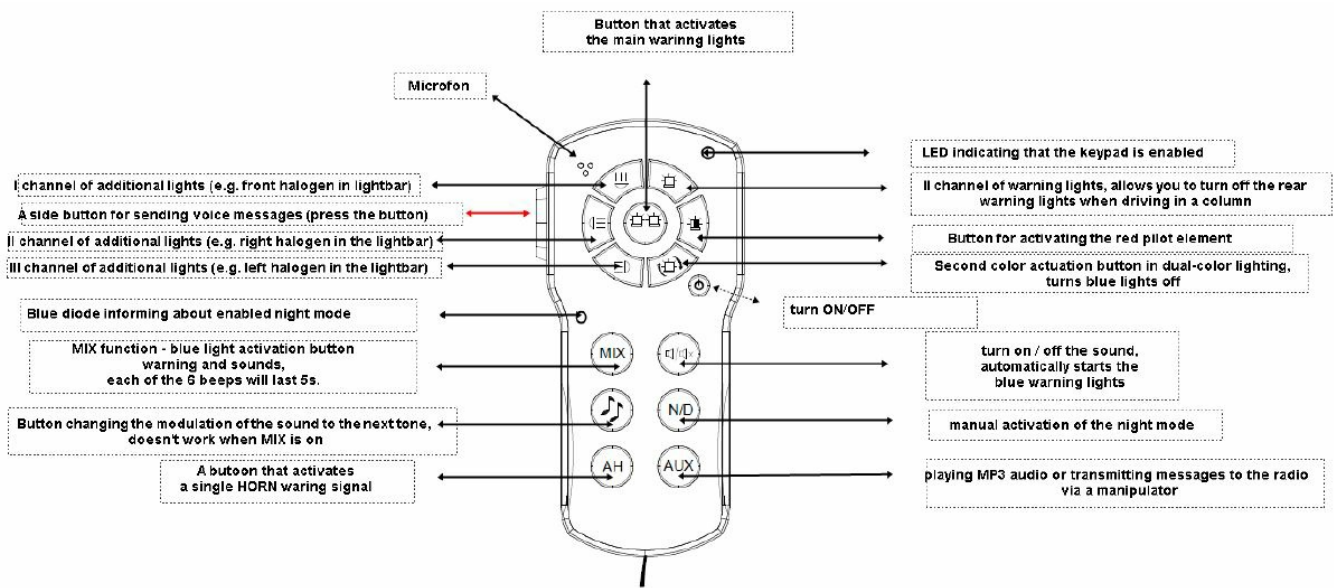

Documents / Resources

	Strobo STBS HSP Generator [pdf] User Manual STBS HSP Generator, STBS HSP, Generator
--	--