



Studebaker SB2135BT Portable Stereo CD Player with Bluetooth AM-FM Stereo Radio and Cassette Player-Recorder Owner's Manual

[Home](#) » [Studebaker](#) » Studebaker SB2135BT Portable Stereo CD Player with Bluetooth AM-FM Stereo Radio and Cassette Player-Recorder Owner's Manual 

Contents

- [1 Studebaker SB2135BT Portable Stereo CD Player with Bluetooth AM-FM Stereo Radio and Cassette Player-Recorder WARNING](#)
- [2 IMPORTANT SAFETY INSTRUCTIONS](#)
- [3 SAVE THESE INSTRUCTIONS](#)
- [4 DEAR STUDEBAKER CUSTOMER](#)
- [5 LOCATION OF CONTROLS](#)
- [6 POWER SOURCE](#)
- [7 OPERATIONS](#)
- [8 CARE AND MAINTENANCE](#)
- [9 SPECIFICATION](#)
- [10 TROUBLE SHOOTING](#)
- [11 1 YEAR LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)
- [13 Related Posts](#)



Studebaker SB2135BT Portable Stereo CD Player with Bluetooth AM-FM Stereo Radio and Cassette Player-Recorder



WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product is enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONEL.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The Caution Marking is located at the back enclosure of the apparatus.

The Rating plate is located at the back enclosure of the apparatus.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



13. Unplug this apparatus during lightning storms or when unused for a long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This appliance shall not be exposed to dripping or splashing water and that no object filled with liquids such as vases shall be placed on the apparatus.
16. Do not overload wall outlet. Use only power source as indicated.
17. Use replacement part as specified by the manufacturer.
18. Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.
19. **Power Sources** – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.
20. **Object and Liquid Entry** – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
21. **Damage Requiring Service** – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - a) When the power-supply cord or plug is damaged,
 - b) If liquid has been spilled, or objects have fallen into the product,
 - c) If the product has been exposed to rain or water,
 - d) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
 - e) If the product has been dropped or damaged in any way, and
 - f) When the product exhibits a distinct change in performance – this indicates a need for service.
22. Mains plug is used as disconnect device and it should remain readily operable during intended use. In order to disconnect the apparatus from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
23. The (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
24. Excessive sound pressure from earphones and headphone can cause hearing loss.
25. Minimum distances of 10 cm around the apparatus for sufficient ventilation.

 
26. The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
27. No naked flame sources, such as lighted candles, should be placed on the apparatus.
28. The use of apparatus in moderate climates.
29. Attention should be drawn to the environmental aspects of battery disposal.
30. **CAUTION:** Risk of explosion if the battery is replaced by an incorrect type.
31. High or low extreme temperatures that a battery cannot be subjected to during use, storage or transportation and low air pressure at high altitude.
32. Replacement of a battery with an incorrect type that can defeat a safeguard.
33. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
34. Leaving battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



CAUTION:

TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT. FULLY INSERT THE PLUG TO MAIN POWER SOCKET.

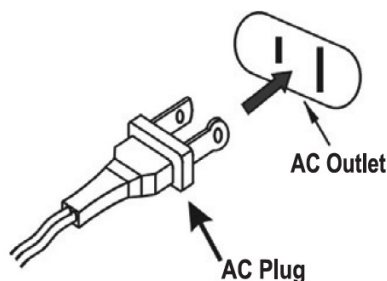

SAVE THESE INSTRUCTIONS

COMPLIANCE WITH FCC REGULATIONS

FCC ID: 2ACM4RKD3799BT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.

 
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this

equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

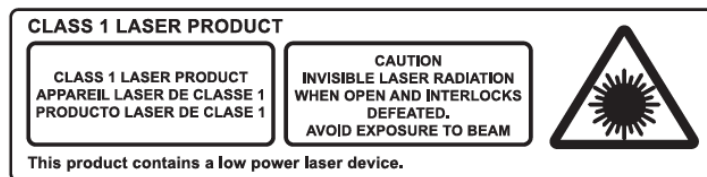

Follow the advice below for safe operations.

ON PROTECTION AGAINST LASER ENERGY EXPOSURE

- As the laser beam used in this compact disc player is harmful to the eyes, do not attempt to disassemble the casing.
- Stop operation immediately if any liquid or solid object should fall into the cabinet.
- Do not touch the lens or poke at it. If you do, you may damage the lens and the player may not operate properly.
- Do not put anything in the safety slot. If you do, the laser diode will be ON when the CD door is still open.
- If the unit is not to be used for a long period of time, make sure that all power sources are disconnected from the unit. Remove all batteries from the battery compartment.
- This unit employs a laser. The use of controls or adjustment or performance of procedures other than those specified here may result in exposure to hazardous radiation. Should any trouble occur, remove the power source and refer servicing to qualified personnel.

PROTECT YOUR FURNITURE

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil-based furniture polishes, wood preservatives, or cleaning sprays may cause the 'feet' to soften and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement centers everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the product on fine wooden furniture.

DEAR STUDEBAKER CUSTOMER

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your

equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion and, most importantly, without affecting your sensitive hearing. Sound can be deceiving. Over time your hearing “comfort level” adapts to higher volumes of sound. So what sounds “normal” can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

Once you have established a comfortable sound level:

- Set the dial and leave it there.
- Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

 
We Want You Listening For a Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association’s Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise.

Customer’s Record:

The serial number of this product is found on its bottom. You should note the serial number of this unit in the space provided as a permanent record of your purchase to aid in identification in the event of theft or loss.

LOCATION OF CONTROLS

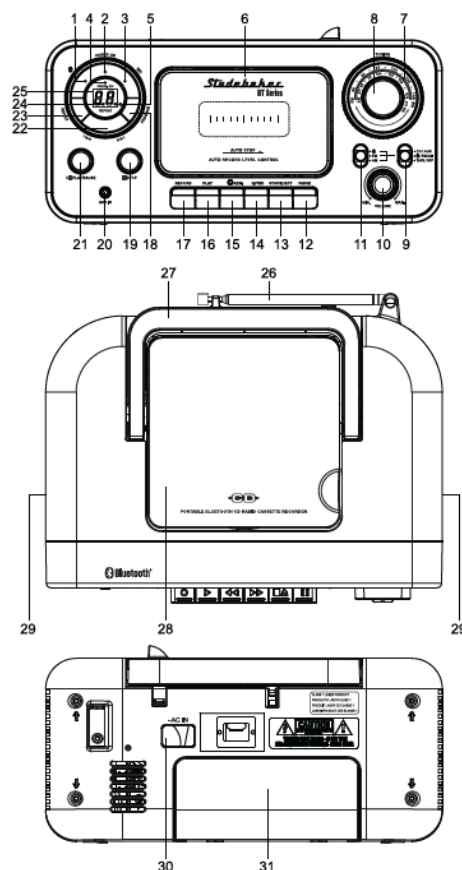

POWER SOURCE

1	BLUETOOTH INDICATOR	17	RECORD BUTTON
2	POWER ON INDICATOR	18	PROGRAM BUTTON
3	MICROPHONE	19	STOP BUTTON
4	PROGRAM INDICATOR	20	AUX IN JACK
5	PLAY/PAUSE INDICATOR	21	PLAY/PAUSE BUTTON
6	CASSETTE HOLDER	22	SKIP/BUTTONS
7	DIAL POINTER	23	REPEAT BUTTON
8	TUNING KNOB	24	REPEAT INDICATOR
9	FUNCTION SELECTOR	25	LED DISPLAY
10	VOLUME CONTROL	26	FM TELESCOPIC ANTENNA
11	FM / AM SELECTOR	27	CARRYING HANDLE
12	PAUSE BUTTON	28	CD COMPARTMENT
13	STOP/ EJECT _ BUTTON	29	SPEAKERS
14	F.FWD BUTTON	30	AC SOCKET
15	REW BUTTON	31	BATTERY COMPARTMENT
16	PLAY BUTTON		

The SB2135BT operates using standard AC 120V 60Hz household power or 6 x “C” size (UM-2) batteries (Not included).

BATTERY OPERATION

NOTES:

- Disconnect the AC power cord.
 - For best performance and longer operating time, we recommend the use of alkaline batteries.
1. Remove the Battery Door on the bottom/back of the unit.
 2. Following the polarity diagram shown in the BATTERY COMPARTMENT (#31) to insert 6 x “C” size (UM-2) batteries and close the door.

BATTERY WARNING

1. Be sure that the batteries are installed correctly. Wrong polarity may damage the unit.
2. Use only the size and type of batteries specified.
3. Only use good quality/name brand batteries.
4. Do not mix old and new batteries.
5. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
6. If the unit is not going to be used for an extended period of time, please remove the batteries. Using old, leaking or cheaply made batteries can cause damage to the unit and may void the warranty.
7. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer’s directions).
8. Do not dispose of batteries in fire, batteries may leak or explode.

AC POWER CONNECTION

1. Insert one end of power cord to the AC SOCKET (#30) at the back of the SB2135BT.
2. Connect the power cord to AC power source.
3. When the unit is operated from AC power source, the internal battery source will automatically be disconnected.

IMPORTANT NOTICE:

When the SB2135BT is sitting idle, and no input signals are being received for 12 hours, the unit will automatically switch to Standby mode. Turn the unit off before turn it on again.

OPERATIONS

RADIO OPERATION

1. Turn on the radio by setting the FUNCTION SELECTOR (#9) to / FM / AM SELECTOR
2. Use the / FM / AM SELECTOR (#11) to select the AM or FM band.
3. Use the TUNING KNOB (#8) to tune to your desired radio station.
4. Adjust the VOLUME CONTROL (#10) to obtain the desired sound level.
5. To turn off the radio, set the FUNCTION SELECTOR (#9) to TAPE/OFF position.

TIPS FOR BEST RECEPTION

AM: The AM antenna is located inside the cabinet of the unit. If AM reception is weak, change the position of

unit until the internal antenna picks up the strongest signal.

FM: To insure maximum FM tuner reception, fully extend the FM telescopic antenna and rotate it for the best FM radio reception.

CD OPERATION

PLEASE READ THIS IMPORTANT INFORMATION:

CD mechanisms used in devices like this are designed to fully read all commercial CDs. They will also read self-compiled CD-R/CD-RW discs but it may take up to 10 seconds for playback to start. If playback does not start, it is likely due to the quality of the CD-R/RW disc and/or the compatibility of the CD compilation software.

Manufacturer is not responsible for the playback quality of CD-R/RW discs.

Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

1. Turn on the unit by setting the FUNCTION SELECTOR (#9) to CD/AUX position, the POWER ON INDICATOR (#2) will light up.
2. Open the CD door and insert your CD (label up) into the CD COMPARTMENT (#28). Then close the CD door, the total number of tracks will show on display.
3. Press PLAY/ PAUSE BUTTON (#21) to start playback. The current track number will show on display. The PLAY/ PAUSE INDICATOR (#5) will light up.

PLAY/ PAUSE

To temporarily stop playing, press PLAY/ PAUSE BUTTON (#21). The PLAY/ PAUSE INDICATOR (#5) will flash. To resume play, press this button again.

STOP

Press the STOP BUTTON (#19) when playback CD, the disc will cease to play. (Total number of tracks will show on LED DISPLAY (#25)).

SKIP AND SEARCH

You can choose to play your favorite track directly by taping the SKIP / BUTTONS (#22) repeatedly. The LED DISPLAY (#25) will indicate the correct track number selected.

To locate a particular section within a track, press and hold the SKIP / BUTTONS (#22) until the section is found.

REPEAT

To repeat a particular track currently playing, press the REPEAT BUTTON (#23) once. The REPEAT INDICATOR (#24) will flash.

To repeat all tracks, press the REPEAT BUTTON (#23) twice. The REPEAT INDICATOR (#24) will light up and stay lit.

To cancel the repeat function, press REPEAT BUTTON (#23) again. The REPEAT INDICATOR (#24) will turn off.

PROGRAM

1. In stop mode, press PROGRAM BUTTON (#18). "01" will flash on the LED DISPLAY (#25).
2. Press SKIP / BUTTONS (#22) to select a desired track and press PROGRAM BUTTON (#18) to conform. The PROGRAM INDICATOR (#4) will flash in the course of programming.
3. Repeat above steps to program up to 20 tracks.
4. Press PLAY/ PAUSE BUTTON (#21) to start program playback. The PROGRAM INDICATOR (#4) will light up and stay lit.
5. To cancel program playback, press STOP BUTTON (#19) twice. The PROGRAM INDICATOR (#4) will turn off.

Notes:

If you encounter CD playback problem, either of the following ways may help.

- Turn off the unit. Disconnect the AC power cord from AC SOCKET and reconnect it again.
- Clean your CD disc.

AUX OPERATION

This unit provides an AUX IN JACK (#20) for connecting external audio devices like MP3 players, CD players, smart phones and iPods (except iPod shuffle 3rd generation) to listen to your external source through the speakers of this system.

1. You need an audio cable (not included) with one 3.5 mm stereo plug on each end of the cable.
2. Plug one end of the cable into the AUX IN JACK (#20) located on the left-hand side of the unit and the other end of the cable into the Line-out Jack or Headphone Jack of your external audio device.
3. Turn on the external audio device.
4. Turn on the unit by setting the FUNCTION SELECTOR (#9) to CD/AUX position. The volume level can now be controlled through the VOLUME CONTROL (#10) of the unit. Operate all other functions on the auxiliary device as usual.
5. Set the FUNCTION SELECTOR (#9) to TAPE/OFF position to turn off the unit.

Notes:

- If you connected the Line-out Jack of your external device then you only need to adjust the volume control of this system. If you connected the Headphone Jack of your external device then you may need to adjust both the volume control of your external device and the volume control of this system to find the most desirable volume setting.
- Remove the audio cable from AUX IN JACK (#20) when you finish listening. Don't forget to switch off the power on your external device as well.

BLUETOOTH OPERATION

Pairing a Bluetooth enabled device with the SB2135BT.

1. Turn on the unit by setting the FUNCTION SELECTOR (#9) to / FM / AM position.
2. Use the / FM / AM SELECTOR (#11) to select
3. The BLUETOOTH INDICATOR (#1) will turn on and flash.
4. Turn on the Bluetooth function of your device and enable the search or scan function to find the SB2135BT.
5. Select SB2135BT from the device list when it appears on your device screen. If required, enter the pass code "0000" to pair (link) SB2135BT with your device.
6. If you are pairing (linking) your computer to the speaker using Bluetooth, you may need to set the SB2135BT as your computer's default sound device.
7. After pairing SB2135BT with your Bluetooth device successfully, the BLUETOOTH INDICATOR (#1) will light steadily.
8. If you want to change the SB2135BT to pair with another Bluetooth device, press and hold the PLAY/ PAUSE BUTTON (#21) until the BLUETOOTH INDICATOR (#1) flashes.
9. Repeat steps 4-5 above.

Note: The SB2135BT may automatically reconnect to a previously linked device that is in range.

Now you can play music from your Bluetooth device wirelessly to SB2135BT.

1. Selecting your favorite song, press Play/Pause Button on your Bluetooth device to play or pause the Bluetooth device playback.
Slowly adjust both the volume controls of your SB2135BT and your Bluetooth device until you reach a comfortable listening level.
2. Refer to the manual of your cell phone, tablet PC, computer or other Bluetooth enabled devices for Bluetooth operation since it may vary from model to model.
3. If your Bluetooth enabled device does not support A2DP profile, it will not play the music through the speaker, even if paired (linked).
4. Remember to turn off the SB2135BT when you have finished listening.
5. Don't forget to switch off the power of your Bluetooth device as well.

TAPE OPERATION

Playing a tape

1. Set the FUNCTION SELECTOR (#9) to TAPE/OFF position.
2. Press STOP/ EJECT BUTTON (#13) to open the CASSETTE HOLDER (#6).
3. Insert a tape and close the CASSETTE HOLDER (#6).
4. Press PLAY BUTTON (#16) to start playback.
5. Adjust the VOLUME CONTROL (#10) to obtain the desired sound level.
6. To pause playback, press PAUSE BUTTON (#12). Press the PAUSE BUTTON (#12) again to resume playback.
7. To stop playback, press STOP/ EJECT BUTTON (#13).
8. To search backward or forward, press REW. BUTTON or F.FWD BUTTON (#15 or #14) and press PLAY BUTTON (#16) or STOP/ EJECT BUTTON (#13) at the point you want stop.

Recording from radio/ auxiliary source

1. Set the FUNCTION SELECTOR (#9) to TAPE/OFF position.
2. Press STOP/EJECT BUTTON (#13) to open the CASSETTE HOLDER (#6).
3. Insert a tape and close the CASSETTE HOLDER (#6).
4. Select the desired sound source with the FUNCTION SELECTOR (#9).
In radio mode, tune to your desired radio station.
In AUX mode, start playback from your auxiliary source.
5. Press RECORD BUTTON (#17). PLAY BUTTON (#16) is depressed automatically.
6. To pause recording, press PAUSE BUTTON (#12). Press the PAUSE BUTTON (#12) again to resume recording.
7. To stop recording, press STOP/EJECT BUTTON (#13).
8. To listen to your recording, set the FUNCTION SELECTOR (#9) to TAPE /OFF position. Press REWIND BUTTON (#15) to rewind the tape to search your recording, then press PLAY BUTTON (#16) to listen.

Recording from the built-in microphone

1. Set the FUNCTION SELECTOR (#9) to TAPE/OFF position.
2. Press STOP/EJECT BUTTON (#13) to open the CASSETTE HOLDER (#6).
3. Insert a tape and close the CASSETTE HOLDER (#6).
4. Press RECORD BUTTON (#17). PLAY BUTTON (#16) is depressed automatically.
5. To pause recording, press PAUSE BUTTON (#12). Press the button again to resume recording.
6. To stop recording, press STOP/EJECT BUTTON (#13).
7. To listen to your recording, press REW. button (#15) to rewind the tape to search your recording, then press PLAY BUTTON (#16) to listen.

Note: The Built-in MICROPHONE (#3) is located on the front of the unit. Place the recorder near the sound source to be recorded.

CARE AND MAINTENANCE

1. Do not subject the unit to excessive force, shock, dust or extreme temperature.
2. Do not tamper the internal components of the unit.
3. Clean your unit with a dry cloth. Solvent or detergent should never be used.
4. Avoid leaving your unit in direct sunlight or in hot, humid or dusty places.
5. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
6. If drop-outs or interruptions occur in the music during CD play, or if the CD fails to play at all, its bottom surface may require cleaning. Before playing, wipe the disc from the center outwards with a good soft cleaning cloth



ABOUT CASSETTE TAPES

Whenever you record on a cassette any previously recorded material is erased as the new material is recorded. To prevent you from accidentally erasing material which you wish to save, blank cassettes are equipped with erase prevention tabs for each side of the tape. If the erase prevention tab for side A is removed, you cannot accidentally record on side A. The Record key cannot be depressed if the erase prevention tab on the cassette has been removed. To prevent accidental erasing on side A of a cassette use a small screw driver or similar tool to break off the erase prevention tab for side A. This prevents the record key from locking



If later you do wish to record on side A of the cassette, cover the tab opening with a piece of cellophane tape. This will allow the Record to function again.

CASSETTE CARE

Two common causes of trouble experienced when using cassettes are:

1. Tape Jamming – Leading to uneven speed in playback, and

2. Tape Tangling – Where the tape wraps itself around its parts of the mechanism.

To reduce the likelihood of these problems occurring, the following precautions should be observed:

- Check that there are no loose layers of tape visible through the cassette center window **(see Fig. 1)**. Take up any loose layers, using a pencil or hexagonal barreled ballpoint pen, before inserting the cassette into the machine **(see Fig.2)**

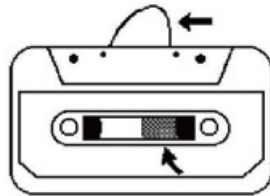 


Fig.1

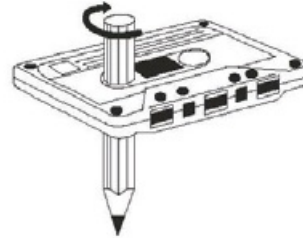 



Fig.2

- If the cassette feels tight while performing operation shown **(see Fig.2)**, the tape maybe jamming due to ridges formed in the winding of the tape (visible through the center window). These may be removed, in most cases, by fast winding of the cassette from one end to the other and back again.
- Use only well-known brands of tape. Avoid use of C-120 cassettes.

Furthermore, do not expose cassettes to direct sunlight, dust or oil, and do not touch the tape surfaces.

HEAD CLEANING

 The tape heads, pinch roller and capstan require periodic cleaning. This removes particles of the metal oxide coating that wear off the tape and accumulate on these parts and impair performance. Switch off the power, press the STOP/EJECT BUTTON (#13) to open the cassette door, and press the PLAY BUTTON (#16). Clean the tape heads, pinch roller and capstan with a soft cloth or cotton pad dampened in isopropyl alcohol or special tape head cleaner

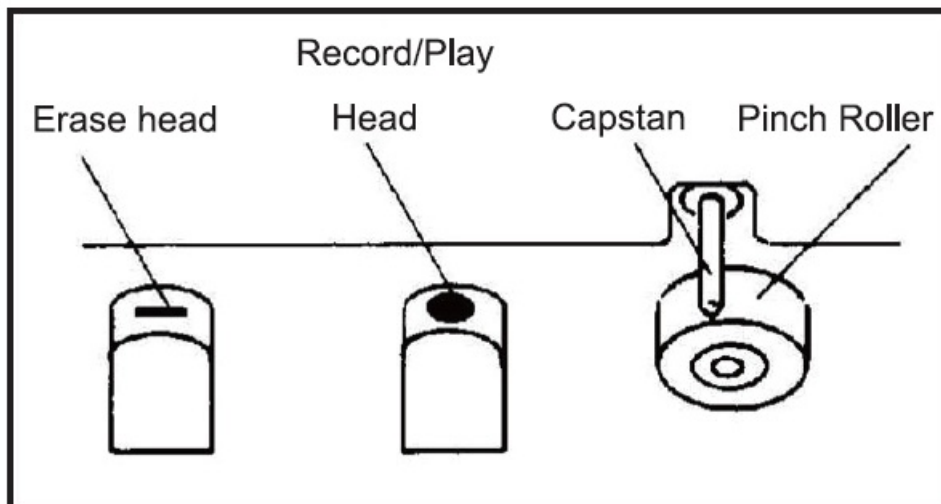

1. Avoid operating your unit under direct sunlight or in hot, humid or dusty places.
2. Keep your unit away from heating appliances and sources of electrical noise such as fluorescent lamps or motors.
3. For better Display clarity, avoid operating the unit under direct sunlight or in strong room illumination.
4. Unplug the unit from the electrical power outlet immediately in case of malfunction.

SPECIFICATION

POWER SUPPLY: AC 120V 60Hz, 14 W
DC 6 x 1.5V type R14/ UM-2/ “C” size batteries (not included)
FREQUENCY RANGE: FM 88 – 108 MHz
AM 520 – 1710 kHz
BLUETOOTH: RF Output Power: 4 dBm
Bluetooth: 2.402-2.48GHz

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Spectra Merchandising Intl, Inc. is under license. Other trademarks and trade names are those of their respective owners.

TROUBLE SHOOTING

Symptom	Possible Cause	Solution
Noise or sound distorted on AM or FM broadcast.	<ul style="list-style-type: none"> – Station not tuned properly for AM or FM. – FM: Telescopic antenna is not extended. – AM: The bar antenna is not positioned correctly. 	<ul style="list-style-type: none"> – Retune the AM or FM broadcast station. – Fully extend the FM telescopic antenna. – Reposition the unit until the best reception is obtained.
AM or FM no sound.	<ul style="list-style-type: none"> – Unit not set to AM or FM band. – Volume at minimum. 	<ul style="list-style-type: none"> – Set the / FM / AM SELECTOR to AM or FM position. – Increase Volume.
CD player will not play.	<ul style="list-style-type: none"> – Unit not in CD function mode. – CD is installed incorrectly. – If the CD is self-compiled, the media used may not be compatible with the player. 	<ul style="list-style-type: none"> – Select CD function mode. – Insert CD with label side up. – Use better quality blank media and retest.
CD skips while playing	<ul style="list-style-type: none"> – Disc is dirty or scratched. 	<ul style="list-style-type: none"> – Wipe CD with clean cloth or use another disc.
CD Intermittent sound	<ul style="list-style-type: none"> – Dirty or defective disc. – Dirty Pick Up lens. – Player is subject to excessive shock or vibration. 	<ul style="list-style-type: none"> – Clean or replace the defective disc. – Use a CD-lens cleaning disc to clean the lens. – Relocate the player away from shock or vibration.
Tape Playback muffled or fuzzy	<ul style="list-style-type: none"> – Tape head dirty. 	<ul style="list-style-type: none"> – Clean tape head using head cleaning cassette.

No sound on Bluetooth	<ul style="list-style-type: none"> – The unit is not linked with the cell phone. – Speaker placement out of range. – Volume set too low. 	<ul style="list-style-type: none"> – Go through “Bluetooth Operations” process to link the speakers. – Relocate the speaker within Bluetooth operating range. – Rotate the volume knob to turn the sound level up.
Sound is distorted on Bluetooth	<ul style="list-style-type: none"> – Volume level is set too high. – Sound source is distorted. 	<ul style="list-style-type: none"> – If the cell-phone original sound source quality is poor, distortion and noise are easily noticed with high-power speakers. – If you are using an external sound source like older generation of iPod, try reducing the output volume on the device itself.

If you experience difficulties in the use of this music system, please check the followings or call 1-800-777-5331 for Customer Service.

1 YEAR LIMITED WARRANTY AND SERVICE VALID IN THE U.S.A. ONLY

SPECTRA MERCHANDISING INTERNATIONAL, INC. warrants this unit to be free from defective materials or factory workmanship for a period of 1 year from the date of original customer purchase and provided the product is utilized within the U.S.A. This warranty is not assignable or transferable. Our obligation under this warranty is the repair or replacement of the defective unit or any part thereof, except batteries, when it is returned to the SPECTRA Service Department, accompanied by proof of the date of original consumer purchase, such as a duplicate copy of a sales receipt.

You must pay all shipping charges required to ship the product to SPECTRA for warranty service. If the product is repaired or replaced under warranty, the return charges will be at SPECTRA's expense. There are no other express warranties other than those stated herein.


This warranty is valid only in accordance with the conditions set forth below:

- The warranty applies to the SPECTRA product only while:
 - It remains in the possession of the original purchaser and proof of purchase is demonstrated.
 - It has not been subjected to accident, misuse, abuse, improper service, usage outside the descriptions and warnings covered within the user manual or non-SPECTRA approved modifications.
 - Claims are made within the warranty period.
- This warranty does not cover damage or equipment failure caused by electrical wiring not in compliance with electrical codes or SPECTRA user manual specifications, or failure to provide reasonable care and necessary maintenance as outlined in the user manual.
- Warranty of all SPECTRA products applies to residential use only and is void when products are used in nonresidential environment or installed outside the United States.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. TO OBTAIN SERVICE please remove all batteries (if any) and pack the unit carefully and send it freight prepaid to SPECTRA at the address shown below. IF THE UNIT IS RETURNED WITHIN THE WARRANTY PERIOD shown above, please include a proof of purchase (dated cash register receipt) so that we may establish your eligibility for warranty service and repair of the unit without cost. Also include a note with a description explaining how the unit is defective. A customer service representative may need to contact you regarding the status of your repair, so

please include your name, address, phone number and email address to expedite the process.
It is recommended that you contact SPECTRA first at 1-800-777-5331 or by email at custserv@spectraintl.com for updated information on the unit requiring service. In some cases, the model you have may be discontinued, and SPECTRA reserves the right to offer alternative options for repair or replacement.
SPECTRA MERCHANDISING INTERNATIONAL, INC.
4230 North Normandy Avenue,
Chicago, IL60634, USA. 1-800-777-5331
To register your product, visit the link on the website below to enter your information.
<http://www.spectraintl.com/wform.htm>

Documents / Resources

	<p>Studebaker SB2135BT Portable Stereo CD Player with Bluetooth AM-FM Stereo Radio and Cassette Player-Recorder [pdf] Owner's Manual</p> <p>SB2135BT Portable Stereo CD Player with Bluetooth AM-FM Stereo Radio and Cassette Player-Recorder, SB2135BT, Portable Stereo CD Player with Bluetooth AM-FM Stereo Radio and Cassette Player-Recorder, Cassette Player-Recorder, Recorder, Bluetooth AM-FM Stereo Radio, AM-FM Stereo Radio, Stereo Radio, Radio</p>
---	--

References

-  [Spectra Merchandising International, Inc. - Product Registration - United States](#)