



[Home](#) » [Style SELECTIONS](#) » **Style SELECTIONS FL18MBK Floor Lamp With Reading Light**
Owner's Manual 

Contents [[hide](#)]

- [1 Style SELECTIONS FL18MBK Floor Lamp With Reading Light](#)
- [2 TROUBLESHOOTING](#)
- [3 CARE AND MAINTENANCE](#)
- [4 PREPARATION](#)
- [5 SAFETY INFORMATION](#)
- [6 PACKAGE CONTENTS](#)
- [7 INSTALLATION OVERVIEW](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)



Style SELECTIONS FL18MBK Floor Lamp With Reading Light



Thank you for purchasing this STYLE SELECTIONS product. We've created these easy-to-follow instructions to ensure you spend your time enjoying the product instead of putting it together. But, if you need more information than what is provided here, please visit [Lowes.com](https://www.lowes.com), search the item number and refer to the Guides & Documents tab on the product's page.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Light does not come on initially or no longer comes on.	<ol style="list-style-type: none">1. Bulb(s) is/are burned out.2. Power is OFF./NO3. Lamp is not plugged in.	<ol style="list-style-type: none">1. Replace light bulb(s).2. Make sure power supply is ON.3. Plug lamp into outlet.

CARE AND MAINTENANCE

Clean only with a dry, soft cloth. Do NOT use abrasive cleaners.

WARRANTY

The distributor warrants all of its lighting fixtures against defects in materials and workmanship for one (1) year from the date of purchase. If within this period the product is found to be defective, take a copy of the bill of sale as a proof of purchase and the product in its original carton to the place of purchase. The distributor will, at its option, repair, replace or refund the purchase price to the consumer. All costs of installation and removal of the fixture is the responsibility of the consumer. This warranty does not cover fixtures becoming defective due to misuse, accidental damage or improper handling and/or installation and specifically excludes liability for direct, incidental or consequential damages, improper packaging of returned products and acts of God. As some states do not allow exclusions of limitations on an implied warranty, the above exclusion and limitation may not apply. This warranty gives you specific rights and you may also have other rights which may vary from state to state.

PREPARATION

Before beginning installation of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes

 
NO TOOLS REQUIRED

Tiempo estimado de ensamblaje: 15 minutos

NO SE NECESITAN HERRAMIENTAS

FEELING CONFIDENT? START YOUR NEXT PROJECT

Visit [lowes.com](https://www.lowes.com) for more information.

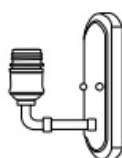


SAFETY INFORMATION

READ AND SAVE THESE INSTRUCTIONS.




WARNING

- This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. NEVER use with an extension cord unless the plug can be fully inserted. DO NOT alter the plug.
- Always unplug this product before replacing bulbs
- To reduce the risk of electric shock, DO NOT use the product if power cord is frayed or broken.
- DO NOT use bulbs having a wattage greater than the maximum value stated on the fixture. The use of bulbs with higher wattage than specified will increase temperatures and risk of fire.
- When replacing bulb, please allow bulb to cool down before touching.

 
PACKAGE CONTENTS

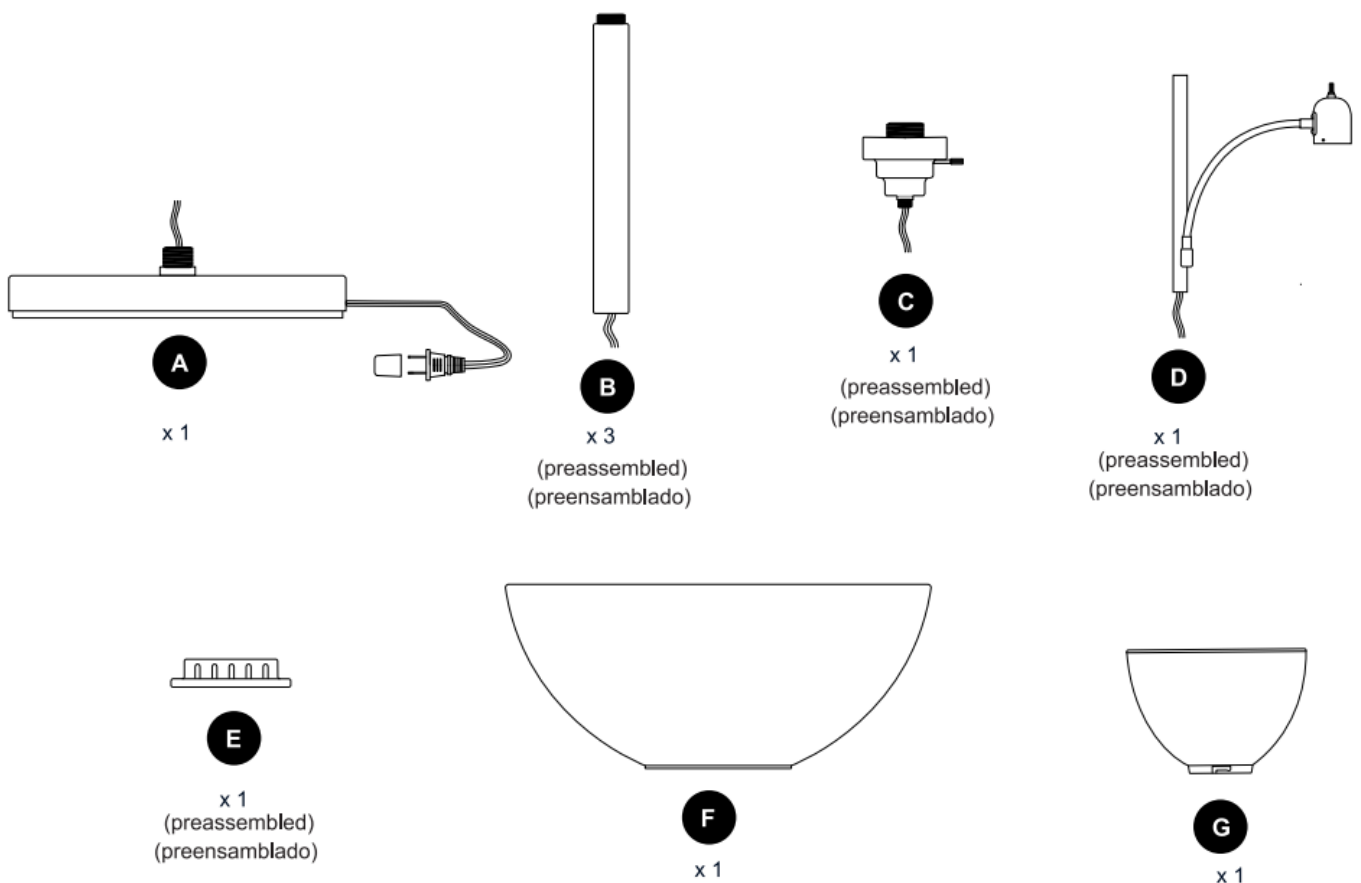

INSTALLATION OVERVIEW

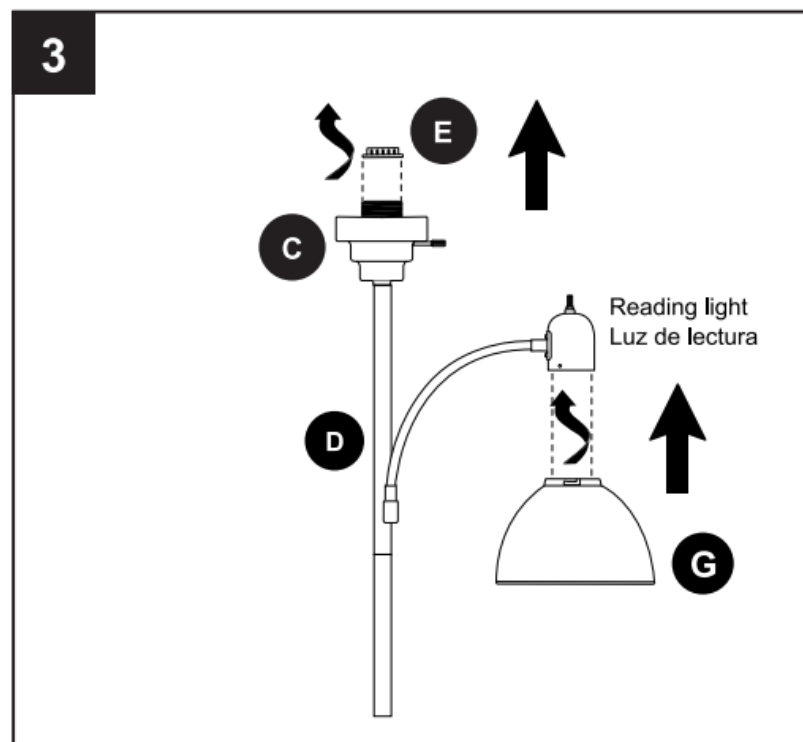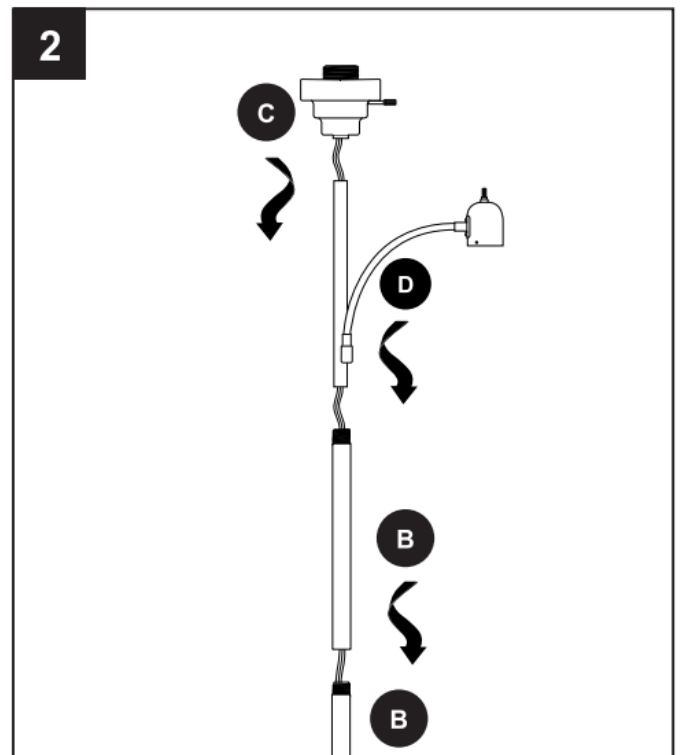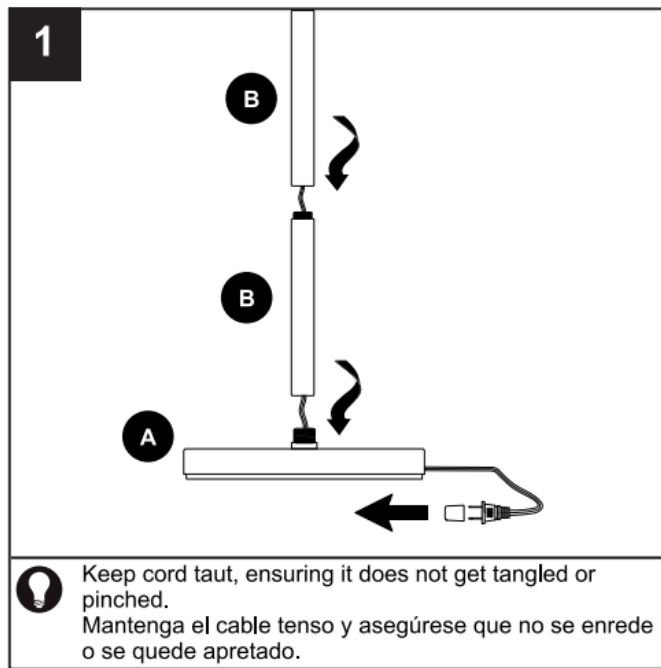   

 Align grooves on (G) with nodules on inside reading light and push up gently on (G).
Turn (G) to the RIGHT (clockwise) until (G) slides completely into place.

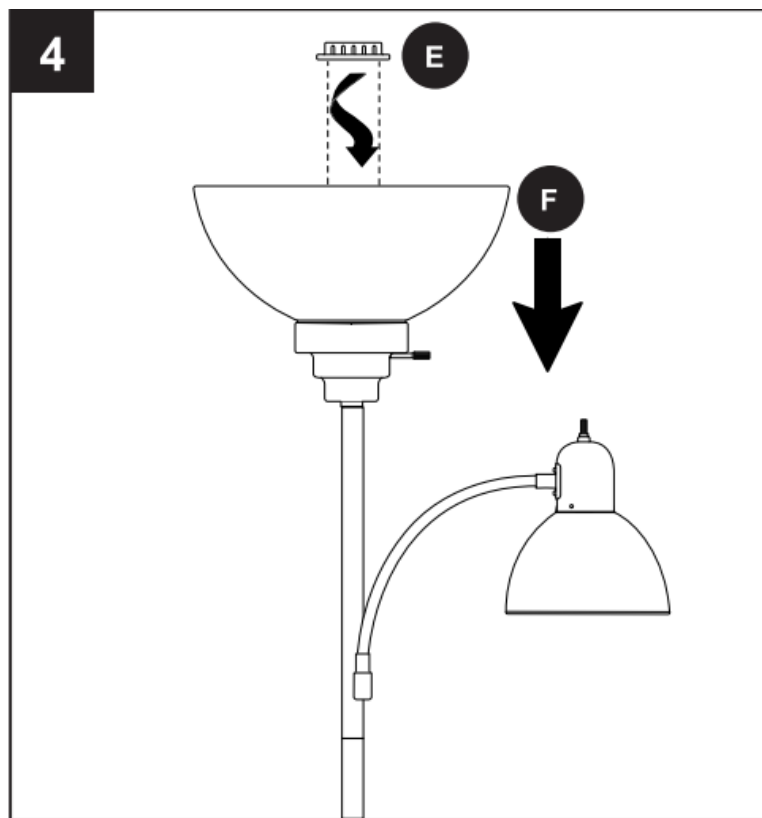


Do not overtighten (E) as (F) may crack or break.

Use 3-way, 100-watt max. incandescent bulb (not included) or CFL/LED equivalent.



Instale una bombilla incandescente de 3 vías y 100 vatios como máximo (no se incluye) o una bombilla CFL/LED equivalente.

Use switch on (C) to turn light to LO/MED/HI/OFF.

 Use el interruptor en (C) para poner la luz en LO/MED/HI/OFF (BAJO/MEDIO/ALTO/APAGADO).

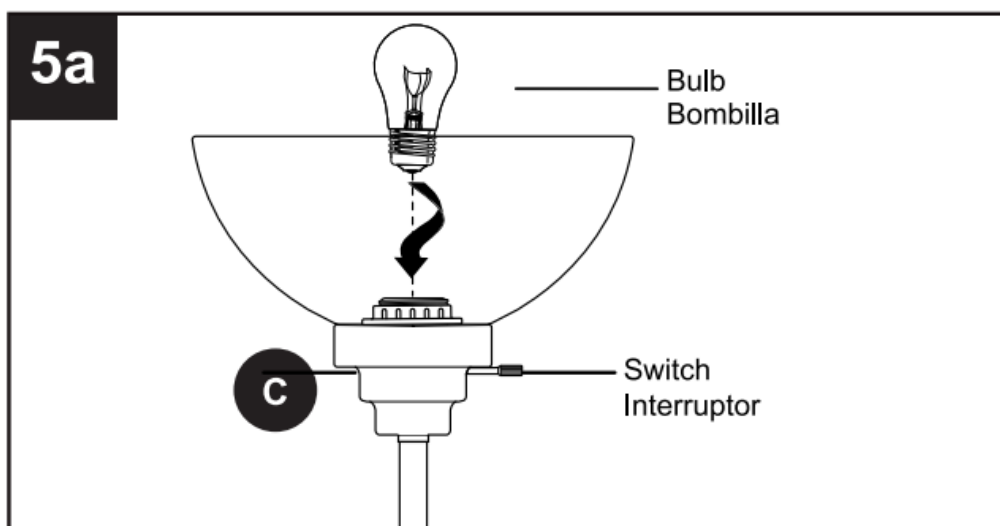

  Use a 40-watt max. incandescent bulb (not included) or CFL/LE equivalent.

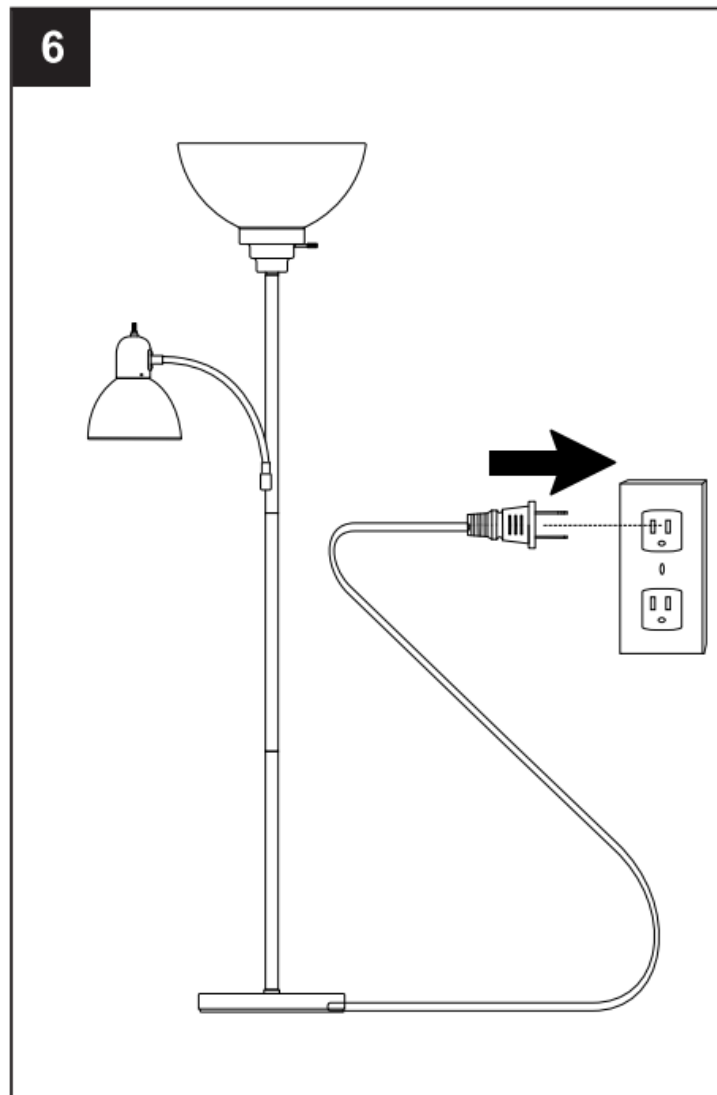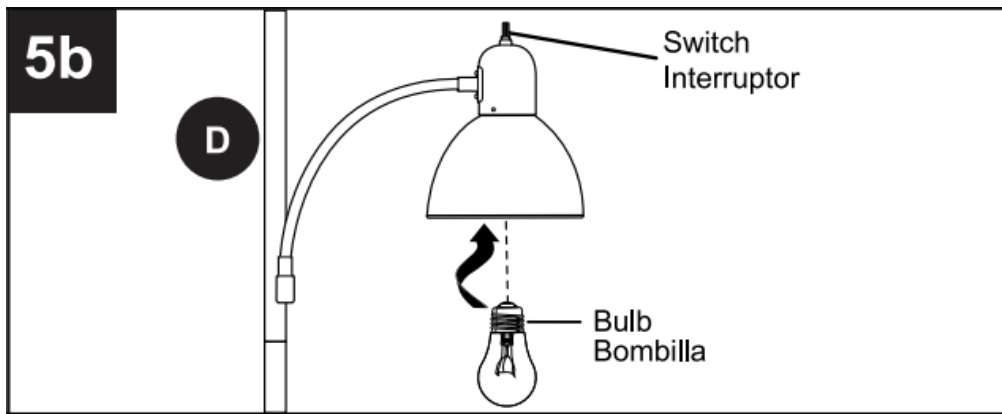


STYLE SELECTIONS and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

Questions, problems or missing parts?

Before returning contact us on: [866-888-8225](tel:866-888-8225), 8 a.m. – 8 p.m., EST, Monday – Sunday or ascsc@lowes.com.

 Documents / Resources

	Style SELECTIONS FL18MBK Floor Lamp With Reading Light [pdf] Owner's Manual M_5758825, 6597758, FL18MBK Floor Lamp With Reading Light, FL18MBK, Floor Lamp With Reading Light, Reading Light, Light
---	--

References

- [User Manual](#)

Style SELECTIONS
6597758, FL18MBK, FL18MBK Floor Lamp With Reading Light, Floor Lamp with Reading Light, Light, M_5758825, Reading Light, Style SELECTIONS

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.