

 


## Style SELECTIONS GCS00395A Swing with Canopy Instruction Manual

[Home](#) » [Style SELECTIONS](#) » Style SELECTIONS GCS00395A Swing with Canopy Instruction Manual



ITEM #4134962  
SWING WITH CANOPY  
COLUMPIO CON TOLDO  
MODEL #GCS00395A

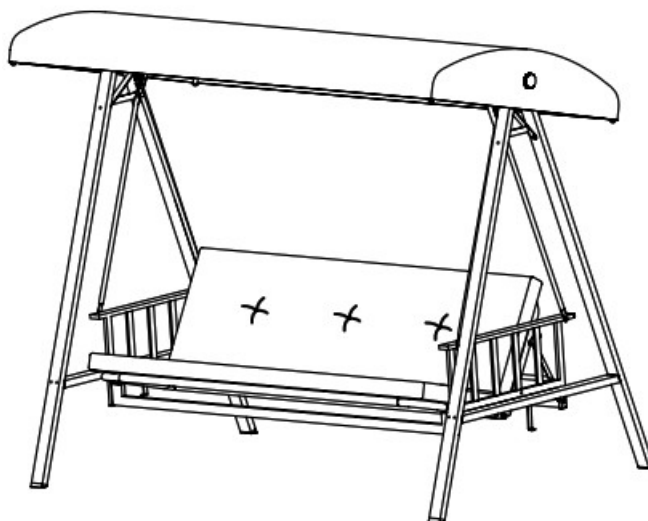

### QUICK REFERENCE GUIDE

STYLE SELECTIONS and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

## Contents [ [hide](#) ]

- 1 [GCS00395A Swing with Canopy](#)
- 2 [PREPARATION](#)
- 3 [FEELING CONFIDENT? START YOUR NEXT PROJECT](#)
- 4 [CARE AND MAINTENANCE](#)
- 5 [WARRANTY](#)
- 6 [SAFETY INFORMATION](#)
- 7 [PACKAGE CONTENTS](#)
- 8 [INSTALLATION OVERVIEW](#)
- 9 [Documents / Resources](#)
  - 9.1 [References](#)
- 10 [Related Posts](#)

## GCS00395A Swing with Canopy

Thank you for purchasing this Style Selections product. We've created these easy-to-follow instructions to ensure you spend your time enjoying the product instead of putting it together. But, if you need more information than what is provided here, please visit [Lowes.com](https://www.lowes.com), search the item number and refer to the Guides & Documents tab on the product's page.

If you have any questions or problems, please call our customer service department at 1-877-888-8225, 8 a.m. – 8 p.m., EST, Monday – Sunday.

You could also contact us at [partsplus@lowes.com](mailto:partsplus@lowes.com) or visit [www.lowespartsplus.com](https://www.lowespartsplus.com).

## PREPARATION

 
Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

**Estimated Assembly Time: 60 minutes**

## NO ADDITIONAL TOOLS REQUIRED

## FEELING CONFIDENT? START YOUR NEXT PROJECT

- Visit [www.lowes.com](https://www.lowes.com) for more information.

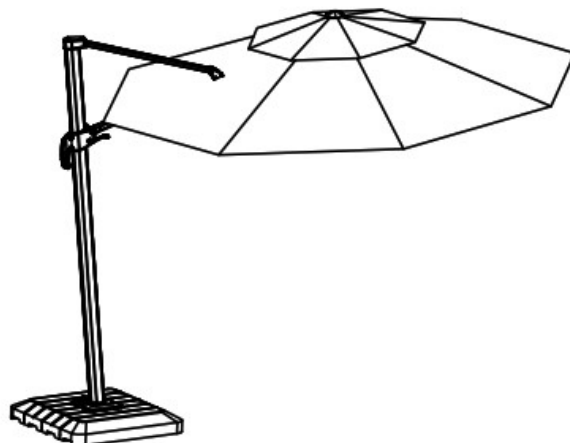

## CARE AND MAINTENANCE

- Before using, clean the product completely with a soft, dry towel.
- When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water, rinse and dry completely.
- Do not use strong detergents or abrasive cleaners.
- Store the product in a cool, dry location away from sunlight.

## WARRANTY

This warranty is extended to the original purchaser and applies to defects in materials and workmanship of your patio furniture provided your furniture is maintained with care and used only for personal, residential purposes. Frames are warranted to be free from defects in material or workmanship for a period of one (1) year. Fabric is covered for a period of one (1) year against defects in material or workmanship.



## SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product.

### **WARNING: MAXIMUM WEIGHT CAPACITY: 800 LBS PER SWING.**

Not intended for commercial use. Proper use of this chair is for three persons seating only. Do not stand on chair or use as a step ladder.

For optimum safety, use on even surface only! Improper use of this product or failure to use or assemble as directed may result in injury.

 
## WARNING

- Tighten each bolt firmly and properly. Do not completely tighten screws until all screws are started.
- Some parts may contain sharp edges. Wear protective gloves as necessary.
- Children under the age of 16 should not be engaged in the assembly, removal or disassembly of the product.
- Children under the age of 10 should be supervised by a competent adult while using this furniture.
- Please keep children out of the assembly area during assembly.
- This set is heavy, and may require two adults for safe assembly.
- Never use this product as a support. Do not shake, lean, or climb on the product at any time.

## CAUTION


- Do not overtighten any of the bolts as this may damage the threads.
- Repeated assembly can weaken the locking ability of the washers.
- Periodically check all bolted connections on the furniture to make sure they are tight and secure.
- Retain these instructions for future reference.
- Paint on this product might peel off if it is hit or used improperly.

## PACKAGE CONTENTS

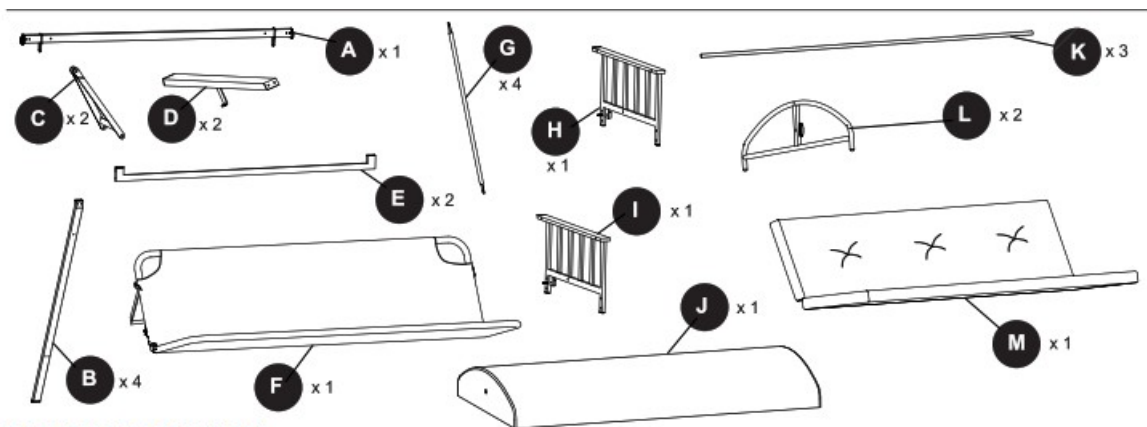


#### HARDWARE CONTENTS/

 
Note: Hardware not shown actual size.

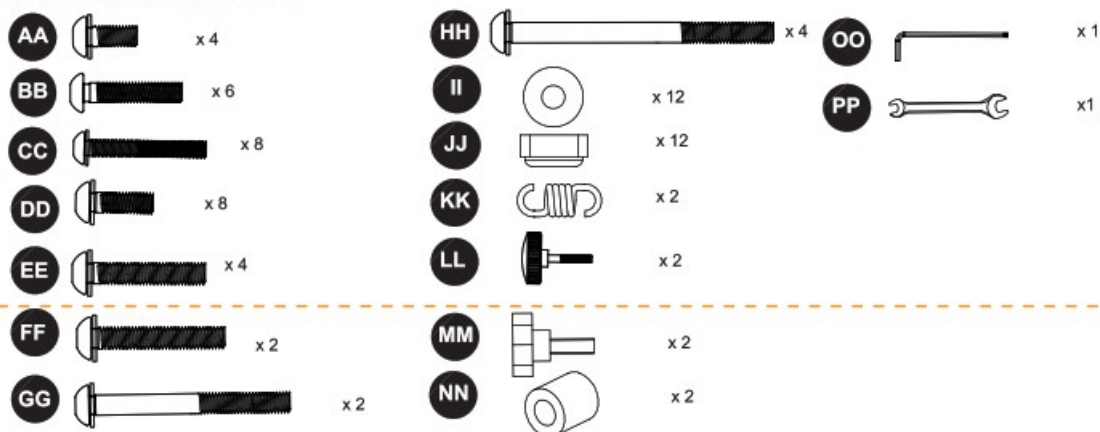


ASSEMBLE ON A SOFT SURFACE, SUCH AS A CARPET, TO AVOID SCRATCHING THE PRODUCT.

## INSTALLATION OVERVIEW

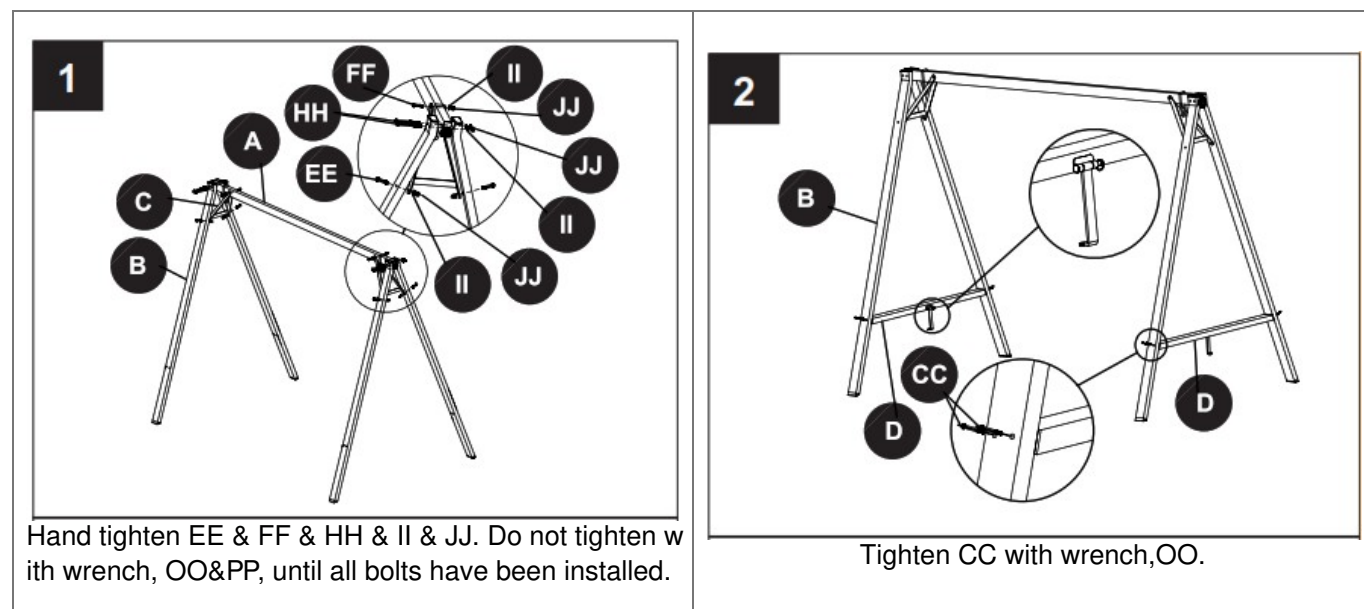 


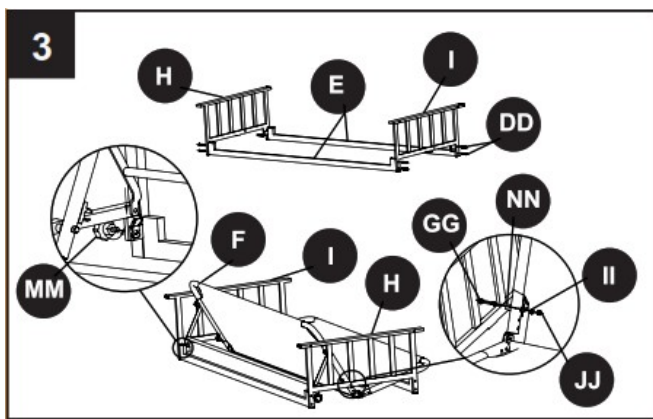 

 
Hand tighten DD & GG & II & JJ & NN. Do not tighten with wrench, OO & PP until all bolts have been installed.

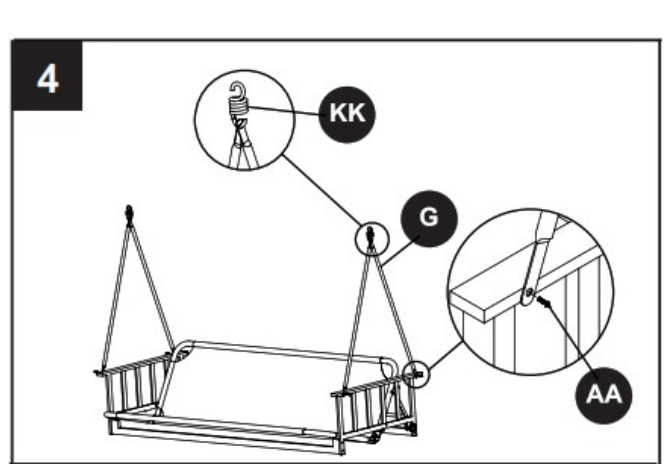


Tighten AA with wrench, OO.

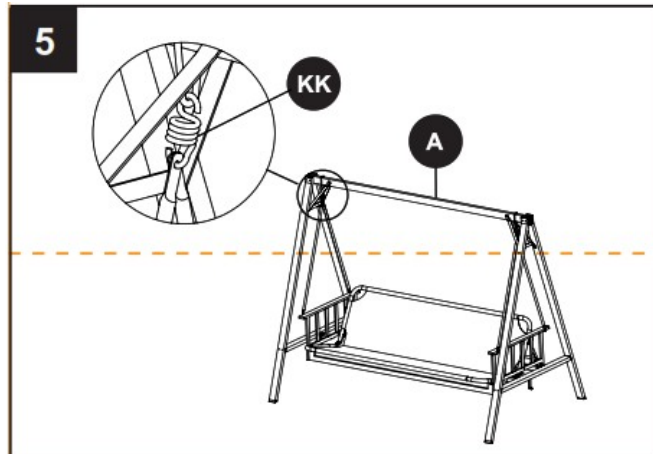 


Tighten KK.

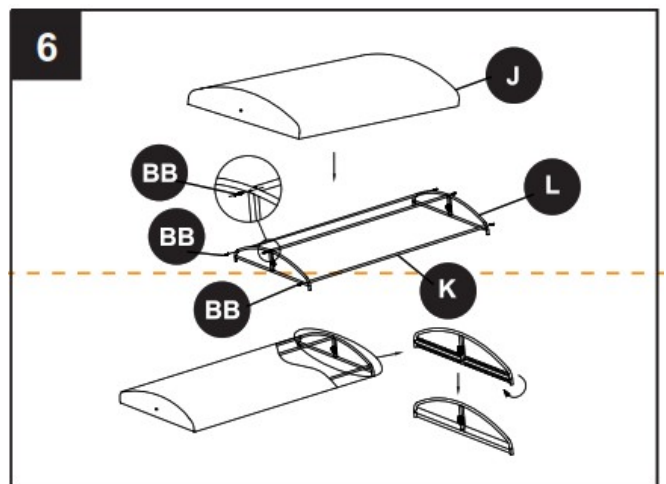 

Tighten BB with wrench, OO.

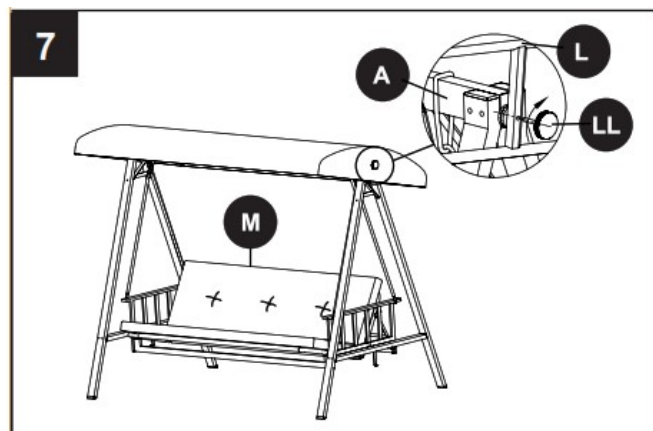 

Hand tighten LL.

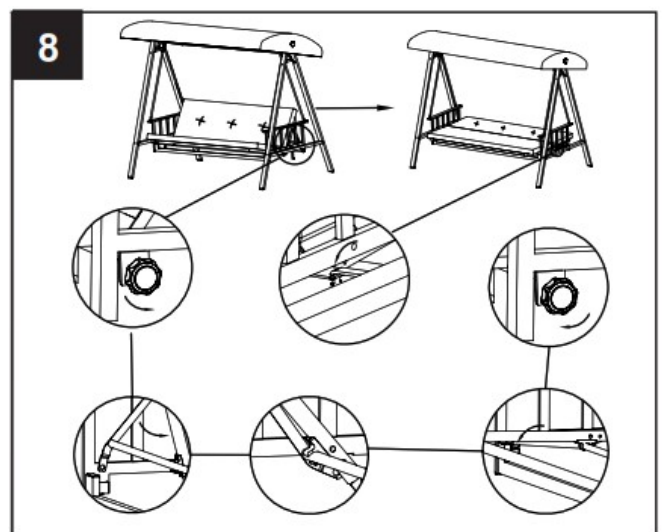 



[Style SELECTIONS GCS00395A Swing with Canopy](#) [pdf] Instruction Manual  
GCS00395A, Swing with Canopy, GCS00395A Swing with Canopy

## References

- [🌐 Lowe's Parts Plus](#)